

**LONGDEEM LD-T7045A**

# LONGDEEM 4 Slice Countertop Toaster LD-T7045A

## User Manual

### IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.

- Do not operate unattended.
- Do not toast pastries with runny fillings.

## PRODUCT OVERVIEW

The LONGDEEM 4 Slice Countertop Toaster is designed for efficient and versatile toasting. It features extra-wide slots to accommodate various bread types and multiple browning settings for customized results.



*Image: Front view of the LONGDEEM 4 Slice Countertop Toaster, light blue in color, with four slices of bread being toasted in its wide slots. The control panel with buttons and browning dials is visible.*

### Key Components:

- **Toasting Slots:** Four 1.6-inch extra-wide slots for various bread types.
- **High-Lift Levers:** Allows for easy retrieval of smaller items.
- **Browning Control Dials:** Two independent dials (1-6) for adjusting toast shade.
- **Function Buttons:** Bagel, Defrost, and Cancel buttons.
- **Removable Crumb Trays:** Two trays located at the bottom for easy cleaning.

## SETUP

---

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, heat-resistant, and dry surface, away from flammable materials. Ensure adequate ventilation around the toaster.
3. **First Use:** Before toasting food for the first time, operate the toaster without bread on the highest browning setting (6) in a well-ventilated area. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

## OPERATING INSTRUCTIONS

---

### Basic Toasting

1. Insert up to four slices of bread or other items into the toasting slots.
2. Select your desired browning level using the browning control dials (1-6). Each pair of slots has an independent dial.
3. Press down the high-lift lever until it locks into place. The toaster will begin toasting, and the indicator light will illuminate.
4. Once the selected browning cycle is complete, the toast will automatically pop up, and the lever will return to its original position.
5. If the toast is not sufficiently browned, you may lower the lever again for a short period, but monitor closely to prevent burning.
6. To stop the toasting cycle at any time, press the **CANCEL** button.

### Browning Settings Guide

The toaster offers 6 browning settings, allowing you to customize the crispiness of your toast. Refer to the image below for a visual guide.

# Precision Browning



Perfect Customization Of Any Piece Of Bread



1800-Watts



Rapid-Toast

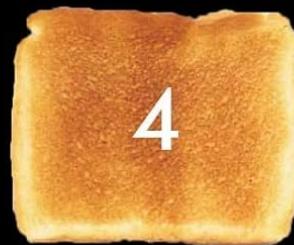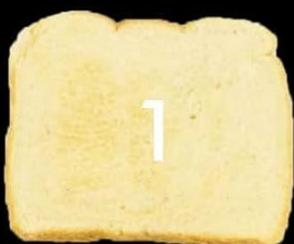

(For reference only, please refer to the actual product. )

*Image: A visual guide displaying six different shades of toast, numbered 1 through 6, from very light to very dark, illustrating the browning levels achievable with the toaster's settings.*

- **Setting 1-2:** Light toast, gently warmed.
- **Setting 3-4:** Medium toast, golden brown.
- **Setting 5-6:** Dark toast, crispy and well-browned.

## Special Functions

- **BAGEL Function:** Press this button after lowering the lever to toast only the cut side of bagels or English muffins. The indicator light will illuminate.
- **DEFROST Function:** Press this button after lowering the lever to toast frozen bread. This function adds extra time to the toasting cycle to thaw and then toast the bread. The indicator light will

illuminate.

- **CANCEL Function:** Press this button at any time to stop the toasting cycle and pop up the toast.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your toaster.

### Crumb Tray Cleaning

1. Ensure the toaster is unplugged and completely cool before cleaning.
2. Pull out the removable crumb trays located at the bottom of the toaster.
3. Discard accumulated crumbs.
4. Wipe the trays clean with a damp cloth. Dry thoroughly before reinserting.
5. Push the crumb trays back into place until they click securely.

### Exterior Cleaning

- Wipe the exterior of the toaster with a soft, damp cloth.
- Do not use abrasive cleaners or metal scouring pads, as they may scratch the surface.
- Ensure the toaster is completely dry before plugging it back in.

## TROUBLESHOOTING

---

If you encounter any issues with your toaster, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged into a working outlet. Check your circuit breaker.
Toast is too light/dark.	Browning setting is too low/high.	Adjust the browning control dial to a higher or lower setting as desired.
Bread is stuck in the slots.	Bread is too thick or irregularly shaped.	Unplug the toaster and carefully remove the bread using non-metallic tongs. Do not use metal utensils.
Smoke coming from toaster.	Crumbs accumulated; food stuck; first use residue.	Press CANCEL, unplug, and allow to cool. Clean crumb trays. Remove any stuck food. If it's the first use, this is normal.
Lever does not stay down.	Toaster not plugged in; browning dial not set.	Ensure the toaster is plugged in and the browning dial is set to a number (not between settings).

## SPECIFICATIONS

---

- **Brand:** LONGDEEM
- **Model:** LD-T7045A

- **Number of Slices:** 4
- **Slot Width:** 1.6 inches (Extra Wide)
- **Browning Settings:** 6
- **Special Features:** Bagel, Defrost, Cancel functions, Removable Crumb Tray, High-Lift Lever
- **Material:** Stainless Steel
- **Color:** Light Blue
- **Wattage:** 1800 watts
- **Voltage:** 120V
- **Product Dimensions:** 11.81"D x 11.42"W x 7.64"H
- **Item Weight:** 5.53 pounds
- **UPC:** 718430188624

## **WARRANTY AND SUPPORT**

---

This LONGDEEM toaster comes with a **24-month limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical support, or any questions regarding your product, please contact LONGDEEM customer service. Please have your model number (LD-T7045A) and proof of purchase ready when contacting support.

Contact information can typically be found on the LONGDEEM official website or through your retailer's customer service portal.