

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [KoDeer](#) /

› KoDeer X2 Pro 4K HD Retro Game Stick User Manual

KoDeer X2Pro

KoDeer X2 Pro 4K HD Retro Game Stick User Manual

Model: X2Pro

1. INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your KoDeer X2 Pro 4K HD Retro Game Stick. Please read this guide thoroughly before use to ensure proper functionality and to maximize your gaming experience. This device is designed to deliver a vast library of retro games directly to your television via an HDMI connection.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x KoDeer X2 Pro Game Stick
- 1 x TF Card (128GB, pre-installed with 25000+ games)
- 1 x USB Power Cable
- 1 x USB Wireless Receiver
- 1 x HDMI Extension Cable
- 2 x 2.4G Wireless Controllers
- 1 x User Manual (this document)



Figure 2.1: The complete KoDeer X2 Pro package contents, including the game stick, two wireless controllers, USB wireless receiver, HDMI extension cable, USB power cable, and the retail box.

3. SETUP INSTRUCTIONS

3.1. Connecting the Game Stick to your TV

1. Locate an available HDMI port on your television or monitor.
2. Insert the KoDeer X2 Pro Game Stick directly into the HDMI port. If space is limited, use the provided HDMI Extension Cable.
3. Connect the USB Power Cable to the Game Stick's power input port.
4. Plug the other end of the USB Power Cable into a USB power source (e.g., a TV's USB port, a USB wall adapter, or a power bank). Ensure the power source provides sufficient power (5V/1A recommended).

3.2. Connecting the Wireless Controllers

1. Insert the USB Wireless Receiver into an available USB port on the KoDeer X2 Pro Game Stick.

2. Ensure both 2.4G Wireless Controllers have fresh batteries installed (batteries not included).
3. Power on each controller by pressing the 'HOME' or 'START' button. The controller's indicator light should flash and then become solid once connected to the receiver.



Figure 3.2: The two 2.4G wireless controllers included with the KoDeer X2 Pro, along with the compact USB wireless receiver used to connect them to the game stick.

3.3. Powering On and Initial Boot

1. Turn on your television or monitor.
2. Using your TV remote, select the correct HDMI input source to which the Game Stick is connected.
3. The KoDeer X2 Pro will automatically power on and boot up, displaying the main game interface.

4. OPERATING INSTRUCTIONS

4.1. Navigating the Interface

Use the D-pad or left analog stick on your wireless controller to navigate through the game categories and game lists. The 'A' button typically confirms selections, while the 'B' button usually acts as a back or cancel function.

DETAIL DISPLAY

PERSONALIZED BUTTON

Integrated independent design with button pitch. Tight and non-crowded, over-control and non-offset



SENSITIVE TRIGGER

Technology focuses on Palm and finger support,. More in line with human body design, sensitive operation

Figure 4.1: A detailed view of the KoDeer X2 Pro wireless controller, highlighting the personalized button layout and sensitive trigger design for enhanced gameplay.

4.2. Playing Games

1. From the main menu, select a game category.
2. Browse the list of games and select your desired title using the 'A' button.
3. The game will load and begin. Follow on-screen prompts or game-specific instructions for gameplay.

ALL-REGION ROCKER

Configure a full-area rocker for the gun battle personality,. Handling performance is more convenient and faster



NON-SLIP DESIGN

Imitation snake pattern design increases friction. Conforms to human body design, easier operation

Figure 4.2: This image provides a close-up of the KoDeer X2 Pro wireless controller's all-region rocker (joystick) and the non-slip textured grip, designed for comfortable and precise control.

4.3. Saving and Loading Game Progress

Most retro games do not have in-game save features. The KoDeer X2 Pro may offer a system-level save state function. Typically, pressing a combination of buttons (e.g., 'SELECT' + 'START' or a dedicated 'MENU' button) will bring up an in-game menu where you can save or load your progress. Refer to the on-screen menu for specific options.

4.4. Exiting a Game

To exit a game and return to the main menu, press the designated 'MENU' button or a combination of buttons (e.g., 'SELECT' + 'START' simultaneously) on your controller. Confirm your choice if prompted.

5. MAINTENANCE

5.1. Cleaning

To clean the Game Stick and controllers, use a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the device. Ensure the device is powered off and disconnected from all power sources before cleaning.

5.2. Storage

Store the KoDeer X2 Pro in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.

When not in use for extended periods, remove batteries from the wireless controllers to prevent leakage.

6. TROUBLESHOOTING

6.1. No Power / No Display on TV

- **Check Power Connection:** Ensure the USB Power Cable is securely connected to both the Game Stick and a working power source.
- **Verify HDMI Connection:** Confirm the Game Stick is fully inserted into the TV's HDMI port. Try a different HDMI port or use the HDMI Extension Cable.
- **Select Correct Input:** Use your TV remote to cycle through HDMI input sources until the Game Stick's display appears.
- **Power Source:** Ensure the USB power source provides at least 5V/1A. Some TV USB ports may not provide enough power.

6.2. Controllers Not Responding

- **Check USB Receiver:** Ensure the USB Wireless Receiver is firmly plugged into the Game Stick's USB port.
- **Controller Batteries:** Replace the batteries in the wireless controllers with fresh ones.
- **Re-pair Controllers:** Power off and then power on the controllers. They should automatically attempt to re-pair with the receiver.
- **Interference:** Move the Game Stick and controllers away from other wireless devices that might cause interference.

6.3. Game Lag / Performance Issues

- **Power Supply:** Ensure the Game Stick is receiving stable and sufficient power. An unstable power supply can affect performance.
- **Overheating:** Ensure the Game Stick has adequate ventilation and is not covered, as overheating can lead to performance degradation.
- **TF Card Integrity:** Ensure the TF card is properly inserted and not damaged. Avoid removing the TF card while the device is powered on.

7. SPECIFICATIONS

- **Brand:** KoDeer
- **Model:** X2Pro
- **Hardware Interface:** HDMI
- **Memory Storage Capacity:** 128 GB (TF Card)
- **Form Factor:** Compact Game Stick
- **Product Dimensions:** 7.09 x 4.72 x 4.72 inches
- **Item Weight:** 1.1 pounds
- **Controllers:** 2 x 2.4G Wireless Controllers
- **Output:** 4K HD HDMI Output
- **Built-in Games:** 25000+

8. WARRANTY AND SUPPORT

For any issues or questions not covered in this manual, please contact KoDeer customer support. Information

regarding warranty coverage is typically provided at the point of purchase or on the official KoDeer website. Please retain your proof of purchase for warranty claims.

Contact: Refer to your purchase documentation or the KoDeer official website for customer service contact details.