



[Manuals.plus](#) /

› [Irontar](#) /

› Irontar Kitchen Pantry Cabinet CWG011ME Instruction Manual

## Irontar CWG011ME

# Irontar Kitchen Pantry Cabinet CWG011ME Instruction Manual

Model: CWG011ME

[Introduction](#)   [Safety Information](#)   [Package Contents](#)   [Setup & Assembly](#)   [Operating](#)  
[Instructions](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

---

Thank you for purchasing the Irontar Kitchen Pantry Cabinet, Model CWG011ME. This manual provides essential information for the safe assembly, operation, and maintenance of your new cabinet. Please read these instructions thoroughly before beginning assembly and retain them for future reference.



Figure 1: Fully assembled Irontar Kitchen Pantry Cabinet CWG011ME. This image shows the overall design with upper glass doors, a central open shelf, and lower rattan-decorated doors and drawers.

## 2. IMPORTANT SAFETY INFORMATION

---

Please observe the following safety precautions to prevent injury and damage to the product:

- Read all instructions carefully before assembly and use.
- Keep all packaging materials away from children.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all parts are present and undamaged before assembly. Do not proceed if any parts are missing or damaged.
- Do not overtighten screws during assembly, as this may damage the material.
- Always use the provided anti-tipping device to secure the cabinet to a wall. This is crucial for stability and safety, especially in households with children or pets.
- Do not exceed the maximum weight capacity of shelves or the countertop. The countertop can support a microwave,

coffee maker, and toaster.

- Ensure electrical appliances connected to the charging station are within the specified power limits.
- Keep liquids away from the charging station outlets.
- Periodically check all connections and fasteners to ensure they remain tight.

### 3. PACKAGE CONTENTS

---

Before starting assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x Irontar Kitchen Pantry Cabinet (Model CWG011ME)
- 1 x Assembly Instructions Manual (this document)
- 1 x Tools Bag (containing all necessary hardware and an Allen wrench)
- All individual cabinet panels, shelves, doors, and drawer components
- 1 x Anti-tipping device kit
- 1 x Charging station unit with 2 AC outlets

### 4. SETUP AND ASSEMBLY INSTRUCTIONS

---

Follow these step-by-step instructions carefully. It is recommended to have two people for assembly.

#### 4.1. Preparation

1. Clear a spacious area for assembly.
2. Lay out all components on a soft, clean surface (e.g., a blanket or cardboard) to prevent scratches.
3. Identify all parts by referring to the parts list in your separate assembly guide.

#### 4.2. Assembling the Base Cabinet

Begin by constructing the lower section of the cabinet, which includes the rattan-decorated doors and drawers.

1. Attach the side panels to the bottom panel using the provided cam locks and dowels.
2. Install the back panel into the grooves of the side and bottom panels.
3. Assemble the three drawers according to the separate drawer assembly instructions. Ensure the metal rails are correctly installed.
4. Attach the drawer slides to the cabinet frame and insert the assembled drawers.
5. Mount the lower rattan-decorated doors using the hinges. Adjust hinges for proper alignment.



Figure 2: Detailed view of the lower cabinet section, highlighting the microwave countertop area, smooth-gliding metal-rail drawers, the integrated charging station, and the decorative rattan door design.

### 4.3. Installing the Countertop and Charging Station

1. Place the main countertop panel onto the assembled base cabinet. Secure it with the designated fasteners.
2. Install the charging station unit into the pre-drilled opening on the countertop or back panel, as indicated in the

detailed assembly guide. Connect the power cord.

#### 4.4. Assembling the Upper Hutch Section

This section includes the open storage and glass-door cabinets.

1. Assemble the frame for the upper hutch, including the side panels and the top panel.
2. Insert the adjustable shelves into the desired positions using the shelf pins.
3. Attach the glass doors to the upper cabinet frame using the hinges. Ensure they open and close smoothly.
4. Carefully lift the assembled upper hutch section and place it onto the countertop of the base cabinet. Secure it using the provided connecting hardware.



Figure 3: An illustrative diagram detailing the various storage compartments and their intended uses, including top open storage, glass door cabinets, adjustable shelves, the large countertop, and three spacious drawers.

#### 4.5. Securing the Anti-Tipping Device

For safety, it is mandatory to secure the cabinet to a wall using the anti-tipping device.

1. Position the assembled cabinet in its final desired location.
2. Mark the wall where the anti-tipping bracket will be installed, ensuring it aligns with the top rear of the cabinet.
3. Drill pilot holes into the wall (use appropriate wall anchors for your wall type, if necessary).
4. Secure the bracket to the wall and the cabinet using the provided screws and straps.
5. Ensure the connection is firm and the cabinet is stable.



Figure 4: Illustration demonstrating the proper installation of the anti-tipping device, which secures the cabinet to the wall for enhanced stability and safety.

## 5. OPERATING INSTRUCTIONS

### 5.1. Storage Compartments

- **Upper Glass Door Cabinets:** Ideal for displaying decorative items, glassware, or frequently used pantry staples.
- **Open Shelf:** Suitable for a microwave, coffee maker, toaster, or other small appliances.

- **Adjustable Shelves:** The shelves within the lower cabinets can be adjusted to different heights to accommodate various item sizes. To adjust, remove the shelf pins, reposition the shelf to the desired height, and reinsert the pins.
- **Drawers:** Use the three spacious drawers for organizing cutlery, utensils, linens, or other kitchen essentials.

## 5.2. Charging Station

- The integrated charging station features 2 AC outlets.
- Plug the cabinet's power cord into a standard wall outlet.
- Connect your small kitchen appliances (e.g., microwave, coffee maker) or other electronic devices to the outlets.
- Ensure that the total power draw of connected devices does not exceed the charging station's maximum capacity. Refer to the charging station's label for specifications.

## 6. MAINTENANCE

---

Proper care will extend the life and appearance of your Irontar cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood material.
- **Hardware:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Retighten if necessary.
- **Glass Doors:** Clean glass with a standard glass cleaner and a soft cloth.
- **Rattan:** Gently dust the rattan panels with a soft brush or vacuum cleaner with a brush attachment. Avoid harsh scrubbing.

## 7. TROUBLESHOOTING

---

If you encounter issues with your cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Loose fasteners; uneven floor; anti-tipping device not installed or improperly secured.	Ensure all screws are tightened. Adjust furniture levelers if present. Install or properly secure the anti-tipping device to the wall.
Drawers do not slide smoothly.	Drawer slides misaligned; debris in tracks; overtightened screws.	Check alignment of drawer slides. Clean tracks of any dust or debris. Loosen screws slightly if they are overtightened.
Doors are misaligned or do not close properly.	Hinges are loose or improperly adjusted.	Adjust the screws on the hinges to align the doors. Refer to the hinge adjustment section in the detailed assembly guide if available.
Charging station not working.	Cabinet power cord unplugged; wall outlet not functioning; charging station switch off; overloaded circuit.	Ensure the cabinet's power cord is securely plugged into a working wall outlet. Check if the charging station has an on/off switch. Unplug some devices if the circuit is overloaded. Test the wall outlet with another appliance.

## 8. SPECIFICATIONS

Detailed product specifications for the Irontar Kitchen Pantry Cabinet CWG011ME:

- **Model:** CWG011ME
- **Color:** Natural
- **Material:** EPA-grade Particleboard, Glass
- **Product Dimensions (L x W x H):** 39.4" x 15.7" x 70.9" (100 x 40 x 180 cm)
- **Net Weight:** Approximately 103.6 lb (47 kg)
- **Gross Weight:** Approximately 110.2 lb
- **Weight Capacity (Countertop):** Up to 150 lbs (approximate)
- **Special Features:** Adjustable Shelves, Glass Doors, Integrated Charging Station (2 AC outlets), Anti-tipping Device



Figure 5: Detailed dimensional drawing of the Irontar Kitchen Pantry Cabinet, showing overall height, width, depth, and internal compartment measurements for planning and fit.

## 9. WARRANTY AND CUSTOMER SUPPORT

---

Irontar stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Irontar website.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact our customer support team:

- **Customer Support:** [Insert Customer Support Contact Information Here, e.g., email, phone number, website]
- Please have your model number (CWG011ME) and purchase date ready when contacting support.

