

KEMEI KM-2290, KM-2293, KM-1102

KEMEI Professional Cordless Hair Clipper, Trimmer, and Shaver Set User Manual

Models: KM-2290, KM-2293, KM-1102

1. INTRODUCTION

Thank you for choosing the KEMEI Professional Cordless Hair Clipper, Trimmer, and Shaver Set. This comprehensive kit provides versatile tools for various grooming needs, including hair cutting, trimming, and shaving. This manual contains important information regarding the safe operation, maintenance, and care of your devices. Please read it thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- Always unplug the device from the power source before cleaning or performing any maintenance.
- Keep the blade away from the face and eyes during use to prevent accidental injury.
- Do not ingest or inhale small parts. Ensure all components are securely attached before operation.
- Keep all devices and accessories out of reach of children.
- Do not immerse the main body of the devices in water. The blades of the clipper and trimmer can be rinsed directly after removal.
- Use only the provided USB charging cables and compatible power sources.
- Do not operate the devices if they are damaged or malfunctioning. Contact customer support for assistance.

3. PACKAGE CONTENTS

Your KEMEI grooming kit includes the following items:

- 1 x KEMEI KM-2290 Hair Clipper
- 1 x KEMEI KM-2293 Hair Trimmer
- 1 x KEMEI KM-1102 Electric Foil Shaver
- Multiple Guide Combs for Clipper (various lengths)
- Multiple Guide Combs for Trimmer (various lengths)

- 3 x USB Charging Cables (one for each device)
- 3 x Cleaning Brushes
- 1 x Hair Comb
- 1 x Hair Cutting Cape
- 1 x Storage Bag



Image 3.1: Overview of the KEMEI grooming kit, showing the clipper, trimmer, shaver, and all included accessories such as guide combs, charging cables, cleaning brushes, comb, cape, and storage bag.

4. PRODUCT FEATURES

Each device in your KEMEI set is designed with specific features for optimal performance:

- **Self-Sharpening Blades:** The clipper and trimmer feature precision blades that maintain sharpness over time, ensuring consistent cutting performance.
- **R-shaped Blade Design:** The blades are designed with an R-shaped edge for safety and to prevent skin irritation during use.
- **LCD Digital Display:** Both the clipper and trimmer are equipped with an LCD screen to show the remaining battery percentage, allowing you to monitor power levels easily.
- **High-Capacity Lithium-Ion Batteries:** Provides cordless operation for convenience and portability.
- **USB Charging:** All devices can be conveniently charged via USB, compatible with various power

sources like computers, car chargers, and power banks.

- **Powerful Motor:** The clipper and trimmer feature a robust motor for efficient hair cutting, operating at less than 55dB and designed to prevent hair pulling.
- **Fade Blade (Clipper):** Carbon steel blade designed for quick cuts and suitable for fade-style haircuts.
- **Double Foil Razor (Shaver):** Adapts to facial contours for a smooth, close shave, effective for stubble and fading.

R-shaped blade & Adjustable Length

The more you use it, the sharper it gets



Sharp
Blade



Safe



Save
Time

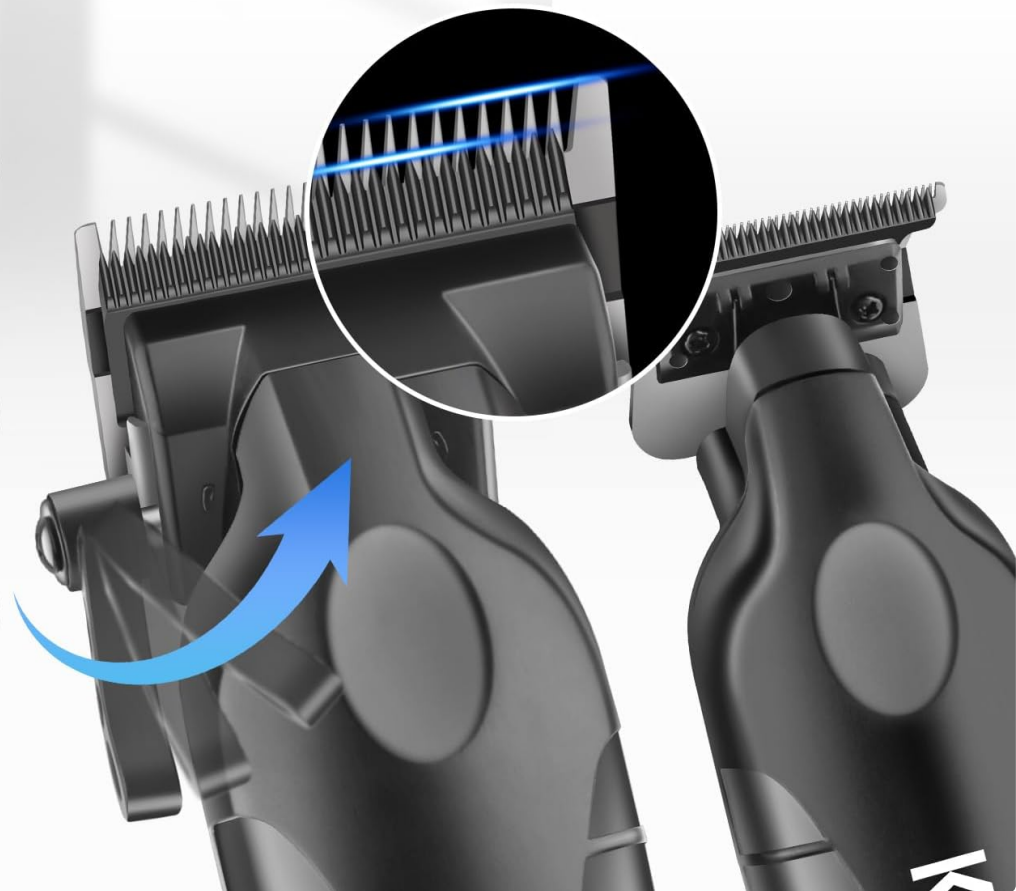


Image 4.1: Detail of the R-shaped blade design and adjustable length mechanism on the KEMEI clipper, highlighting safety and precision.

Digital Display

You don't have to worry about the sudden loss of power during use



Image 4.2: The digital display on the KEMEI clipper and trimmer, indicating the remaining battery percentage for convenient power monitoring.

Powerful Motor

Quick and efficient hair cutting



Surge of power



<55dB



Not Pulling Hair



Image 4.3: Visual representation of the powerful motor in KEMEI clippers, emphasizing its efficiency, quiet operation (less than 55dB), and design to prevent hair pulling.

5. SETUP AND INITIAL CHARGING

Before using your KEMEI grooming devices for the first time, it is recommended to fully charge them.

1. **Unpack:** Carefully remove all items from the packaging.
2. **Inspect:** Check each device and accessory for any signs of damage.
3. **Charge:** Connect each device to its respective USB charging cable. Plug the USB end into a compatible power source (e.g., computer, USB adapter, power bank).
4. **Monitor Charging:** The LCD display on the clipper and trimmer will show charging progress. The shaver may have an indicator light. Refer to the 'Charging Instructions' section for specific charging times.



USB Charging

Charging and plugging
convenient and quick

Image 5.1: The KEMEI hair clipper and trimmer connected via USB for charging, illustrating their respective charging and working times.

USB Charging Interface

45 minutes of use on a single charge



Image 5.2: The KEMEI electric shaver connected to its USB charging cable, demonstrating compatibility with various USB power sources like computers, car chargers, USB adapters, and power banks.

6. OPERATING INSTRUCTIONS

Familiarize yourself with each device before use.

6.1. KEMEI KM-2290 Hair Clipper

1. **Select Guide Comb:** Choose the desired guide comb for your preferred hair length. Align the comb with the clipper blade and snap it into place securely.
2. **Adjust Taper Lever:** The side taper lever allows for fine adjustment of cutting length without changing guide combs. Push the lever up for the shortest cut and pull it down for a longer cut.
3. **Power On:** Press the power button to turn on the clipper. The LCD display will show the battery level.
4. **Begin Cutting:** Hold the clipper with the blade flat against the hair. Move the clipper against the direction of hair growth for an even cut.
5. **Power Off:** Press the power button to turn off the clipper after use.

6.2. KEMEI KM-2293 Hair Trimmer

1. **Select Guide Comb:** For specific trimming lengths, attach the appropriate guide comb. For close trimming or detailing, use without a guide comb.
2. **Power On:** Press the power button to activate the trimmer. The LCD display will show the battery level.
3. **Begin Trimming:** Use the trimmer for outlining, detailing, or precise beard and mustache shaping. Hold the blade at a slight angle to the skin for best results.
4. **Power Off:** Press the power button to turn off the trimmer after use.

6.3. KEMEI KM-1102 Electric Foil Shaver

1. **Power On:** Slide the power switch to the 'ON' position.
2. **Begin Shaving:** Gently press the shaver head against your skin. Move the shaver in short, circular motions or straight strokes against the direction of hair growth for a close shave.
3. **Power Off:** Slide the power switch to the 'OFF' position after use.



Image 6.1: A detailed breakdown of the KEMEI clipper and trimmer, highlighting features such as wear-resistant cutterheads, sharp teeth, teeth distance adjusting lever, ON/OFF switch, digital display, and USB charging port.

7. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life and performance of your devices.

1. **Power Off and Unplug:** Always ensure the device is turned off and unplugged from the charger before cleaning.
2. **Clean Blades (Clipper & Trimmer):** After each use, remove any attached guide combs. Use the provided cleaning brush to brush away loose hairs from the blades. The blades can be rinsed directly under running water without disassembly. Ensure they are completely dry before reattaching or storing.
3. **Clean Shaver Head (Shaver):** Open the shaver head and use the cleaning brush to remove hair clippings. The foil and cutter block can be rinsed under water. Allow to air dry completely.
4. **Oil Blades:** Periodically apply a small drop of lubricating oil (not included, but standard clipper oil is recommended) to the blades of the clipper and trimmer. Turn the device on for a few seconds to distribute the oil, then wipe off any excess. This helps maintain blade sharpness and smooth operation.
5. **Clean Body:** Wipe the body of each device with a soft, damp cloth. Do not use abrasive cleaners or solvents.
6. **Storage:** Store the devices and accessories in the provided storage bag in a cool, dry place.



Image 7.1: A close-up view of the KEMEI clipper and trimmer blades, illustrating their sharp, safe, and efficient design for effective grooming.

8. CHARGING INSTRUCTIONS

Each device has specific charging requirements:

- **KEMEI KM-2290 Hair Clipper:** Approximately 3.5 hours for a full charge, providing up to 350 minutes of working time.
- **KEMEI KM-2293 Hair Trimmer:** Approximately 3 hours for a full charge, providing up to 180 minutes of working time.
- **KEMEI KM-1102 Electric Foil Shaver:** Approximately 8 hours for a full charge, providing up to 45 minutes of working time.

The LCD display on the clipper and trimmer will indicate charging status and battery level. For the shaver,

refer to its indicator light (if present).

USB Charging

Charging and plugging convenient and quick



Computer



Plug



Car Charger



Mobile Power



Image 8.1: An illustration of the KEMEI grooming set highlighting USB charging convenience and specifying the individual charging and working times for the clipper, trimmer, and shaver.

9. TROUBLESHOOTING

If you encounter issues with your KEMEI grooming set, refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Check the charging cable and adapter for proper connection.
- **Poor cutting performance:** Clean the blades thoroughly to remove any trapped hair. Apply lubricating oil to the blades. Ensure guide combs are correctly attached.
- **Excessive noise or vibration:** Clean and oil the blades. If the issue persists, discontinue use and contact customer support.
- **Shaver not providing a close shave:** Ensure the shaver head is clean and free of debris. Replace the foil and cutter block if they are worn (replacement parts sold separately).

For issues not listed here, please contact KEMEI customer support.

10. SPECIFICATIONS

Feature	Detail
Brand	KEMEI
Model Names	KM-2290 (Clipper), KM-2293 (Trimmer), KM-1102 (Shaver)
Battery Type	Lithium Polymer (3 included)
Clipper Charging Time	3.5 Hours
Clipper Working Time	Up to 350 Minutes

Feature	Detail
Trimmer Charging Time	3 Hours
Trimmer Working Time	Up to 180 Minutes
Shaver Charging Time	8 Hours
Shaver Working Time	Up to 45 Minutes
Charging Interface	USB
Package Dimensions	11.85 x 7.99 x 3.46 inches
Package Weight	2.87 Pounds

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. KEMEI is committed to providing high-quality products and service.

12. LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is intended for personal grooming and hair care purposes only.