

Handheld Beverage Mixer 4000RPM

Handheld Electric Beverage Mixer User Manual

Model: Handheld Beverage Mixer 4000RPM

1. INTRODUCTION

Thank you for purchasing the Handheld Electric Beverage Mixer. This compact and powerful device is designed to effortlessly mix and froth your favorite drinks, including milk, matcha, hot chocolate, and more. Its innovative design ensures easy cleaning and hygienic operation, making it a perfect companion for home or travel.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Keep this manual for future reference.

- Do not immerse the motor unit (handle) in water or any other liquid. Only the whisk attachment is washable.
- Keep out of reach of children. This appliance is not a toy.
- Ensure hands are dry before handling the mixer or inserting/removing batteries.
- Do not operate the mixer if it has been damaged in any way.
- Use only the specified battery type (2 x AA batteries, not included).
- Remove batteries if the appliance will not be used for an extended period.
- Avoid contact with moving parts during operation.

3. PACKAGE CONTENTS

Please check the box for the following items:

- 1 x Handheld Electric Beverage Mixer (Main Unit with Whisk Attachment)





Image: The Handheld Electric Beverage Mixer shown in use, frothing a green beverage in a clear glass. A pastry is visible in the foreground.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover at the bottom of the mixer handle.
2. Gently slide or pull off the cover.
3. Insert 2 x AA batteries (not included) into the compartment, ensuring the correct polarity (+/-) as indicated inside.
4. Replace the battery compartment cover until it clicks securely into place.





Image: A clear, standalone view of the Handheld Electric Beverage Mixer, highlighting its sleek black handle and white whisk attachment.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Ensure batteries are correctly installed.
2. Dip the whisk attachment into the liquid you wish to mix or froth. Ensure the whisk head is fully submerged but avoid submerging the handle.
3. Press and hold the power button located on the handle to start the mixer. The mixer operates at 4000RPM for efficient blending.
4. Move the mixer gently up and down or in circular motions to achieve desired consistency.
5. Release the power button to stop the mixer.



Image: The Handheld Electric Beverage Mixer actively frothing a light-colored liquid in a clear glass bowl, demonstrating its mixing capability.



Image: A hand holding the Handheld Electric Beverage Mixer upright on a kitchen counter, with two glasses of beverages in the background, illustrating its compact size and ease of handling.

6. CLEANING AND MAINTENANCE

The innovative split design and built-in UV light feature make cleaning and maintaining your mixer simple and hygienic.

6.1 Cleaning

1. After each use, immediately rinse the whisk attachment under running water.
2. For thorough cleaning, the whisk attachment can be easily detached from the main unit. Gently pull the whisk straight out from the handle.
3. Wash the whisk attachment with warm, soapy water. Rinse thoroughly and allow to air dry completely before reattaching.
4. Wipe the main unit (handle) with a damp cloth. Do not submerge the handle in water.
5. The built-in UV light helps ensure hygiene. While not a substitute for physical cleaning, it contributes to a healthier mixing environment.

6.2 Storage

Store the mixer in a dry place, away from direct sunlight and extreme temperatures. Ensure the whisk attachment is clean and dry before storage.



Image: The Handheld Electric Beverage Mixer positioned next to a stainless steel frothing pitcher and a glass containing a green beverage, illustrating its use in a kitchen setting.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity.
Poor frothing/mixing performance.	Low battery power; whisk attachment is dirty or damaged.	Replace batteries. Clean the whisk attachment thoroughly. If damaged, consider replacing the unit.

Problem	Possible Cause	Solution
Whisk attachment is loose.	Whisk not fully inserted.	Ensure the whisk attachment is pushed firmly into the motor unit until it is secure.

8. SPECIFICATIONS

- **Brand:** Generic
- **Color:** Black and White
- **Dimensions:** Approximately 26 cm (10.23 in) Length, 3.2 cm (1.25 in) Width
- **Material:** ABS Plastic
- **Motor Speed:** 4000 RPM
- **Power Source:** 2 x AA Batteries (not included)
- **Key Features:** Detachable whisk for easy cleaning, Built-in UV light for hygiene, One-button operation

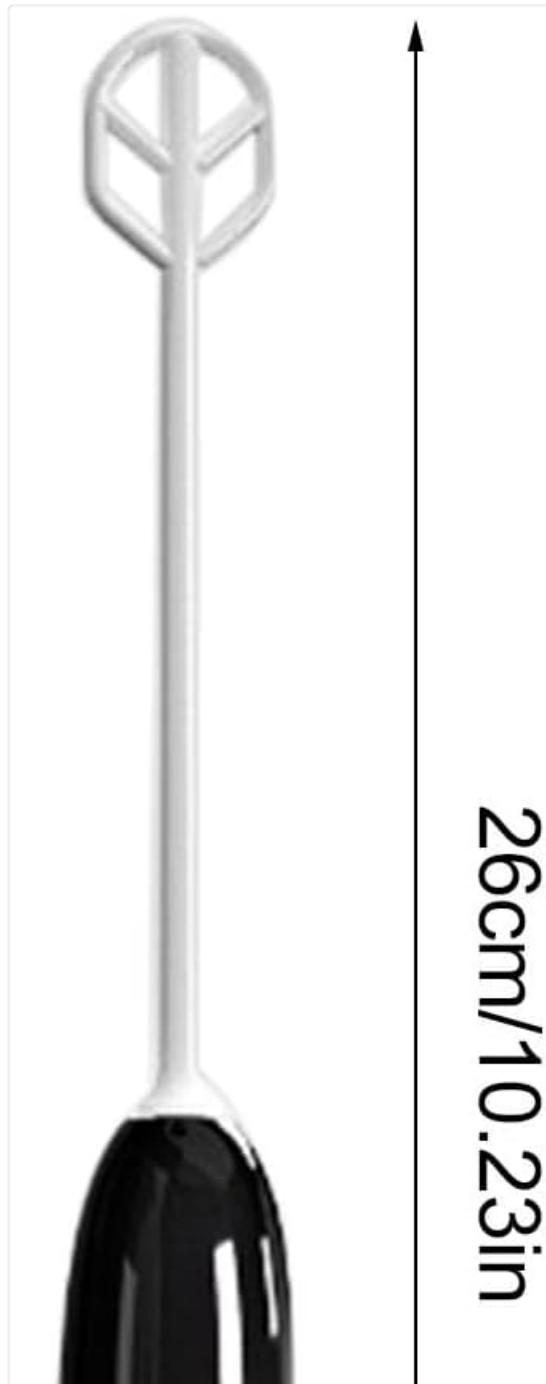




Image: A diagram showing the dimensions of the Handheld Electric Beverage Mixer, indicating a length of 26 cm (10.23 inches) and a width of 3.2 cm (1.25 inches).

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact your retailer or the manufacturer's customer service department. Contact information may be available on the product packaging or the retailer's website.