

Cosori 810123672974

Cosori Premium II Chef Edition 6.2L Air Fryer Instruction Manual

Model: 810123672974

1. INTRODUCTION

Thank you for choosing the Cosori Premium II Chef Edition 6.2L Air Fryer. This appliance is designed to revolutionize your cooking experience, offering a healthier and more convenient way to prepare your favorite dishes with significantly less oil. Its generous 6.2-liter capacity and compact design make it ideal for various culinary tasks, from quick snacks to family meals. Please read this manual thoroughly before first use and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep children and pets away from the air fryer during operation. The exterior surfaces can become hot.
- Do not block any ventilation openings.
- Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories not recommended by the manufacturer, as this may cause injuries.
- Exercise extreme caution when removing the basket or crisper plate, as hot steam and air may escape.
- Never operate the air fryer without the basket and crisper plate properly installed.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Cosori Air Fryer:

- Main Unit with Control Panel
- Removable Basket
- Crisper Plate (removable from the basket)



Figure 3.1: Front view of the Cosori Premium II Chef Edition Air Fryer, showcasing its sleek black design and digital control panel.



Figure 3.2: The removable basket and crisper plate, designed for easy cleaning and optimal air circulation during cooking.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials from the air fryer and its accessories.
2. **Initial Cleaning:** Wash the basket and crisper plate with hot, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the air fryer with a damp cloth.
3. **Placement:** Place the air fryer on a flat, stable, heat-resistant surface. Ensure there is at least 15 cm (6 inches) of space behind and above the appliance for proper air circulation.
4. **Test Run:** It is recommended to run the air fryer empty for about 10 minutes at 200°C (390°F) to eliminate any manufacturing odors. A slight smell may be present during this initial use, which is normal.

5. OPERATING INSTRUCTIONS

Your Cosori Air Fryer features an intuitive digital control panel for easy operation.

5.1 Powering On/Off

- Plug the power cord into a grounded electrical outlet.
- Press the Power button () to turn the air fryer on or off.

5.2 Basic Cooking

1. Place the crisper plate inside the basket.
2. Add your food to the basket. Do not overfill.
3. Slide the basket back into the air fryer.
4. Select a preset function or manually set the temperature and time using the arrow buttons.
5. Press the Start/Pause button (▶/||) to begin cooking.
6. Some recipes may require shaking the basket halfway through cooking. The air fryer may beep to remind you.

7. Once cooking is complete, carefully remove the basket and transfer food to a serving dish.



Figure 5.1: The air fryer basket pulled out, showing a whole chicken being cooked, demonstrating the generous capacity.

6. COOKING FUNCTIONS

The Cosori Premium II Chef Edition offers versatile cooking options:

- **Air Fry:** Ideal for achieving crispy textures with minimal oil, perfect for fries, chicken wings, and more.
- **Roast:** For roasting meats and vegetables to tender perfection.
- **Bake:** Suitable for baking cakes, muffins, and other desserts.
- **Grill:** Provides a grilling effect for meats and vegetables.
- **Reheat:** Quickly warms up leftovers while maintaining texture.
- **Dry:** For dehydrating fruits, vegetables, or making jerky.

The air fryer's design allows for efficient cooking, ensuring even heat distribution for consistent results across various dishes.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your air fryer.

7.1 Cleaning the Basket and Crisper Plate

- The basket and crisper plate are dishwasher safe.
- For hand washing, use hot, soapy water and a non-abrasive sponge.
- For stubborn food residue, soak the basket and crisper plate in hot, soapy water for 20 minutes before cleaning.

7.2 Cleaning the Interior and Exterior

- Unplug the air fryer and allow it to cool completely before cleaning.
- Wipe the exterior with a damp cloth. Do not use abrasive cleaners.
- Clean the interior with a damp cloth and a mild, non-abrasive detergent.
- Never immerse the main unit in water or any other liquid.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Basket is overcrowded; food is stacked.	Cook food in smaller batches. Shake the basket halfway through cooking.
White smoke coming from the air fryer.	Excess oil/grease from food dripping into the bottom of the basket.	Clean the basket and crisper plate thoroughly after each use. Remove excess oil from food before air frying.

9. SPECIFICATIONS

Brand: Cosori

Model Number: 810123672974

Color: Black

Capacity: 6.2 Liters

Power: 2000 Watts

Material: Metal

Special Features: Large capacity, Versatility in food preparation

10. WARRANTY AND SUPPORT

Your Cosori Premium II Chef Edition Air Fryer comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For any questions, concerns, or issues regarding your product, please contact Cosori Customer Support. Refer to the contact information provided in your warranty card or visit the official Cosori website for assistance.

