

ECONTROLLY AA59-00602A

ECONTROLLY AA59-00602A Replacement Remote Control User Manual

For Samsung LCD LED HDTV Smart TVs

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your ECONTROLLY AA59-00602A replacement remote control. This remote is designed to function as a direct replacement for various Samsung LCD LED HDTV Smart TV models, offering immediate usability without complex programming.

2. COMPATIBILITY

The ECONTROLLY AA59-00602A remote control is compatible with a wide range of Samsung TV models. Some of the compatible models include, but are not limited to:

- BN59-01175N, BN59-01199F, AA59-00741A, AA59-00786A, AA59-00602A, BN59-01247A, AA59-00743A, BN59-01175B, AA59-00818A, AA59-00603A, BN59-01199G, AA59-00622A, AA59-00496A, AA59-01180A, BN59-01268D, AA59-00666A, AA59-01289A, AA59-00600A
- UE50F6170SS, PS51F4900AW, PS51F4900AK, PS43F4900AK, UE55F6170SS, PS43F4900AW, UE40F6170SS, UE50F6100, UE55F6100, UE46F6100, UE40F6100, UE60F6100, UE32F6100, PS51F4500, PS43F4900, PS51F4900

If your specific TV model is not listed, please refer to the original remote control model number for verification. This remote is designed to replace the original remote without requiring any programming.

3. SETUP

3.1 Battery Installation

To begin using your remote control, you must install two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.

3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Figure 1: Back of the remote control with the battery compartment open, illustrating where to insert AAA batteries.

3.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Simply

point the remote control towards your Samsung TV and begin operating it.

4. OPERATING INSTRUCTIONS

The ECONTROLLY AA59-00602A remote control features standard buttons for navigating your Samsung TV. Below is a general overview of common button functions.





Figure 2: Front view of the remote control, displaying all operational buttons.

- **Power (Red Button):** Turns the TV on or off.
- **SOURCE:** Changes the input source (e.g., HDMI 1, HDMI 2, AV).
- **Number Buttons (0-9):** Directly select channels.
- **TTX/MIX:** Teletext function.
- **PRE-CH:** Returns to the previous channel.
- **Volume (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH LIST:** Displays the channel list.
- **Channel (Up/Down):** Changes channels sequentially.
- **CONTENT:** Accesses content features.
- **MENU:** Opens the TV's main menu.
- **GUIDE:** Displays the electronic program guide.
- **TOOLS:** Accesses quick settings or tools menu.
- **INFO:** Displays information about the current program or input.
- **Directional Pad (Up/Down/Left/Right) & Enter:** Navigates menus and confirms selections.
- **RETURN:** Goes back to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV model and current application.
- **E-MANUAL:** Accesses the electronic manual (if supported by TV).
- **P.SIZE:** Adjusts picture size/aspect ratio.
- **AD/SUBT.:** Audio Description / Subtitle control.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote control in water.

5.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

6. TROUBLESHOOTING

- **Remote control is not working:**
 - Ensure batteries are correctly installed with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Some buttons are not responding:**
 - This remote is a replacement and may not support all advanced functions of certain Smart TV models if those functions require specific proprietary buttons not present on this universal replacement.
 - Clean the remote control as described in Section 5.2.

7. SPECIFICATIONS

Feature	Specification
Model Number	AA59-00602A
Brand	ECONTROLLY
Product Dimensions	5 x 2 x 0.6 inches
Item Weight	1 ounces
Color	Black
Power Source	2 x AAA Batteries (not included)
Special Feature	No Programming Required
Compatible Devices	Television

8. SUPPORT

If you encounter any issues or have questions regarding your ECONTROLLY AA59-00602A replacement remote control that are not addressed in this manual, please contact our customer support. We are committed to ensuring your satisfaction and will provide assistance promptly.

All of our products undergo testing before delivery to ensure proper functionality.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question