

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Tefal](#) /
- › [Tefal Express Essential Steam Generator Iron User Manual](#)

Tefal SV6132G0

Tefal Express Essential Steam Generator Iron User Manual

Model: SV6132G0

1. PRODUCT OVERVIEW

The Tefal Express Essential Steam Generator Iron is designed for efficient and convenient garment care. It combines powerful steam output with user-friendly features to simplify your ironing tasks.



Image 1.1: Front view of the Tefal Express Essential Steam Generator Iron.

Key Features:

- **High Efficiency:** Equipped with a 5-bar pump and 110 g/min continuous steam output for fast results.
- **Time-Saving:** Rapid 2-minute heat-up time and ability to cut ironing time by up to 30% compared to traditional steam irons.
- **Non-Stop Ironing:** Features a generous 1.4 L removable water tank for extended ironing sessions and easy refills.
- **Smart Features:** Includes an Eco setting for reduced energy consumption and vertical steaming capability for hanging garments.
- **Effortless Glide:** Xpress Glide soleplate ensures smooth movement over various fabrics.
- **Extra-Compact Design:** Smaller footprint than an A4 sheet of paper for convenient storage.



Image 1.2: Product dimensions showing 36.2 cm length, 17.9 cm width, and 25.6 cm height.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always plug the iron into a grounded electrical outlet.
- Do not leave the iron unattended while it is connected to the power supply or while it is hot.
- Keep the iron and its cord out of reach of children and pets when it is switched on or cooling down.
- Never immerse the iron, power cord, or plug in water or other liquids.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Use the iron only for its intended purpose, which is ironing garments.
- Always ensure the water tank is filled with appropriate water (tap water or demineralized water as per

instructions) before use.

- Exercise caution when handling hot surfaces and steam. Steam can cause burns.

3. SETUP

3.1 Unpacking and Initial Preparation

1. Carefully remove the iron from its packaging.
2. Remove any protective films or stickers from the soleplate and body of the iron.
3. Ensure all components are present and undamaged.

3.2 Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Remove the removable 1.4 L water tank from the base unit.
3. Fill the water tank with tap water. For areas with hard water, it is recommended to use a mixture of 50% tap water and 50% demineralized water, or solely demineralized water. Do not use scented water or water from tumble dryers.
4. Replace the water tank securely into the base unit.



Image 3.1: Front view showing the removable water tank.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Heating Up

1. Place the steam generator iron on a stable, heat-resistant surface.
2. Plug the power cord into a suitable electrical outlet.
3. Press the On/Off button. The indicator light will illuminate, and the iron will begin to heat up.
4. Wait approximately 2 minutes for the iron to reach its operating temperature. The indicator light will stop flashing or change color when ready.

4.2 Ironing with Steam

1. Select the appropriate temperature setting on the iron's dial according to the fabric type.
2. Press the steam trigger located under the handle to release continuous steam.
3. For stubborn creases, press the steam boost button (if available) for an extra burst of steam.

4. Move the iron smoothly over the fabric.



Image 4.1: Side view showing the temperature dial and steam trigger.

4.3 Vertical Steaming

The iron can be used for vertical steaming of hanging garments, curtains, or delicate fabrics.

1. Hang the garment on a hanger.
2. Hold the iron vertically, a few centimeters away from the fabric.
3. Press the steam trigger to release steam and move the iron up and down the garment.



Image 4.2: Illustration demonstrating the time-saving capability of the iron compared to traditional methods.




Image 4.3: Diagram showing key components: Lock system, Selector Mode, Removable 1.7L water tank, ECO mode, and Anti-calc button.

5. MAINTENANCE

5.1 Descaling (Anti-Calc System)

The Tefal Express Essential features an anti-calc system to ensure long-lasting steam performance. Regular descaling is crucial.

1. When the 'Calc' indicator light illuminates, it's time to descale.
2. Ensure the iron is cool and unplugged.
3. Place the base unit over a sink or basin.
4. Press and hold the anti-calc button (refer to Image 4.3 for location) to release the scale collector.
5. Rinse the scale collector under running water to remove any accumulated scale.
6. Reinsert the scale collector firmly until it clicks into place.

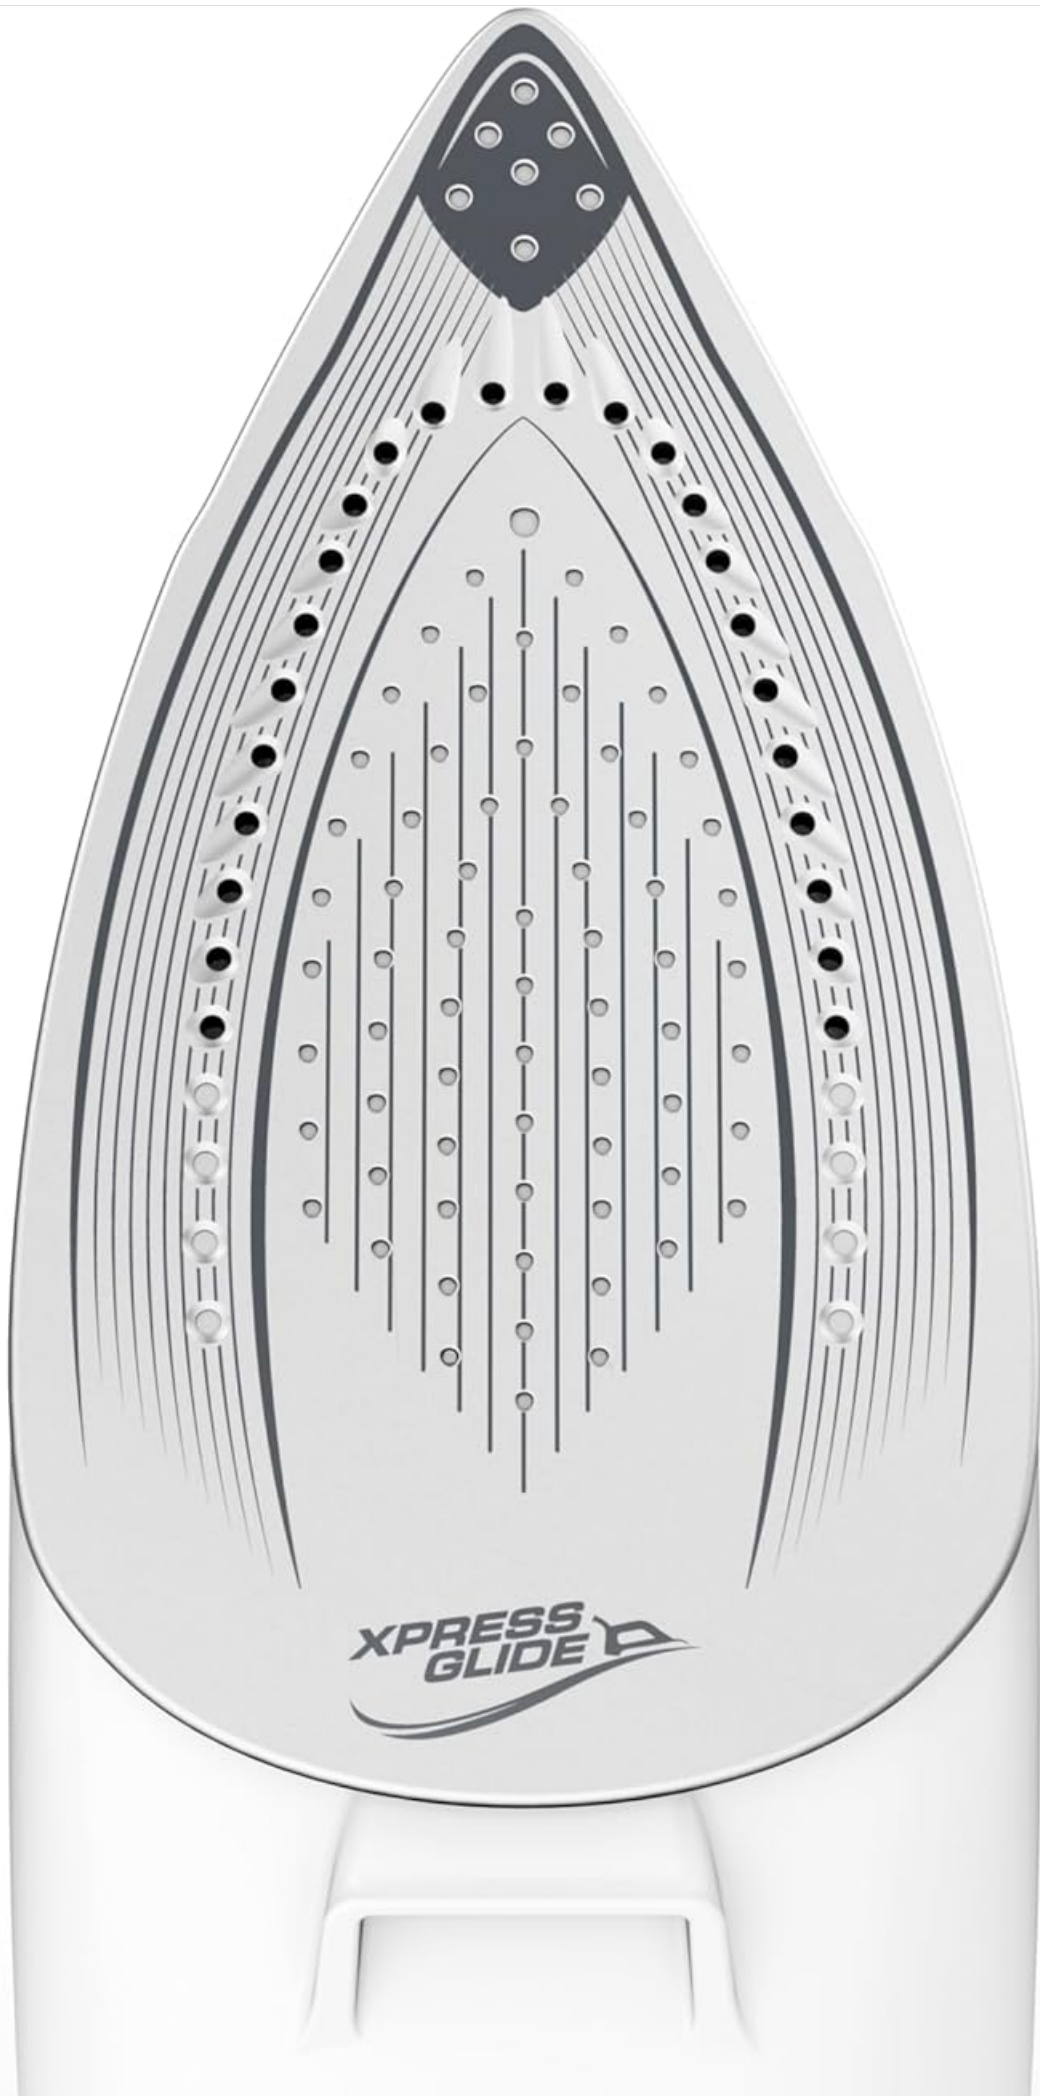

**XPRESS
GLIDE**



Image 5.1: Back view of the iron, showing the anti-calc button and power cord connection.

5.2 Cleaning the Soleplate

To maintain optimal gliding performance, clean the Xpress Glide soleplate regularly.

- Ensure the iron is cool and unplugged.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner if necessary.
- Do not use abrasive pads, metal scourers, or harsh chemicals, as these can damage the soleplate.



Tefal Guarantees



**SOLEPLATE
XPRESS GLIDE**



**CALC CLEAR
TECHNOLOGY**

5.9
bars

PUMP PRESSURE

120
g/min

STEAM FLOW

340
g/min

STEAM BOOST



**REMOVABLE WATER
TANK**

Image 5.2: Close-up view of the Xpress Glide soleplate.

5.3 Storage

- After use, unplug the iron and allow it to cool completely.

- Empty any remaining water from the tank.
- Store the iron in a safe, dry place, away from direct sunlight and moisture.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam output	Water tank empty Iron not hot enough Steam trigger not pressed	Refill water tank Wait for iron to heat up (indicator light) Press steam trigger firmly
Water leaking from soleplate	Temperature too low for steam Overfilling water tank	Increase temperature setting Do not exceed MAX fill line
Iron not heating up	Not plugged in Power outlet issue On/Off button not pressed	Check power connection Try a different outlet Press On/Off button
Calc indicator light on	Scale build-up	Perform descaling procedure (Section 5.1)

7. SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	SV6132G0
Colour	Blue
Product Dimensions	36.2 x 17.9 x 0.1 cm
Item Weight	3.89 kg
Voltage	240 Volts
Pump Pressure	5.9 Bars
Continuous Steam Output	120 g/min
Steam Boost	340 g/min
Water Tank Capacity	1.4 L (removable)
Soleplate Type	Xpress Glide

Feature	Detail
Special Features	Auto Shutoff, Anti-Calc System

8. WARRANTY AND SUPPORT

Tefal is committed to the quality and durability of its products. This product is designed for easy repairability, with spare parts available for 15 years at 6200 repair centers worldwide.

For further assistance, troubleshooting not covered in this manual, or warranty claims, please contact Tefal customer support through their official website or the retailer where the product was purchased.