



Manuals.plus /

› PPLEE /

› PPLEE CR1027K Kids Digital Vibrating Alarm Clock User Manual

PPLEE CR1027K

PPLEE CR1027K Kids Digital Vibrating Alarm Clock User Manual

Model: CR1027K | Brand: PPLEE

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your PPLEE CR1027K Kids Digital Vibrating Alarm Clock. Designed for heavy sleepers, children, and travelers, this compact and rechargeable alarm clock offers multiple wake-up modes and a removable silicone case for durability and fun.

Fun Little Emoji

Playful Facial Expressions

 
Bringing extra fun to you and your little ones

...

Under normal conditions



looking around

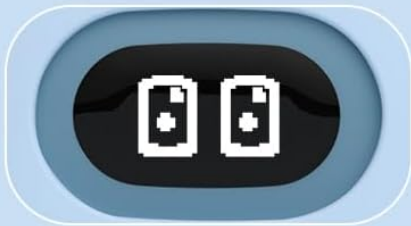

blinking



sleeping

The alarm is ringing
or vibrating

stun !



The little devil silicone shell
can be removed or put on
by yourself !



Front view of the PPLEE CR1027K Kids Digital Vibrating Alarm Clock.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x PPLEE CR1027K Digital Vibrating Alarm Clock
- 1 x Protective Silicone Case (Little Devil Shape)
- 1 x USB-C Charging Cable
- 1 x User Manual



Image showing the alarm clock, silicone case, USB-C cable, and user manual included in the package.

3. PRODUCT OVERVIEW

Familiarize yourself with the alarm clock's components and controls.

3.1 Front Display and Silicone Case

The front display shows time, date, and various emoji expressions indicating the clock's status. The silicone case is removable for cleaning or preference.



The alarm clock's display changes expressions based on its state (e.g., looking around, blinking, sleeping, alarm ringing).

3.2 Back Controls and Ports

The back of the alarm clock features various buttons and switches for setting time, alarms, and modes,

along with the USB-C charging port.



3000mAh Rechargeable Battery

160 Days Usage On Single Charge

Type-c Charging

Can Be Used Wirelessly

Rear view of the alarm clock, highlighting the control panel and USB-C port.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the alarm clock using the provided USB-C cable. Connect the cable to the USB-C port on the side of the clock and to a standard USB power adapter (not included) or computer USB port. A full charge can last up to 160 days on the lowest alarm setting.

3 Vibration Level 3 Wake-up Modes

Personalize your wake-up experience for ultimate



🔊 — Single Buzzer

 


🔊 — Buzzer
🌀 — Shaker



🌀 — Single Shaker

Low Medium High



3 Vibration Level

The alarm clock being charged via its USB-C port.

4.2 Setting Time and Date

Refer to the detailed instructions in the included user manual for specific steps on setting the current time, date (year/month/day), and choosing between 12H/24H/DST formats. These settings are typically adjusted using buttons on the back of the device.

5. OPERATING INSTRUCTIONS

5.1 Setting Alarms (Dual Alarms)

The clock supports two independent alarms. Use the dedicated alarm setting buttons/switches on the back to set Alarm 1 and Alarm 2. You can configure each alarm for different schedules:

- **MON-FRI:** Weekday alarm
- **SAT-SUN:** Weekend alarm
- **MON-SUN:** Everyday alarm



Illustration of the dual alarm clock functionality with different working modes.


5.2 Wake-up Modes and Vibration Levels

Choose from three wake-up modes and three vibration intensity levels to suit your preference:

- **Wake-up Modes:** Single Buzzer, Single Shaker, Buzzer + Shaker
- **Vibration Levels:** High, Medium, Low

Dual Alarm 3 Working Modes

Reduce the hassle of repeated settings

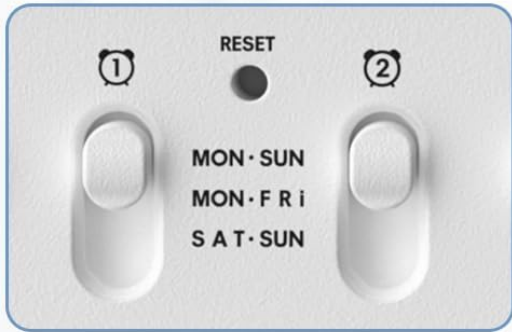

Month / Day / Year Display Function

Visual representation of the three wake-up modes and adjustable vibration levels.

5.3 Adjustable Volume

The alarm volume can be adjusted across 5 levels, ranging from 56dB to 105dB, to ensure effective waking for various users, including heavy sleepers.

Package List

1*Vibrating Alarm Clock
(3.35 inch × 3.35 inch × 1.06 inch)

1*Protective Case in The Shape of A Small Devil
(4.29 inch × 1.50 inch × 4.13 inch)

1*USB-C Cable

1*User Manual

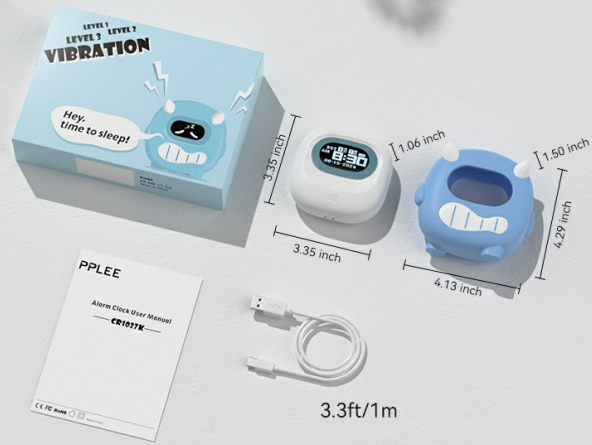 


Diagram illustrating the five adjustable volume levels of the alarm clock.

5.4 Snooze Function

When the alarm sounds, press the top Snooze button to activate a 9-minute snooze period. The alarm will sound again after 9 minutes.

9 Minutes Snooze

Get an extra 9 minutes sleep by pressing the top Snooze button



A user activating the snooze function on the alarm clock.

5.5 Child Lock

To prevent accidental changes to settings, activate the child lock feature. Refer to the specific instructions in your manual for engaging and disengaging the child lock.



Close-up of the child lock switch, designed to prevent unintended adjustments.

6. MAINTENANCE

6.1 Cleaning

To clean the alarm clock, gently wipe the surface with a soft, dry cloth. For the silicone case, it can be removed and washed with mild soap and water, then air-dried completely before reattaching. Do not use abrasive cleaners or immerse the main unit in water.

6.2 Battery Care

The alarm clock features a built-in rechargeable battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in constant use.
- Store the device in a cool, dry place when not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not turning on/display blank	Low battery or power off.	Charge the alarm clock using the USB-C cable. Ensure the power switch is in the ON position.
Alarm not sounding/vibrating	Alarm not set, disabled, or volume/vibration level too low.	Verify alarm settings (time, days, ON/OFF status). Check wake-up mode and adjust volume/vibration intensity.
Incorrect time/date display	Time/date not set correctly or DST setting incorrect.	Re-enter time and date settings. Adjust 12H/24H/DST format as needed.
Buttons unresponsive	Child lock is active.	Deactivate the child lock switch on the back of the device.

8. SPECIFICATIONS

Feature	Detail
Model Number	CR1027K
Brand	PPLLEE
Display Type	LED
Power Source	Battery Powered (3000mAh Rechargeable Lithium Ion)
Battery Life	Up to 160 days on lowest alarm setting (single charge)
Product Dimensions	3.35"W x 3.35"H x 1"D (approx.)
Weight	0.3lb / 135g
Alarm Modes	Dual Alarms (MON-FRI, SAT-SUN, MON-SUN)
Wake-up Modes	Single Buzzer, Single Shaker, Buzzer + Shaker
Vibration Levels	3 (High, Medium, Low)
Volume Levels	5 (56dB to 105dB)
Snooze Duration	9 minutes
Material	Silicone (case), Plastic (frame)
Special Features	Removable Silicone Shell, Emoji Display, Child Lock, Date/Month/Year Display, 12H/24H/DST Format

9. WARRANTY

This PPLEE product is covered by a limited warranty. Please refer to the warranty information provided with your purchase or contact customer support for details regarding coverage and duration. Keep your proof of purchase for warranty claims.

10. SUPPORT

For further assistance, technical support, or inquiries regarding your PPLEE CR1027K Kids Digital Vibrating Alarm Clock, please contact PPLEE customer service through the retailer's platform or visit the official PPLEE website for contact information.

Online Resources:

- For product updates and FAQs, visit the PPLEE Store on Amazon.