

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ChunHee](#) /

› [ChunHee Smart Dog Door Bell Potty Training Manual CB09 1-1](#)

ChunHee CB09 1-1

ChunHee Smart Dog Door Bell Potty Training Manual

MODEL: CB09 1-1

Product Overview

The ChunHee Smart Dog Door Bell is designed to facilitate effective potty training for dogs by providing a clear communication method. This system includes a touch-sensitive transmitter for your dog and a plug-in receiver for your home, offering customizable alerts and durable design.

- Touch-Sensitive Design:** Features a large, sensitive touch area, making it easy for dogs of all sizes to activate with a gentle touch, ideal for puppy potty training.
- Eliminates Unwanted Behaviors:** The sensitive triggering design helps reduce scratching, whining, barking, or noisy ringtones at the door.
- Customizable Alerts:** The receiver offers five adjustable volume levels (0 to 110 dB) and 32 selectable ringtones or voice options, including commands like "outside," "potty," "come back," "play," and "hungry." A flashing indicator light provides visual alerts.
- User-Friendly and Durable:** Equipped with an easy-to-replace battery designed to last over 3 years. The transmitter has an IP55 weatherproof rating, suitable for outdoor placement in temperatures ranging from 14°F to 140°F.
- Certified Quality:** CE, FCC, and RoHS approved, ensuring product safety and compliance. Includes detailed instructions and training suggestions to assist in quick dog training.

Setup and Installation

Components

- Receiver:** Plugs into a standard wall socket indoors.
- Transmitter:** The dog button, activated by touch.
- Mounting Accessories:** Includes reusable Velcro and 3M double-sided tape for flexible placement.
- Screwdriver:** Provided for battery replacement.

Mounting the Transmitter

The transmitter can be mounted on a wall, door, or placed on the floor using the provided adhesive options. Ensure the mounting surface is clean and dry before application.

Plug and Play



32 chimes



LED indicator



Memory function



0-110dB Volume

NEW
version
ChunHee

Easy to install

using the adhesive patch

Note: Do not cover the screws



The transmitter can be easily installed using the provided adhesive patch. Ensure screws are not covered if using the adhesive.

Sensitive to Touch

NEW
version
ChunHee



The contact area between the dog's paw and the transmitter should be roughly the size of a finger joint. The triggering area of the transmitter is the **yellow region**

The transmitter features a large, sensitive touch area (yellow region) suitable for dogs of all sizes.



IP 55 WEATHERPROOF


NEW
version
ChunHee



3 Years
Battery Life



-4°F -140°F

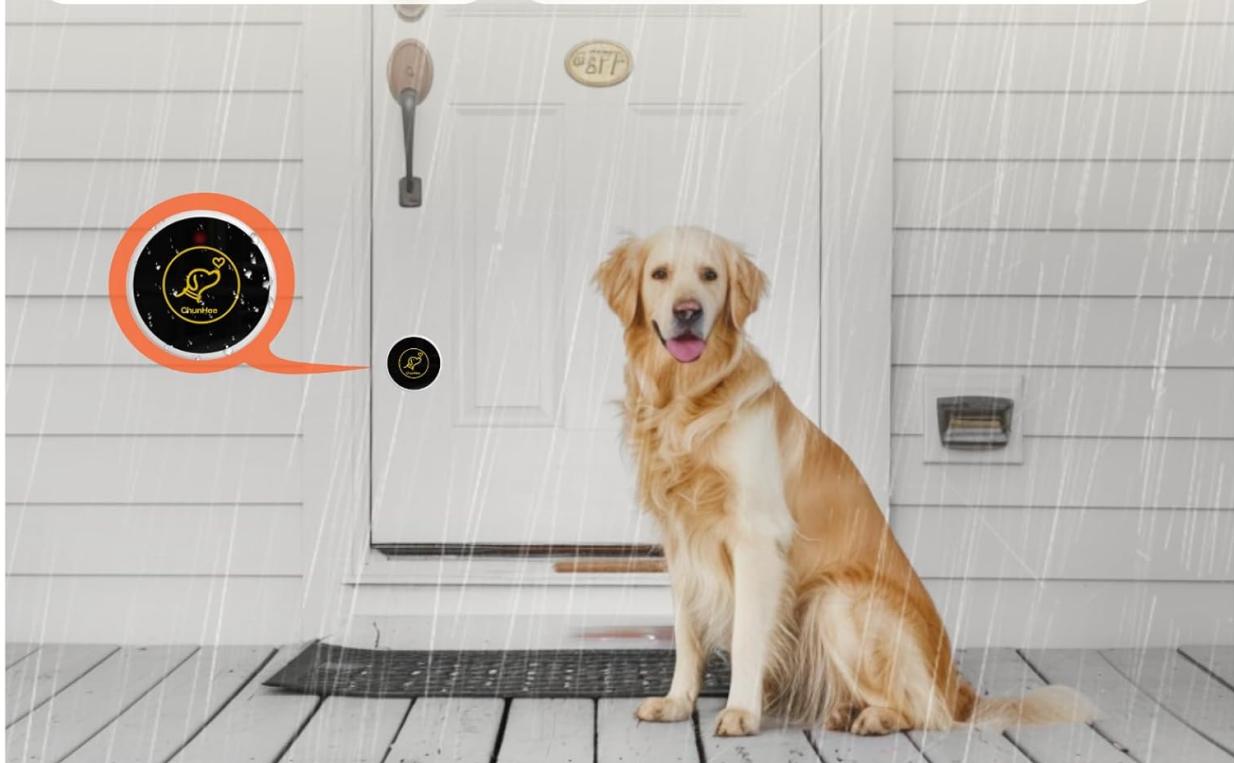

The transmitter is IP55 weatherproof, allowing placement outdoors within a temperature range of 14°F to 140°F.

Connecting the Receiver

Plug the receiver into any standard indoor wall socket. It will light up, indicating it's ready for use.

Product Matching (Pairing)

To pair the transmitter with the receiver:

1. Plug the receiver into a socket.
2. Press and hold the "Volume" button on the receiver until it makes a "Ding" sound and the indicator light flashes.
3. Within 8 seconds, touch the transmitter. The receiver will make a "Ding" sound and its indicator will flash, confirming successful pairing.

This video demonstrates the pairing process between the transmitter and receiver (segment from 0:34 to 0:54).

Operating Instructions

Training Your Dog

The ChunHee Dog Door Bell is designed to simplify potty training. Use positive reinforcement to teach your dog to touch the transmitter when they need to go outside or come back in.

Includes Training Guidance

NEW
version
ChunHee



ChunHee
Dog Door bells

[CB09 Series](#) User Manual

Help dogs learn to use
the dog doorbell faster

The manual includes training suggestions to help your dog learn to use the doorbell quickly.

32 SOUNDS + VOICE COMMANDS - NO OTHER BELL HAS THIS!

Clear commands dogs understand!

NEW
version
ChunHee



Smart Voice Options



Just Boring Chime (Single Ringtone)



Dogs can easily activate the touch-sensitive button with their paw or nose to signal their needs.



No More Door Scratching No More Barking

The doorbell provides a clear communication method, reducing unwanted behaviors like scratching or barking at the door.

How the System Works

When your dog touches the transmitter, the receiver will play the selected ringtone or voice command, alerting you to their request.

This video illustrates how the dog uses the transmitter to alert the owner, and the receiver plays a customizable voice command.

This video highlights how the ChunHee Potty Bells can change your life by improving communication with your pet.

Customization

Adjusting Volume

The receiver's volume can be adjusted to suit your household's needs, ensuring you hear the alerts without them being overly disruptive.

This video demonstrates how to adjust the volume of the receiver. The receiver offers five volume levels from 0 to 110 dB.

The bell is loud enough to hear from anywhere in the house



The receiver has multiple volume settings, ensuring it can be heard throughout your home.

Changing Ringtones and Voice Options

Select from 32 different ringtones or voice commands to personalize your dog's alerts. This allows for specific commands like "outside" or "hungry" to be associated with the bell.

1. Plug the receiver into a socket.
2. Press the "Forward" or "Backward" button on the receiver to select your favorite melody.
3. Press and hold the "Volume" button on the receiver for 3 seconds until it makes a "Ding" sound and the receiver indicator flashes.
4. Touch the transmitter quickly within 8 seconds. The receiver will make a "Ding" sound and the indicator flashes, confirming the new ringtone is set.

This video demonstrates how to change the ringtone or voice option on the receiver (segment from 0:55 to 1:27).

Maintenance

Battery Replacement

The transmitter's battery is designed for long-lasting use (over 3 years). When replacement is needed, follow these steps:

1. Remove the transmitter from the wall or mounting surface.
2. Unscrew the back cover of the transmitter using the provided screwdriver.
3. Unscrew the internal screws to remove the panel.
4. Push the old battery out with a screwdriver.
5. Install a new CR button cell into the battery slot, paying attention to the positive and negative terminals.
6. Reassemble the transmitter by screwing the panel and back cover back into place.

This video guides you through replacing the battery in the transmitter using the provided screwdriver (segment from 1:28 to 2:02).

Troubleshooting

No Sound from Receiver

If the receiver lights up but does not produce any sound, the volume may be set to mute or a very low level.

- **Solution:** Press the volume button on the side of the receiver to increase the volume. Refer to the "Adjusting Volume" section or video for detailed instructions.

This video demonstrates how to adjust the volume, which can resolve issues with no sound from the receiver.

Resetting the Device (Factory Reset)

If you experience persistent issues or wish to clear all paired transmitters, you can perform a factory reset.

1. Press and hold the "Backward" button on the receiver for 5 seconds until it makes a "Ding" sound and the receiver indicator flashes.
2. All previously paired transmitters will be cleared, and the ringtone will return to the default "Ding Dong."
3. After clearing, the receiver will automatically enter pairing mode. Press any transmitter to auto-pair it.

This video demonstrates how to perform a factory reset, which clears all paired transmitters and restores the default ringtone (segment from 2:03 to the end).

Inconsistent Signaling

If the doorbell triggers without your dog pressing it, or if signals are missed, check the following:

- Ensure the transmitter is securely mounted and not exposed to excessive vibrations or direct sunlight that could cause false triggers.
- Verify that there are no strong electromagnetic interferences near the transmitter or receiver.
- Check the battery level of the transmitter; a low battery can affect signal reliability.

Product Specifications

Feature	Specification
Item Weight	6.3 ounces (0.18 Kilograms)
Manufacturer	ChunHee
Item Model Number	CB09 1-1
Item Package Dimensions	3.74 x 3.54 x 2.91 inches
Battery Life (Transmitter)	More than 3 years
Weatherproof Rating	IP55 (14°F-140°F)

Volume Levels	5 (0 to 110 dB)
Ringtones/Voice Options	32
Certifications	CE, FCC, RoHS

Warranty and Support

Warranty Information

The ChunHee Dog Door Bell comes with a 1 Year Manufacturer Warranty, covering defects in materials and workmanship under normal use.

Customer Support

For further assistance, troubleshooting, or inquiries regarding your ChunHee Smart Dog Door Bell, please refer to the official ChunHee website or contact their customer support channels. Detailed contact information can typically be found in the product packaging or on the manufacturer's website.