

[Manuals.plus](#) /

› [Ainael](#) /

› Ainael Galaxy Projector SKE-TKQ01 Instruction Manual

Ainael SKE-TKQ01

Ainael Galaxy Projector SKE-TKQ01 Instruction Manual

Model: SKE-TKQ01

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Ainael Galaxy Projector SKE-TKQ01. Please read this manual thoroughly before operating the device and retain it for future reference.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Meteor and Galaxy Projector
- 1 x Glass Disc (Moon and Galaxy)
- 1 x USB-C Charging Cable
- 1 x User Manual
- 1 x Packaging Box



Image: The Ainael Galaxy Projector, a white spherical device on a stand, next to a glass disc, a USB-C cable, and the user manual. This image illustrates the complete package contents.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Power Connection:** Connect the provided USB-C charging cable to the projector's power input port. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) with a 5V/2A output.
3. **Disc Insertion:**
 - Locate the disc slot on the side of the projector.
 - Gently slide the glass disc into the slot until it is securely in place. Ensure the disc is inserted correctly for optimal projection.



Image: A six-panel diagram illustrating the process of inserting a disc into the projector and operating its buttons.

4. **Placement:** Place the projector on a stable, flat surface. The 180° rotation feature allows adjustment of the projection angle and distance to cover an area of over 20 square meters.

OPERATING INSTRUCTIONS

The projector features one-touch buttons for easy control:

FUNCTION COMPARISON					
	Ainael	A	B	C	
	MODEL	SKE-TKQ01	POLT01	BL-DQY02 (Gen2 Pro Version)	BL-DQY02 (Gen1 Basic Version)
	POWER	10W	3W	10W	5W
	TIMER FUNCTION	60min/120min/4h	15min/30min/60min/2h	60min/120min/4h	60min/120min/4h
	ROTATION	Slow & Fast	Just Slow	Slow & Fast	Slow & Fast
	METEOR EFFECT	YES	NO	NO	NO
	LIGHT STRIP	YES	NO	NO	NO
	POWER INPUT	DC 5V 2A	Battery/DC 5V 1A	DC 5V 2A	DC 5V 2A
	PROJECTION AREA	12.5-23.75 m²	9-12.08 m²	12.5-23.75 m²	9-18.56 m²

Image: A detailed view of the projector's top panel, showing the lens and control buttons for power, timer, rotation speed, ambient light, and meteor effect.

- **Power On/Off (Main Switch):** Press the power button to turn the projector on or off. This button also activates/deactivates the meteor effect.
- **Timer Function:** Press the timer button to set an automatic shut-off time. Options include 1 hour (1H) and 2 hours (2H). The projector also has a 4-hour auto shut-off feature.



Image: A child sleeping peacefully in bed, with a large moon projected on the wall. Icons for 60-minute, 120-minute, and 4-hour auto shut-off timers are displayed.

- **Rotation Speed:** Adjust the rotation speed of the projection (slow 13 min/cycle, fast 6 min/cycle) using the dedicated button. This creates a dynamic and immersive experience.
- **Ambient Light:** The projector features an innovative light strip with 4 gradient lighting modes and warm/cool color switching. Use the ambient light button to cycle through the 6 available modes.
- **Meteor Effect:** The built-in dynamic meteor function offers 2 realistic shooting star effects. Activate and adjust these effects using the main switch or a dedicated meteor adjustment button.
- **Focus Adjustment:** Rotate the focus ring around the lens to achieve a crisp and clear projection.

Your browser does not support the video tag.

Video: An official product video demonstrating the Ainael Meteor and Galaxy Projector's various projection discs and dynamic effects, including nebulae, planets, and stars.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the projector. For the lens and glass disc, use a microfiber

cloth specifically designed for optics to avoid scratches. Do not use liquid cleaners or abrasive materials.

- **Storage:** When not in use, store the projector in a cool, dry place away from direct sunlight and extreme temperatures. Keep the glass disc in its protective casing to prevent dust and damage.
- **Handling:** Handle the projector and glass discs with care to prevent drops or impacts, which could damage internal components or the delicate discs.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Projector does not turn on.	No power or loose connection.	Ensure the USB-C cable is securely connected to both the projector and a working power source (5V/2A adapter). Try a different power adapter or outlet.
Projection is blurry.	Focus not adjusted or dirty lens/disc.	Rotate the focus ring on the projector until the image is clear. Clean the projector lens and glass disc with a microfiber cloth.
No image projected.	Disc not inserted or inserted incorrectly.	Ensure the glass disc is fully and correctly inserted into the disc slot.
Meteor effect not working.	Meteor effect is off.	Press the main switch button to activate the meteor effect.
Rotation not working.	Rotation feature is off.	Press the rotation speed button to activate rotation. Cycle through speeds if necessary.

SPECIFICATIONS

Feature	Detail
Brand	Ainael
Model Number	SKE-TKQ01
Color	White
Shape	Round
Material	Acrylonitrile Butadiene Styrene (ABS)
Light Source Type	LED
Power Source	Corded Electric
Voltage	5 volts
Wattage	10 watts
Amperage	2 A
Light Output Maximum	1000 lumens
Mounting Type	Table Mount

Feature	Detail
Item Weight	510 g
Item Dimensions (L x W x H)	5.34"L x 5.34"W x 5.04"H
Projection Area	Over 20
Noise Level	<30dB

WARRANTY AND SUPPORT

The Ainael Galaxy Projector SKE-TKQ01 comes with a **12-month manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. For warranty claims or technical support, please contact Ainael customer service through the retailer where the product was purchased or visit the official Ainael store on Amazon: [Ainael Store](#). Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DBHKJN7K>

More documents and user manuals: <https://manuals.plus/>