

ZEBRONICS Zeb - Roxor Pro

ZEBRONICS ROXOR PRO Party Bluetooth Speaker User Manual

Model: Zeb - Roxor Pro

INTRODUCTION

Thank you for purchasing the ZEBRONICS ROXOR PRO Party Bluetooth Speaker. This manual provides essential information for the safe and correct operation of your device. Please read it thoroughly before use and retain it for future reference. The ZEB-Roxor Pro is designed to deliver a powerful audio experience with its 120W output, Dolby Audio support, and versatile connectivity options, making it ideal for parties and home entertainment.

120W RMS Output

Dual 16.51cm full range drivers

 Dolby
AUDIO



Image: The ZEB-Roxor Pro speaker highlighting its 120W RMS output and Dolby Audio capabilities, set against a dynamic background.

WHAT'S IN THE BOX

Please check the package contents carefully upon unboxing:

- DJ Speaker - 1 unit
- Wireless Mic - 1 unit
- Remote Control - 1 unit
- Power Cord - 1 unit
- Input cable - 1 unit



Image: The ZEBRONICS ROXOR PRO speaker shown with its accompanying wireless microphone and remote control, illustrating the complete package contents.

PRODUCT OVERVIEW

Control Panel

The top panel of the speaker features intuitive controls for power, playback, and lighting effects.

RGB LED Lights



BUILT-IN RECHARGEABLE BATTERY

UP TO
6h*
BACKUP
*at 50% Volume (LED OFF)



Remote Control



LED Indicator

Image: A detailed view of the speaker's top control panel, showing the power button, playback controls, LED indicator, and RGB lighting effects.

Rear Panel Connectivity

The rear panel provides various input ports for versatile connectivity options.

- MIC/GT Input:** For connecting a microphone or guitar.
- MIC/GT VOL:** Adjusts the volume for the microphone/guitar input.
- USB Port:** For playing audio from USB drives.
- AUX IN:** For connecting external audio devices via a 3.5mm audio cable.
- TV (ARC):** For connecting to a TV's HDMI ARC port for enhanced audio.
- RESET:** Button to reset the speaker.



BT v5.4 | Guitar/Mic Input X 1 USB | AUX IN | TV(ARC)

Image: A close-up of the speaker's rear panel, clearly showing the various input ports including MIC/GT, USB, AUX IN, and TV(ARC).

SETUP

Initial Charging

Before first use, fully charge the speaker. Connect the provided power cord to the speaker's power input and then to a suitable power outlet. The LED indicator on the top panel will show charging status. A full charge provides up to 6 hours of backup at 50% volume with LED off.

Connecting the Wireless Microphone

The ZEB-Roxor Pro comes with a wireless microphone for karaoke and public speaking. The microphone is pre-paired with the speaker. Simply turn on the microphone and ensure the speaker is in an active mode. Adjust the microphone volume using the MIC/GT VOL knob on the rear panel.

Rechargeable Wireless Mic

Karaoke Function



Image: Individuals using the ZEBRONICS ROXOR PRO speaker for karaoke, demonstrating the use of the rechargeable wireless microphone.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the power button on the top panel to turn the speaker on or off.

Bluetooth Mode (BT v5.4)

1. Turn on the speaker. It will automatically enter Bluetooth mode or you can select it using the Mode button.
2. Enable Bluetooth on your smartphone or tablet.
3. Search for "ZEB-Roxor Pro" in the list of available devices and pair.
4. Once connected, you can play audio wirelessly from your device.

USB Mode

Insert a USB drive into the USB port on the rear panel. The speaker will automatically switch to USB mode and begin playing compatible audio files.

AUX Mode

Connect an external audio source (e.g., MP3 player, laptop) to the AUX IN port using the provided input cable. Select AUX mode on the speaker.

TV (ARC) Mode

Connect an HDMI cable from your TV's HDMI ARC port to the TV (ARC) port on the speaker. Select TV (ARC) mode on the speaker to output TV audio through the speaker.

Karaoke Function

With the wireless microphone connected, you can use the speaker for karaoke. Adjust the microphone volume and echo effects using the controls on the speaker or remote control.

TWS (True Wireless Stereo) Function

The TWS function allows you to connect two ZEB-Roxor Pro speakers wirelessly for a stereo audio experience.

1. Ensure both speakers are powered on and in Bluetooth mode.
2. On one speaker, press and hold the TWS button (if available) or the dedicated pairing button until you hear a prompt.
3. The two speakers will automatically connect to each other.
4. Connect your Bluetooth device to the primary speaker.



TWS Function

Image: Two ZEB-Roxor Pro speakers positioned to illustrate the True Wireless Stereo (TWS) function, providing a wider soundstage.

RGB LED Lights

The speaker features dynamic RGB LED lights. Use the dedicated light control button on the top panel or remote to cycle through different lighting modes or turn them off.

Volume and Audio Controls

Adjust the master volume using the main volume knob on the top panel or the volume buttons on the remote control. The remote also provides controls for bass, treble, and echo effects for the microphone.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use liquid cleaners or abrasive materials.
- Storage:** When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

- **Water Exposure:** This product is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Battery drained; Power cord not connected properly.	Charge the speaker; Ensure power cord is securely connected.
No Sound	Volume too low; Incorrect input mode selected; Device not paired (Bluetooth).	Increase volume; Select correct input mode (BT, USB, AUX, ARC); Re-pair Bluetooth device.
Bluetooth Disconnection	Device out of range; Interference.	Move device closer to speaker; Avoid obstacles; Turn off other Bluetooth devices.
Microphone Not Working	Microphone off; MIC/GT VOL too low; Microphone battery low.	Turn on microphone; Increase MIC/GT VOL; Replace microphone batteries.
TWS Pairing Failure	Speakers too far apart; One speaker already paired.	Ensure speakers are close; Disconnect any existing Bluetooth connections before TWS pairing.

SPECIFICATIONS

Feature	Detail
Model Name	Zeb - Roxor Pro
Output Power	120 Watts
Speaker Type	Outdoor / Party Speaker
Driver Size	Dual 16.51 cm (6.5") Full Range Drivers
Connectivity	Bluetooth v5.4, USB, AUX IN, TV (ARC), MIC/GT Input
Battery Life	Up to 6 hours (at 50% volume, LED off)
Special Features	Dolby Audio, Karaoke Function, TWS Function, RGB LED Lights, Wireless Mic, Remote Control
Product Dimensions (D x W x H)	30D x 29W x 60H Centimeters
Item Weight	9 kg
Power Source	Battery Powered / AC



Image: A visual representation of the ZEBRONICS ROXOR PRO speaker's dimensions, indicating its height, width, and depth.

WARRANTY INFORMATION

The ZEBRONICS ROXOR PRO Party Bluetooth Speaker comes with a **Limited Warranty**. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details. For warranty claims, please contact Zebronics customer support.

Note: The warranty type is listed as "Limited" in the product specifications.

CUSTOMER SUPPORT

For any queries, technical assistance, or service requests regarding your ZEBRONICS ROXOR PRO speaker, please contact Zebronics customer support.

Manufacturer: Zebronics India Private Limited

Address: No.13/7, Smith Road, Royapettah, Chennai - 600 002

Visit the official [ZEBRONICS Store on Amazon](#) for more information and product updates.



[Zebronics Roxor Pro DJ Speaker User Manual - Features, Operation, Specifications](#)

Comprehensive user manual for the Zebronics Roxor Pro DJ Speaker. Discover its 120W power, Dolby Audio, karaoke features, Bluetooth connectivity, and detailed operation instructions.

lang: score:30 filesize: 13.96 M page_count: 23 document date: 2024-08-10