



Manuals.plus /

- › Tineco /
- › Tineco Floor ONE S7 Steam & A30S Cordless Vacuum User Manual

Tineco FLOOR ONE S7 & A30S

Tineco Floor ONE S7 Steam & A30S Cordless Vacuum User Manual

Model: FLOOR ONE S7 & A30S

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your Tineco Floor ONE S7 Steam Cordless Wet Dry Vacuum and Tineco A30S Cordless Stick Vacuum Cleaner. Please read this manual thoroughly before first use and keep it for future reference.



The Tineco Floor ONE S7 Steam (left) and Tineco A30S Cordless Stick Vacuum (right).

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic precautions when using an electrical appliance. This includes:

- Read all instructions before using the appliance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not immerse the appliance in water or other liquids.

- Do not use on wet surfaces or for picking up liquids, except as specifically designed for wet cleaning.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Exercise extra care when cleaning on stairs.
- Do not use without filters in place.
- Unplug from outlet when not in use and before servicing.

PRODUCT COMPONENTS

Your Tineco cleaning system includes two primary units: the Floor ONE S7 Steam Wet Dry Vacuum and the A30S Cordless Stick Vacuum. Each unit comes with specific components designed for optimal performance.

Tineco Floor ONE S7 Steam

- Main Body with Handle
- Clean Water Tank
- Dirty Water Tank
- Brush Roller
- Charging Base

Tineco A30S Cordless Stick Vacuum

- Main Motor Body
- Extension Wand
- Multi-tasker Power Brush
- Dustbin
- Battery Pack
- 2-in-1 Crevice Brush

SETUP AND ASSEMBLY

Tineco Floor ONE S7 Steam Assembly

1. Insert the handle into the main body until it clicks into place.
2. Ensure the clean water tank and dirty water tank are securely installed.
3. Place the unit on its charging base to fully charge before first use.



Vacuum. Mop. Steam

All in One Easy Step

The Tineco Floor ONE S7 Steam in operation, demonstrating its wet-dry cleaning capability.

Tineco A30S Cordless Stick Vacuum Assembly

1. Attach the extension wand to the main motor body.
2. Connect the multi-tasker power brush to the end of the extension wand.
3. Ensure the dustbin is properly attached to the main motor body.
4. Install the battery pack into the designated slot on the main motor body.

160W Powerful Suction



The Tineco A30S Cordless Stick Vacuum demonstrating its 160W powerful suction on a carpeted surface.

OPERATING INSTRUCTIONS

Using the Tineco Floor ONE S7 Steam

Before operation, fill the clean water tank with clean water. For optimal steam performance, use distilled or demineralized water. The device features two steam modes for different cleaning needs.

- **Power On/Off:** Press the power button on the handle to turn the unit on or off.
- **Steam Mode:** For general cleaning and large-scale dirt, select the standard steam mode.
- **Boost Steam Mode:** For localized and stubborn stains, activate the boost steam mode. The 284°F (140°C) HyperSteam technology helps melt away grease and tough stains.



Melts Away Stains with 284°F HyperSteam
Safe & Deep Cleaning

The Tineco Floor ONE S7 Steam utilizing its 284°F HyperSteam technology to effectively clean a stained floor.



2 Steam Modes

Tackle Virtually Any Stains

Illustration of the two steam modes: standard steam for large areas and boost steam for stubborn stains.

Using the Tineco A30S Cordless Stick Vacuum

The A30S provides powerful suction for both carpets and hard floors, offering up to 60 minutes of runtime on a single charge.

- **Charging:** Connect the charger to the battery pack or the charging dock. Ensure the battery is fully charged before each use for maximum runtime.
- **Power On/Off:** Press the trigger or power button to start or stop the vacuum.
- **Attachment Use:** Use the multi-tasker power brush for general floor cleaning. The 2-in-1 crevice brush is ideal for tight spaces and upholstery.

Up to 60-Minute Runtime



*Measured using the vacuum cleaner main unit with the 2-in-1 crevice brush.

A user operating the Tineco A30S Cordless Stick Vacuum in a kitchen setting, highlighting its portability and runtime.

MAINTENANCE AND CLEANING

Tineco Floor ONE S7 Steam Maintenance

- **Emptying Dirty Water Tank:** After each use, empty the dirty water tank and rinse it thoroughly to prevent odors and buildup.
- **Cleaning Brush Roller:** The MHCBS (Multi-stage High-speed Continuous Brush Washing System) technology ensures the brush roller is continuously cleaned. Periodically remove the brush roller for manual cleaning and inspection.



An internal view of the Tineco Floor ONE S7 Steam demonstrating the MHCBS technology for continuous brush washing.

Tineco A30S Cordless Stick Vacuum Maintenance

- **Emptying Dustbin:** The 1L capacity dustbin should be emptied regularly, especially when full, to maintain optimal suction performance.
- **Cleaning Filters:** The HEPA filter and other internal filters should be cleaned periodically according to the instructions in the full manual to ensure efficient air filtration and prevent clogging.

1L Large Capacity Dustbin

A30S



1L

Dust Cup

No need to frequently empty the dust bin while cleaning the entire house.

A close-up view of the Tineco A30S Cordless Stick Vacuum's 1-liter capacity dustbin.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions. If the problem persists, please contact Tineco customer support.

Problem	Possible Cause	Solution
No power (Floor ONE S7)	Battery not charged; Unit not properly seated on charging base.	Ensure unit is fully charged; Check connection to charging base.
No suction (A30S)	Dustbin full; Filter clogged; Obstruction in nozzle/wand.	Empty dustbin; Clean or replace filters; Remove any obstructions.
Poor steam output (Floor ONE S7)	Clean water tank empty; Nozzle clogged; Mineral buildup.	Refill clean water tank; Clean steam nozzle; Descale unit as per full manual.
Brush roller not spinning (Floor ONE S7)	Obstruction in brush roller; Brush roller not installed correctly.	Remove any hair or debris; Reinstall brush roller securely.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Tineco
Model Numbers	FLOOR ONE S7, A30S
Special Feature (S7)	Wet/Dry, Steam Mop
Suction Power (A30S)	160W
Filter Type	HEPA Filter
Cordless	Yes
Dirty Water Tank Capacity (S7)	Not specified (Clean water tank is 0.8L)
Dustbin Capacity (A30S)	1 Liters
Runtime (A30S)	Up to 1 hour (60 minutes)
Battery Type	Lithium-Ion
Control Method	App, Push Button
Indoor/Outdoor Usage	Indoor

WARRANTY AND SUPPORT

Tineco products are manufactured to the highest quality standards. For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your product or visit the official Tineco website. You may also contact Tineco customer service directly for assistance with any issues or questions.

Tineco Customer Service: Please refer to your product packaging or the official Tineco website for the most current contact information.