



[Manuals.plus](#) /

› [EnHomee](#) /

› EnHomee 13-Drawer Fabric Dresser TV Stand User Manual

## EnHomee 13-Drawer Fabric Dresser TV Stand (B0DBHRNP35)

# EnHomee 13-Drawer Fabric Dresser TV Stand User Manual

MODEL: 13-DRAWER FABRIC DRESSER TV STAND (B0DBHRNP35)

Brand: EnHomee

## 1. INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your EnHomee 13-Drawer Fabric Dresser TV Stand. Please read all instructions carefully before assembly and use to ensure safe and proper functionality. This versatile furniture piece is designed to offer ample storage and serve as a stable platform for televisions up to 55-60 inches.



Image 1.1: The EnHomee 13-Drawer Fabric Dresser TV Stand.

## 2. SAFETY INFORMATION

- Always assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use.
- Do not overload drawers or the top surface. The top surface can support over 110 lbs.
- For safety, always install the anti-tipping kit to secure the dresser to a wall, especially in homes with children or pets.
- Keep small parts and packaging materials away from children.



Image 2.1: Anti-tipping kit and structural support for enhanced stability.

### 3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact EnHomee customer support.

- Metal Frame Components (various sizes)
- Wooden Top Panel
- 13 Fabric Drawers (various sizes)
- Drawer Knobs
- Adjustable Feet
- Anti-Tipping Kit
- Assembly Hardware (screws, Allen wrench, screwdriver)

## 4. ASSEMBLY INSTRUCTIONS

---

Follow these steps carefully for proper assembly. An assembly video is provided for visual guidance.

### 4.1. Assembly Video Guide

Your browser does not support the video tag.

Video 4.1: Detailed assembly instructions for the EnHomee 13-Drawer Fabric Dresser. Note: The video demonstrates assembly of a white unit, but the steps are identical for the grey model.

### 4.2. Step-by-Step Assembly

1. **Attach Adjustable Feet:** Screw the adjustable feet (Part G) into the bottom of the side frames (Parts 2 and 3).
2. **Assemble Bottom Crossbars:** Connect the bottom crossbars (Part 10) using the connectors (Part J) and secure with screws (Part B). Ensure the square holes of parts 2 and 3 are facing inwards when attaching.
3. **Attach Middle Crossbars:** Connect the middle crossbars (Part 9) to the side frames (Parts 4 and 5) using screws (Part A). Ensure the small holes in part 9 are facing upwards.
4. **Install Vertical Supports:** Attach the vertical support bars (Part 6) to the middle crossbars (Part 9) using screws (Part A).
5. **Place Top Panels:** Carefully align and place the wooden top panels (Part 1) onto the assembled frame. Secure them using screws (Part C) and wooden dowels (Part K) where indicated.
6. **Assemble Fabric Drawers:** Unfold each fabric drawer. Insert the bottom panel to create a sturdy base. Attach the drawer knobs (Part H) to the front of each drawer using screws (Part D).
7. **Insert Drawers:** Place the assembled fabric drawers into their respective compartments in the frame.
8. **Install Anti-Tipping Kit:** Secure the dresser to the wall using the provided anti-tipping kit. This is a critical safety step.

## 5. OPERATING AND USAGE

---

Your EnHomee 13-Drawer Fabric Dresser TV Stand is designed for versatile use in various rooms, including bedrooms, living rooms, hallways, and entryways.

### 5.1. Storage Capacity

The dresser features 13 fabric drawers of varying sizes, providing ample space for organizing a wide range of items. These include clothing such as scarves, socks, T-shirts, and pants, as well as accessories like sunglasses, toys, books, quilts, and cosmetics.

# 3 SIZES of drawers

Meet the storage needs of different items



110+ Clothes



100+ Food



50+ Toy



80+ Book



20+ Quilt



130+ Cosmetics



Image 5.1: Examples of items that can be stored in the drawers, including clothes, food, toys, books, quilts, and cosmetics.



Image 5.2: A person demonstrating the organization of items within the fabric drawers.

## 5.2. TV Stand Functionality

The sturdy wooden top surface is designed to accommodate televisions up to 55-60 inches, with a weight capacity of over 110 lbs. This allows the dresser to function effectively as a TV stand or entertainment center.



Suitable for TV size up to 55"

Image 5.3: The dresser serving as a TV stand in a living room setting.

### 5.3. Multi-functional Placement

Beyond the bedroom, this dresser can be utilized as an entryway table, bedside table, or sofa table, adapting to your specific storage and display needs.



Image 5.4: The dresser used as an entryway console.

## 6. MAINTENANCE

To maintain the appearance and longevity of your dresser, follow these simple care instructions:

- **Cleaning:** Wipe the wooden top and metal frame with a dry, soft cloth. Avoid abrasive cleaners or harsh chemicals.
- **Fabric Drawers:** For light cleaning, use a damp cloth and mild soap. Allow to air dry completely. Do not machine wash or tumble dry the fabric drawers.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Placement:** Avoid placing the dresser in direct sunlight or near heat sources to prevent material degradation.

# 3-LAYER design

More sturdy



Image 6.1: The 3-layer design of the fabric drawers, indicating enhanced durability.

## 7. TROUBLESHOOTING

If you encounter any issues with your dresser, please refer to the following common solutions:

- **Wobbly Frame:** Ensure all screws connecting the metal frame components are fully tightened. Check that the adjustable feet are evenly set on the floor.
- **Drawers Not Sliding Smoothly:** Verify that the fabric drawers are correctly assembled and that the bottom panel is fully inserted. Ensure no items are obstructing the drawer's movement within the frame.
- **Missing Parts:** If any parts were missing upon delivery, please contact EnHomee customer support immediately for replacements.

## 8. SPECIFICATIONS

<b>Brand</b>	EnHomee
<b>Product Dimensions</b>	11.8"D x 47.2"W x 33"H
<b>Color</b>	Grey
<b>Room Type</b>	Bedroom, Dorm Room, Dressing Room, Hallway, Living Room
<b>Material</b>	Metal & Wood & Fabric
<b>Finish Type</b>	Metal Frame
<b>Number of Drawers</b>	13
<b>Assembly Required</b>	Yes
<b>Product Care Instructions</b>	Wipe with Dry Cloth

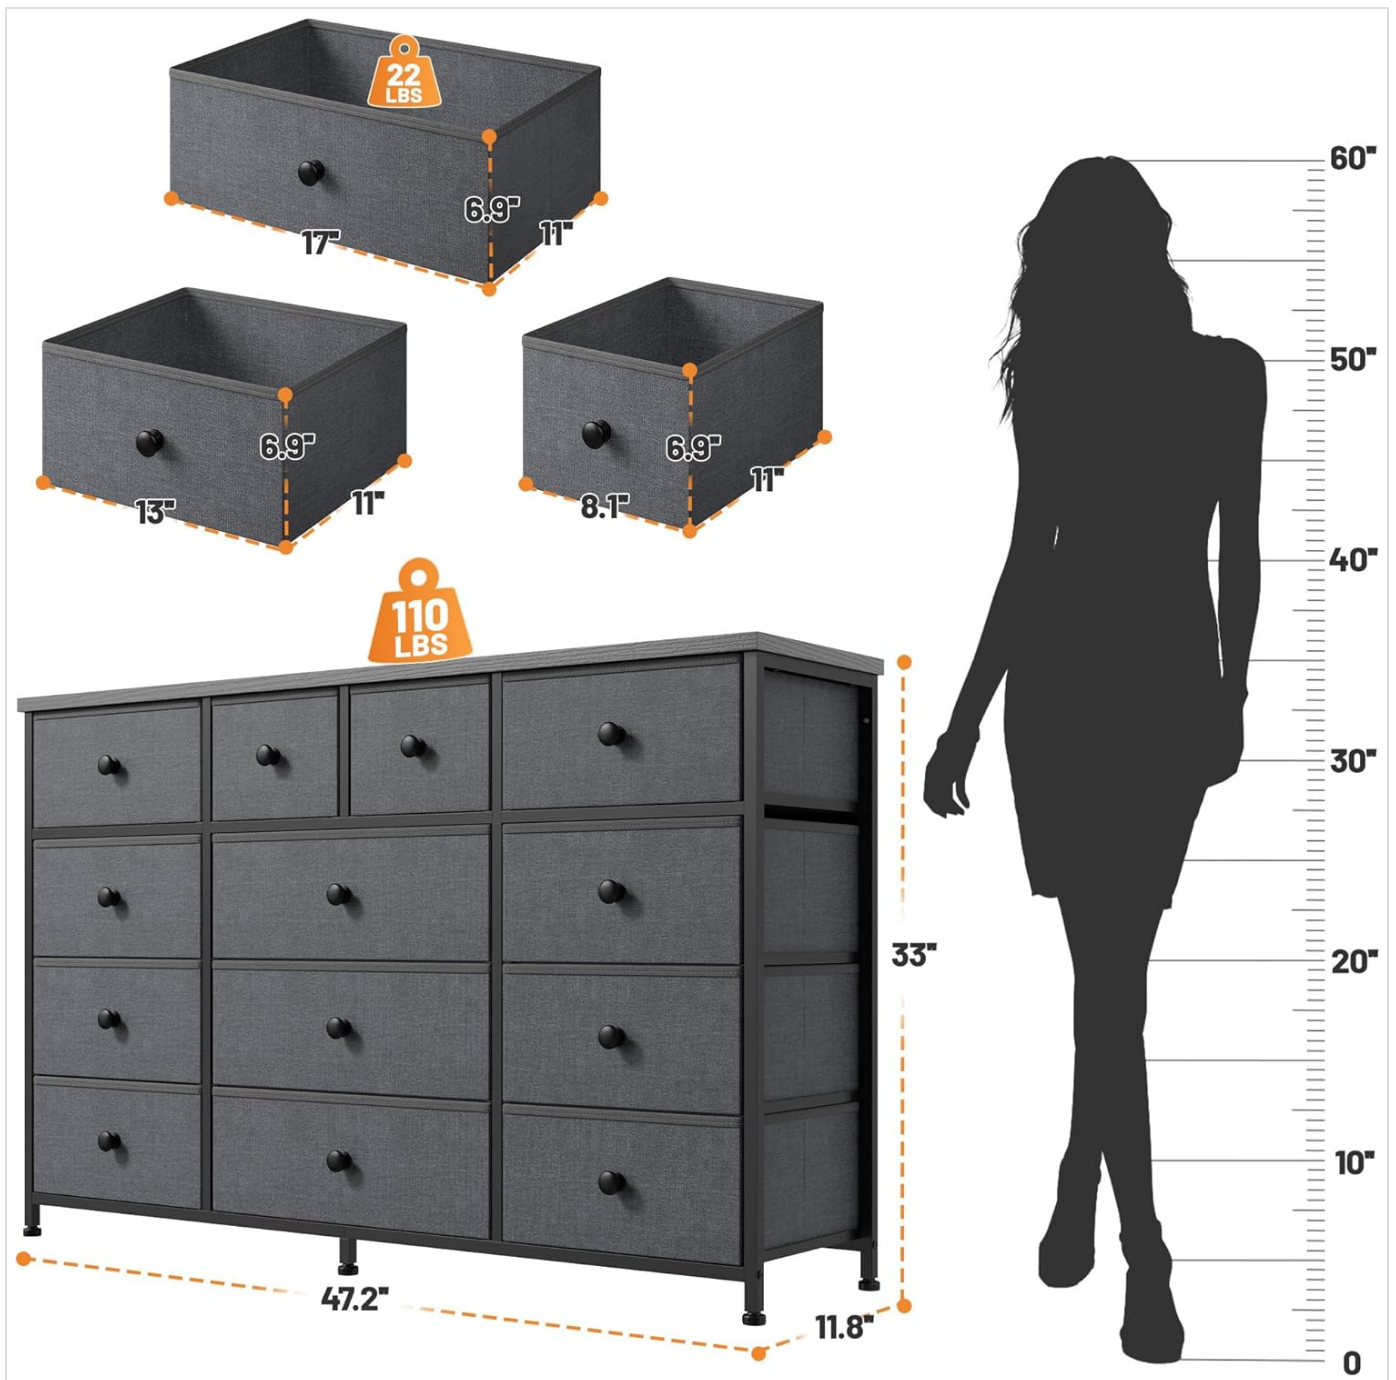


Image 8.1: Detailed dimensions of the dresser and its drawers.

## 9. WARRANTY AND SUPPORT

---

For warranty information, product support, or to report missing/damaged parts, please contact EnHomee customer service directly. Refer to your purchase documentation for specific contact details or visit the official EnHomee website.