

[Manuals.plus](#) /

› [Wisoqu](#) /

› Wisoqu Digital Camera Wisoqun3e7fuz8b2-12 User Manual

## Wisoqu Wisoqun3e7fuz8b2-12

# Wisoqu Digital Camera Wisoqun3e7fuz8b2-12 User Manual

## INTRODUCTION

---

Thank you for choosing the Wisoqu Digital Camera Wisoqun3e7fuz8b2-12. This manual provides essential information for the safe and effective use of your camera. Please read it thoroughly before operating the device and keep it for future reference.

## SAFETY INFORMATION

---

- Do not expose the camera to water or moisture.
- Avoid extreme temperatures, direct sunlight, or dusty environments.
- Use only the specified battery type and charger.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the camera yourself. Contact customer support for assistance.

## PACKAGE CONTENTS

---

Verify that all items are present in your package:

- 1 x Wisoqu Digital Camera
- 1 x NP-6L Lithium Battery
- 1 x USB Cable (Type-C)
- 1 x Hand Strap
- 1 x Cleaning Cloth
- 1 x User Manual
- 1 x Storage Bag

## PRODUCT OVERVIEW

---

Familiarize yourself with the camera's components and controls.



**Figure 1:** Front view of the Wisoqu Digital Camera, showing the lens, flash, and power button.

## 48MP AND FHD 4K

Digital camera supports 48MP photo and 4K HD video recording. Advanced CMOS technology ensures precise details to catch vivid moments and preserve your unforgettable experience. Ideal for beginners to shoot distant landscapes.



**Figure 2:** Back view of the camera, featuring the 2.8-inch display screen and various control buttons for navigation and settings.



**Figure 3:** Side view of the camera, highlighting the Type-C USB port for charging and data transfer.

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the latch to open the cover.
3. Insert the NP-6L lithium battery according to the polarity indicators inside the compartment.
4. Close the battery compartment cover until it clicks securely into place.

### 2. Memory Card Installation

The camera supports 4-256GB memory cards (not included).

1. With the battery compartment open, locate the memory card slot.
2. Insert the memory card with the metal contacts facing the correct direction (refer to the diagram near the slot).
3. Push the card gently until it clicks into place. To remove, push it again until it springs out.



**Figure 4:** Bottom view of the camera with the battery and memory card compartment open, showing insertion points.

### 3. Charging the Battery

1. Connect the camera to a power source using the provided USB Type-C cable.
2. The charging indicator light will illuminate.
3. Charging is complete when the indicator light turns off or changes color (refer to camera display for status).

### 4. Powering On/Off

Press and hold the power button (usually located on the top or front of the camera) to turn the camera on or off.

## OPERATING THE CAMERA

---

### Basic Photography and 4K Video Recording

The Wisoqu Digital Camera supports 48MP still photography and 4K HD video recording. The advanced CMOS technology ensures precise detail capture.

## 48MP AND FHD 4K

Digital camera supports 48MP photo and 4K HD video recording. Advanced CMOS technology ensures precise details to catch vivid moments and preserve your unforgettable experience. Ideal for beginners to shoot distant landscapes.



**Figure 5:** The camera's screen displaying a captured landscape, illustrating its photography capabilities.

### **Autofocus Dual Camera Function**

This camera features an innovative dual-camera design. Switch to the front camera for selfies or use the rear camera for general photography and video recording. The powerful autofocus function helps capture clear and sharp images.

## AUTOFOCUS DUAL CAMERA

Innovative dual camera design. Switch to the front camera for easy selfies with just one click and utilize the rear camera for video recording. Supporting powerful autofocus function, you can easily catch clear and wonderful moments.



**Figure 6:** The camera's rear view, emphasizing the screen and lens, which supports both front and rear camera modes.

### Webcam and Pause Function

The camera can be connected to a computer via a USB cable and used as a webcam for video calls or live streaming. It also includes a pause function during video recording or playback, allowing for easier editing.

## WEBCAM AND PAUSE FUNCTION

This camera supports video mode, built in microphone and anti shake function, connects to your computer via USB cable and can be used as a webcam for video calls and live streaming. With pause function, it allows you to pause while recording or playing video logs, which saves time for editing videos.



**Figure 7:** Front view of the camera, showcasing its 48.0 Megapixel resolution and 16x digital zoom capabilities, relevant for video quality.

### Digital Zoom

The camera features a 16x digital zoom, allowing you to magnify distant subjects. Use the zoom controls (typically 'W' for wide and 'T' for telephoto) to adjust the zoom level.

### MAINTENANCE

---

- **Cleaning:** Use the provided cleaning cloth or a soft, dry cloth to wipe the camera body and screen. Do not use liquid cleaners or abrasive materials.
- **Lens Care:** Gently clean the lens with a lens cleaning cloth or brush. Avoid touching the lens surface with your fingers.
- **Storage:** When not in use for extended periods, remove the battery and store the camera in a cool, dry place, preferably in its storage bag.
- **Battery Care:** Recharge the battery regularly, even if not in use, to maintain its lifespan.

### TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is low or not inserted correctly.	Charge the battery or reinsert it correctly.
Cannot take photos/videos.	Memory card is full, not inserted, or corrupted.	Insert a memory card, delete files, or format the card (this will erase all data).
Images are blurry.	Lens is dirty, insufficient light, or camera shake.	Clean the lens, use flash if needed, or hold the camera steady.
Camera freezes.	Software glitch.	Remove and reinsert the battery to reset the camera.

## SPECIFICATIONS

Feature	Specification
Model Number	Wisoqun3e7fuz8b2-12
Display Screen	2.8 inches
Max Video Resolution	4K ULTRA HD
Max Image Resolution	48M (8000x6000)
Battery Type	NP-6L 700mAh Lithium Battery
Storage Support	4-256GB Memory Card (Not Included)
File Formats	JPG, AVI
Digital Zoom	16x
Interface	Type-C USB
Dimensions	13 x 9 x 8 cm
Weight	301 g

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.