

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Urban Glide](#) /

› [URBANGLIDE Ride 85 Plus Electric Scooter User Manual](#)

Urban Glide Ride 85 Plus

URBANGLIDE Ride 85 Plus Electric Scooter User Manual

Model: URBTR13224

IMPORTANT SAFETY INFORMATION

Before operating your URBANGLIDE Ride 85 Plus electric scooter, please read and understand all safety instructions. Failure to follow these instructions may result in serious injury or damage to the product.

- Always wear a helmet and appropriate protective gear (knee pads, elbow pads) when riding.
- Ensure all components are securely fastened and in good working order before each ride. Check brakes, tires, and folding mechanism.
- Do not ride in wet conditions, on slippery surfaces, or in heavy rain.
- Observe all local traffic laws and regulations. Ride defensively and be aware of your surroundings.
- This scooter is designed for individuals aged 14 and older.
- The maximum weight capacity for this scooter is 100 kilograms (220 lbs). Do not exceed this limit.
- Avoid sudden acceleration, braking, or sharp turns, especially at high speeds.
- Do not perform stunts or jumps with the scooter.
- Keep fingers and other body parts away from moving parts, especially during folding and unfolding.

PACKAGE CONTENTS

Verify that all items are present in the package:

- URBANGLIDE Ride 85 Plus Electric Scooter
- Battery Charger
- User Manual



Image: The URBANGLIDE Ride 85 Plus electric scooter in its complete form, showcasing its sleek black design and 8.5-inch wheels.

SETUP

1. Unfolding the Scooter

To unfold your scooter, ensure it is powered off. Locate the folding mechanism near the base of the handlebar stem. Release the latch or lever, then carefully lift the handlebar stem until it locks into an upright position. Ensure the locking mechanism is fully engaged before use.



Image: The URBANGLIDE Ride 85 Plus electric scooter in its compact, folded state, ready for transport or storage.



Image: The URBANGLIDE Ride 85 Plus electric scooter partially folded, illustrating the folding hinge mechanism.

2. Handlebar Assembly

The handlebars are typically pre-assembled or require minimal attachment. If detachable, slide the handlebar into the stem and secure it with the provided screws or quick-release clamps. Ensure the handlebars are firmly in place and do not wobble.



Image: Front three-quarter view of the URBANGLIDE Ride 85 Plus, showing the handlebars, display, and front wheel.

3. Initial Battery Charge

Before first use, fully charge the scooter's battery. Connect the charger to the charging port on the scooter and then to a standard wall outlet. The charging indicator on the charger will typically change color (e.g., red to green) when charging is complete. Do not overcharge the battery.

OPERATING INSTRUCTIONS

1. Power On/Off

To power on the scooter, press and hold the power button located on the handlebar display for a few seconds. The display will illuminate. To power off, press and hold the power button again until the display turns off.

2. Riding

Place one foot on the deck and use your other foot to push off the ground, similar to a kick scooter. Once you have some momentum, gently press the throttle lever to engage the motor. Gradually increase speed. Maintain a balanced posture with both feet on the deck while riding.



Image: A person riding the URBANGLIDE Ride 85 Plus electric scooter on a paved path, demonstrating proper riding posture.

3. Braking

The URBANGLIDE Ride 85 Plus features a rear braking system. To slow down or stop, gently apply the brake lever located on the handlebar. Apply the brake smoothly to avoid sudden stops, which can lead to loss of balance. For emergency stops, apply the brake firmly.



Image: A close-up view of the rear wheel and disc brake system of the URBANGLIDE Ride 85 Plus electric scooter.

4. Folding for Storage/Transport

To fold the scooter, ensure it is powered off. Locate the folding mechanism and release the latch. Carefully push the handlebar stem downwards until it clicks into the folded position. Ensure the stem is securely latched to prevent accidental unfolding during transport.



Image: The URBANGLIDE Ride 85 Plus electric scooter fully folded, demonstrating its compact form for easy storage or carrying.

MAINTENANCE

1. Cleaning

Wipe the scooter with a damp cloth after each use. Do not use high-pressure water jets or immerse the scooter in water. Avoid harsh chemicals that may damage the finish or electronic components.

2. Battery Care

Charge the battery regularly, even if the scooter is not in use for extended periods (at least once every 30 days). Store the scooter in a cool, dry place away from direct sunlight and extreme temperatures. Do not attempt to open or repair the battery pack.

3. Tire Pressure

Regularly check the tire pressure of the 8.5-inch pneumatic tires. Maintain the recommended pressure (refer to the tire sidewall or product specifications) for optimal performance and safety. Under-inflated tires

can affect range and handling.

4. General Inspection

Periodically inspect all screws, bolts, and connections to ensure they are tight. Check brake cables for wear and proper tension. If any parts are damaged or worn, contact customer support for replacement.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; Loose connections; Faulty power button	Charge the battery; Check all connections; Contact support if issue persists
Motor not engaging	Insufficient kick-start; Throttle issue; Low battery	Ensure a proper kick-start before engaging throttle; Check battery level; Contact support
Brakes feel weak	Brake cable loose; Worn brake pads	Adjust brake cable tension; Inspect and replace brake pads if necessary
Unusual noises during operation	Loose components; Debris in wheels; Motor issue	Inspect for loose parts and tighten; Clear any debris; Contact support for motor issues

TECHNICAL SPECIFICATIONS

- **Model:** URBANGLIDE Ride 85 Plus
- **Model Number:** URBTR13224
- **Wheel Size:** 8.5 Inches (Pneumatic)
- **Maximum Weight Capacity:** 100 Kilograms
- **Frame Material:** Aluminum
- **Main Material:** Alloy Steel
- **Suspension:** Dual Suspension
- **Brakes:** Rear Braking
- **Special Features:** Foldable, Adjustable Handlebar
- **Battery Type:** Lithium-ion (1 included)
- **Color:** Black

WARRANTY AND SUPPORT

Your URBANGLIDE Ride 85 Plus electric scooter comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including coverage duration and limitations.

Contact Support

For technical assistance, warranty claims, or replacement parts, please contact URBANGLIDE customer support through their official website or the contact information provided on your purchase documentation.

Please have your model number (URBTR13224) and proof of purchase ready when contacting support.

