

[Manuals.plus](#) /

› [PUSOKEI](#) /

› PUSOKEI 4G LTE Smartphone User Manual - Model PUSOKEI965z0ge1th-14

PUSOKEI PUSOKEI965z0ge1th-14

PUSOKEI 4G LTE Smartphone User Manual

Model: PUSOKEI965z0ge1th-14

INTRODUCTION

This manual provides essential information for the safe and efficient use of your PUSOKEI 4G LTE Smartphone. Please read this manual thoroughly before using your device to ensure optimal performance and to prevent damage. This smartphone features an Android 12 operating system, 8GB RAM, 64GB ROM, a 6.28-inch HD screen, and dual SIM capabilities.

SETUP

1. Package Contents

Verify that all items are present in your package:

- 1 x PUSOKEI Mobile Phone
- 1 x Screen Protector Film
- 1 x Protective Case
- 1 x SIM Ejector Tool (Card Stylus)
- 1 x Stylus Pen
- 1 x Data Cable (Type C)
- 1 x Pair of Earphones
- 1 x User Manual



Image: The PUSOKEI smartphone displayed with its complete set of accessories, including a screen protector, protective case, SIM ejector tool, stylus, data cable, and earphones.

2. SIM Card and Memory Card Installation

Your device supports dual Nano-SIM cards and one memory card (up to 128GB, not included). Use the provided SIM ejector tool to open the card tray.

1. Locate the SIM card tray on the side of the phone.
2. Insert the SIM ejector tool into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM cards and memory card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully reinsert the tray into the phone until it clicks into place.

3. Powering On/Off

To power on the device, press and hold the **Power button** located on the side of the phone until the screen lights up. To power off, press and hold the **Power button**, then select 'Power off' from the options displayed on the screen.

4. Initial Setup

Upon first power-on, follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account setup, and security settings.

1. Basic Navigation

The PUSOKEI smartphone runs on Android 12. Navigate through the interface using touch gestures: tap to select, swipe to scroll, pinch to zoom.

2. Stylus Usage

The included stylus allows for more precise interactions, such as drawing, writing notes, or fine-tuning image edits. Simply use the stylus directly on the screen as you would your finger.

3. Security Features

Your smartphone offers advanced security options:

- **Face Recognition:** Set up facial recognition in the security settings. This allows you to unlock your phone by simply looking at it. The device features zero-light face recognition for accurate unlocking even in low-light conditions.

Zero photosensitive ace recognition

With zero-light face recognition, zero-light face recognition can accurately recognize all the time, bringing a science fiction unlocking experience. Zero-light face recognition with hidden infrared light, no need to glare in the dark environment, still easy to read your "face"



Image: A user unlocking the PUSOKEI smartphone using its facial recognition feature, which operates effectively even in low-light environments.

- **Screen Fingerprint Unlock:** The device features an in-screen fingerprint sensor for quick and secure unlocking. Register your fingerprints in the security settings.



Image: The PUSOKEI smartphone displaying the on-screen fingerprint unlock interface, highlighting its advanced biometric security technology.

4. Camera Functions

The smartphone is equipped with an 8MP front camera and a 32MP rear camera. Open the Camera app to capture photos and videos. Explore various modes and settings for optimal results.



Front Camera: 8MP
Rear Camera: 32MP

The phone also packs a 8MP self snapper for allowing you to present your own smile or precious memory in outstanding clarity

Thin face Beauty Whitening

Image: Visual examples demonstrating the clarity and detail captured by the PUSOKEI smartphone's 8MP front camera and 32MP rear camera.

5. Network and Connectivity

The device supports 2G GSM, 3G WCDMA, and 4G FDD/TDD networks, ensuring broad compatibility. It also includes Wi-Fi, Bluetooth, FM radio, and GPS for comprehensive connectivity.

GPS navigation

GPS positioning and navigation, to protect you and create indoor navigationfunctionthe national super high 300 airports High-speed rail stations, shopping malls and other publi places.

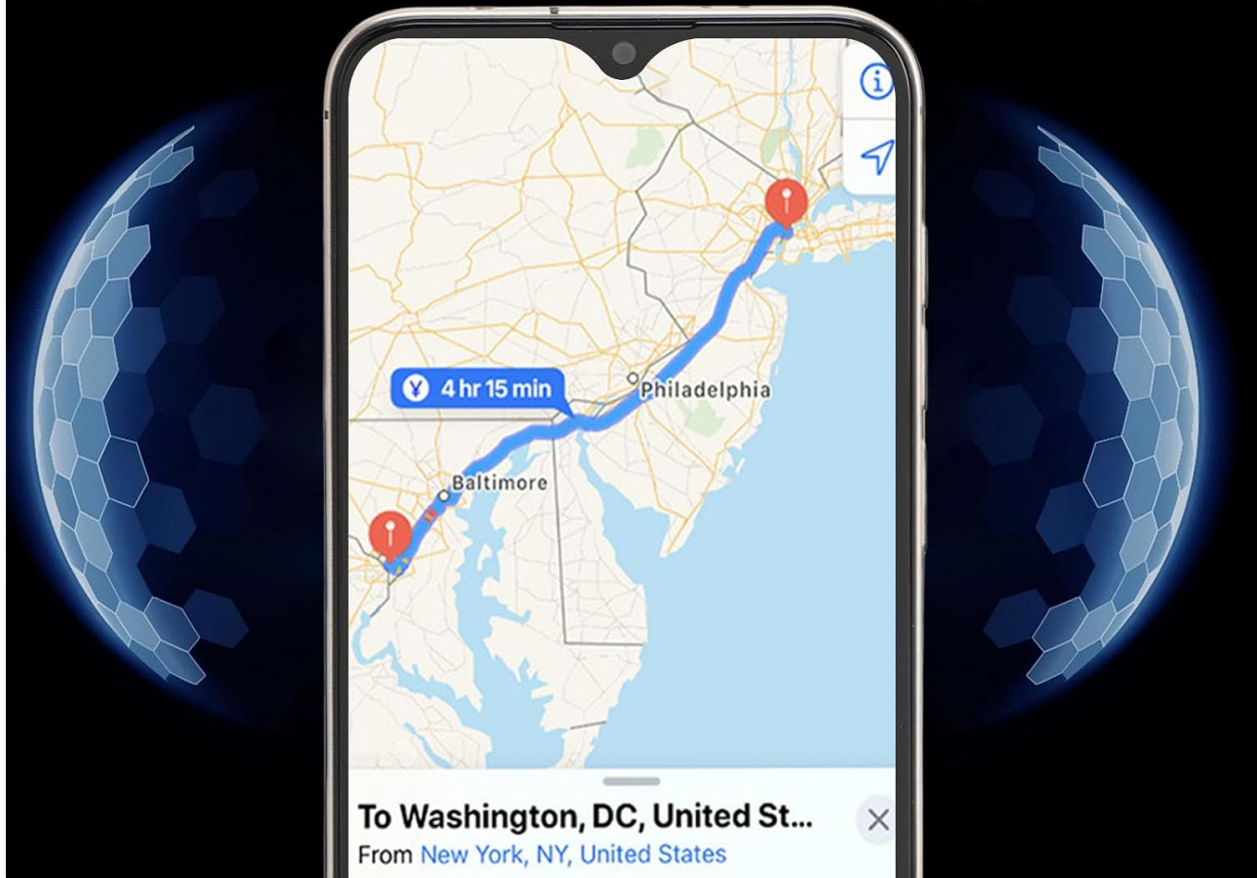


Image: The PUSOKEI smartphone screen showing an active GPS navigation map, illustrating its integrated positioning capabilities.

6. Battery Management

The smartphone features a built-in 6800mAh lithium-ion battery. To maximize battery life, adjust screen brightness, close unused apps, and enable power-saving modes when needed. Charge the device using the provided Type-C data cable.

6800mAh Battery

With a high capacity 6800mAh battery and our own battery saving technology, can confidently last a full day of medium -to -heavy use without charging,



Image: The PUSOKEI smartphone displaying its charging status, highlighting the large 6800mAh battery capacity.

MAINTENANCE

1. Cleaning

Use a soft, lint-free cloth to clean the screen and body of the phone. Avoid using harsh chemicals or abrasive materials. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

2. Storage

Store your phone in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

3. Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. You can usually find this option in the phone's 'Settings' menu under

'System' or 'About phone'.

TROUBLESHOOTING

1. Device Not Powering On

Ensure the battery is charged. Connect the phone to its charger and wait a few minutes before attempting to power it on again. If the issue persists, try a different charging cable or adapter.

2. Poor Network Signal

Check if your SIM card is correctly inserted. Move to an area with better network coverage. If the problem continues, contact your network provider.

3. Apps Crashing or Freezing

Close and restart the problematic app. If the issue persists, clear the app's cache and data in the phone's settings, or uninstall and reinstall the app. Ensure your phone's software is up to date.

4. Touchscreen Unresponsive

Restart the device by holding down the power button. If the screen remains unresponsive, perform a forced restart (refer to your device's specific instructions for this, often a combination of power and volume buttons).

SPECIFICATIONS



Image: The PUSOKEI smartphone showcasing its 6.28-inch HD screen with a resolution of 1440x3200, displaying a vibrant landscape.

Feature	Detail
Model Number	PUSOKEI965z0ge1th-14
Operating System	Android 12.0
Processor	MTK6737
RAM	8 GB
Internal Storage (ROM)	64 GB
Expandable Storage	Up to 128 GB (Memory card not included)
Screen Size	6.28 Inches
Screen Resolution	1440 x 3200 HD
Rear Camera	32 MP (f/1.8 aperture, autofocus)

Feature	Detail
Front Camera	8 MP (f/2.0 aperture, fixed focus)
Battery Capacity	6800 mAh Lithium-ion
SIM Card Slots	Dual Nano-SIM
Network Technology	2G GSM, 3G WCDMA, 4G FDD/TDD
Connectivity	Wi-Fi, Bluetooth, GPS, FM Radio
Biometric Security	Face Recognition, Fingerprint Unlock
Ports	1 x Type-C, 1 x 3.5mm Headphone Jack
Input Method	Buttons, Touchscreen with Stylus
Material	Glass
Country of Origin	China

WARRANTY INFORMATION

Specific warranty details for the PUSOKEI Smartphone are not available in the provided product information. Please refer to the warranty card included in your product packaging or contact the seller directly for warranty terms and conditions.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or inquiries regarding your PUSOKEI Smartphone, please contact the seller or manufacturer directly. Contact information may be found in your product packaging or on the official PUSOKEI website.