

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LIVOO](#) /

> [LIVOO DOM497 Popcorn Machine 1200W User Manual](#)

## LIVOO DOM497

# LIVOO DOM497 Popcorn Machine 1200W User Manual

Model: DOM497 | Brand: LIVOO

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your LIVOO DOM497 Popcorn Machine.



*Image: Exploded view of the LIVOO DOM497 Popcorn Machine, showing the main unit, transparent cover, measuring cup, and top lid.*

1. **Main Unit:** Contains the heating element and motor.
2. **Transparent Cover:** Sits on top of the main unit, allowing you to see the popcorn popping.
3. **Measuring Cup/Lid:** Used to measure corn kernels and also serves as the top lid for the transparent cover.
4. **Power Switch:** Located on the side of the main unit to turn the appliance on/off.

## SETUP

---

Before first use, ensure the appliance is clean and assembled correctly.

- Unpack the popcorn machine and all its components.
- Wipe the exterior of the main unit with a damp cloth.
- Wash the transparent cover and measuring cup in warm, soapy water, then rinse and dry thoroughly.
- Place the main unit on a stable, flat, heat-resistant surface.
- Ensure the power switch is in the "OFF" position before plugging in.

## OPERATING INSTRUCTIONS

---

Follow these steps to make delicious popcorn:



*Image: A hand pouring corn kernels into the measuring cup of the LIVOO DOM497 Popcorn Machine.*

1. Using the provided measuring cup, add up to 100g of corn kernels into the popping chamber. **Do not add oil, butter, or any other liquids.**

2. Place the transparent cover onto the main unit, ensuring it is seated correctly.
3. Place the measuring cup/lid on top of the transparent cover. This also helps direct popped corn.
4. Position a large bowl under the popcorn chute to collect the popped corn.
5. Plug the appliance into a suitable electrical outlet.
6. Flip the power switch to the "ON" position. The machine will begin to heat up and pop the kernels.
7. Popcorn will start to emerge from the chute within a few minutes.
8. Once popping stops (approximately 2-3 minutes), turn the power switch to "OFF" and unplug the appliance.
9. Carefully remove the transparent cover and measuring cup. Be aware that steam may escape.
10. Allow the machine to cool completely before attempting to make another batch or clean it.



*Image: The LIVOO DOM497 Popcorn Machine actively popping corn, with popped kernels in a bowl and unpopped kernels on a plate.*

## **CLEANING AND MAINTENANCE**

---

Regular cleaning ensures optimal performance and longevity of your popcorn machine.

- Always unplug the appliance and allow it to cool completely before cleaning.
- The transparent cover and measuring cup can be washed in warm, soapy water. Rinse thoroughly and dry. These parts may also be dishwasher safe (check product specific instructions if available, otherwise hand wash is recommended).
- Wipe the exterior of the main unit with a damp cloth. **Never immerse the main unit in water or any other liquid.**
- Remove any unpopped kernels or debris from the popping chamber using a soft brush or cloth.
- Do not use abrasive cleaners or scouring pads, as these may scratch surfaces.
- Store the appliance in a dry place when not in use.

## TROUBLESHOOTING

If you encounter issues with your popcorn machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power switch off; power outage.	Ensure appliance is securely plugged into a working outlet; turn power switch to "ON"; check household circuit breaker.
Popcorn not popping or very few kernels pop.	Old or dry kernels; too many kernels; machine not preheated (though this model heats quickly).	Use fresh, high-quality popcorn kernels; do not exceed the 100g capacity (one measuring cup); ensure machine is clean.
Popcorn burns.	Machine left on too long after popping stops.	Turn off and unplug the machine immediately once popping ceases.
Popcorn flies out of the chute before popping.	Too many kernels; machine not level.	Ensure you are using the correct amount of kernels (max 100g); place the machine on a stable, level surface.

## SPECIFICATIONS

Technical details for the LIVOO DOM497 Popcorn Machine:

- **Model Number:** DOM497
- **Brand:** LIVOO
- **Power:** 1200W
- **Capacity:** Up to 100 Grams of corn kernels
- **Type:** Electric Popcorn Machine

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact LIVOO customer service. Keep your proof of purchase for warranty claims.



