

[Manuals.plus](#) /

› [Panasonic](#) /

› Panasonic Lamdash 3-Blade Electric Shaver ES-L380W-A Instruction Manual

Panasonic ES-L380W-A

Panasonic Lamdash 3-Blade Electric Shaver ES-L380W-A Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective use of your Panasonic Lamdash 3-Blade Electric Shaver, model ES-L380W-A. Please read these instructions thoroughly before use and retain them for future reference.




Image: The Panasonic Lamdash 3-Blade Electric Shaver ES-L380W-A in blue, shown alongside its automatic cleaning and charging station.

KEY FEATURES

- **High-Speed Linear Motor:** Equipped with a powerful linear motor that delivers approximately 13,000 strokes per minute, resulting in 39,000 cutting actions per minute for a fast and efficient shave.

3枚刃システム

 
ラムダッシュこだわりの
「システム刃」で
濃いヒゲもしっかり深剃り。



深剃り刃



 トリマー刃



深剃り刃

○写真はイメージです。

Image: An internal view illustration highlighting the high-speed linear motor, indicating its 13,000 strokes per minute capability.

- **3-Blade System:** Designed with a precise 3-blade system to capture and cut even dense stubble effectively for a close shave.

密着 3D ヘッド

3D に動くヘッドで
肌に密着シェービング。



Image: A detailed view of the shaver's 3-blade system, showing two deep shaving foils and a central trimmer blade.

- **Multi-Directional 3D Head:** The shaver head moves in three dimensions (front-back, left-right, up-down) to closely follow the contours of your face and chin, ensuring consistent skin contact and a deep shave.

清潔

ウォータースルー洗浄

外刃をはずさずに、
ヒゲクズを洗い流せる。

防水設計 (IPX7基準)^{※1}

本体まるごと水洗い^{※2}で
刃の剃り味と清潔性を
キープ。



※1 IPX7基準(水深1メートルに30分間水に浸けても有害な影響を生じる量の水の浸入がない)検査をクリアしています。※2 全自動洗浄充電器、ACアダプターは除く。

○写真はイメージです。

Image: A diagram showing the shaver head's ability to move forward/backward, left/right, and up/down, adapting to facial curves.

- **Water-Through Cleaning:** Features a water-through cleaning mechanism that allows you to rinse stubble easily without removing the outer foil, promoting hygiene and maintaining blade sharpness.



Image: The shaver head being cleaned under running water, illustrating the water-through cleaning function.

- **Automatic Cleaning and Charging Station:** Includes a station that automatically cleans, dries, and charges the shaver, simplifying maintenance.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Ensure you have the shaver unit, automatic cleaning and charging station, AC adapter, pouch, shaver cleaning solution (ES-4L), dedicated oil, and cleaning brush.
2. **Charging Station Placement:** Place the automatic cleaning and charging station on a flat, stable surface near an electrical outlet. Ensure there is adequate ventilation around the station.
3. **Connect AC Adapter:** Connect the AC adapter to the charging station and then plug it into a suitable electrical outlet.
4. **Initial Charge:** Place the shaver into the charging station. The charging indicator will illuminate. Allow the shaver to charge fully before its first use. A full charge typically takes approximately 1 hour.
5. **Prepare Cleaning Solution (if applicable):** If using the automatic cleaning function, follow the instructions provided with the shaver cleaning solution (ES-4L) to prepare and load it into the cleaning station's reservoir.

OPERATING

1. **Power On:** Press the power button to turn on the shaver.
2. **Shaving Technique:** Hold the shaver at a right angle to your skin. Shave against the direction of hair growth for the closest results. The flexible 3D head will adapt to your facial contours.
3. **Wet/Dry Shaving:** This shaver supports both dry shaving and wet shaving with foam or gel. For wet

shaving, apply shaving foam or gel to your face before use.

- 4. Trimmer Use:** The shaver includes a pop-up trimmer for precise detailing of sideburns or longer hairs. Slide the trimmer switch upwards to engage.
- 5. Power Off:** Press the power button again to turn off the shaver after use.

MAINTENANCE

- 1. Daily Cleaning (Water-Through):** After each use, turn off the shaver. Without removing the outer foil, rinse the shaver head thoroughly under running water to wash away stubble. Shake off excess water and allow it to air dry.
- 2. Automatic Cleaning (with station):** Place the shaver in the automatic cleaning and charging station. Select the cleaning cycle according to the station's instructions. The station will clean, dry, and charge the shaver.
- 3. Lubrication:** Periodically apply a drop of the dedicated oil to the outer foils and inner blades to maintain optimal performance and extend blade life. Refer to the detailed manual for frequency.
- 4. Blade and Foil Replacement:** The outer foil and inner blades are wear parts and should be replaced approximately every year, or when shaving performance decreases. Use genuine Panasonic replacement parts (e.g., ES9013 for outer foil and inner blades set).
- 5. Storage:** Store the shaver in a cool, dry place, preferably in its pouch, when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully using the AC adapter or charging station.
Shaving performance is poor.	Blades/foils are dull or clogged with stubble.	Clean the shaver thoroughly. Replace the outer foil and inner blades if they are worn.
Shaver makes unusual noise.	Foreign object in the head or blades are damaged.	Clean the shaver head. If noise persists, contact customer support.
Automatic cleaning station not working.	No cleaning solution, power issue, or shaver not seated correctly.	Check cleaning solution level. Ensure AC adapter is connected. Re-seat the shaver firmly in the station.

If the problem persists after attempting these solutions, please refer to the full user manual or contact Panasonic customer support.

SPECIFICATIONS

Brand: Panasonic

Model Number: ES-L380W-A

Color: Blue

Power Source: Battery powered (Rechargeable)

Number of Blades: 3

Head Type: Reciprocating

Blade Material: Metal

Item Weight: Approximately 0.19 kg (185g without cap)

Package Dimensions: 22.5 x 18.7 x 10.4 cm

Wattage: 10 W

WARRANTY AND SUPPORT

Your Panasonic Lamdash 3-Blade Electric Shaver ES-L380W-A comes with a **12-month manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or to purchase replacement parts and accessories, please contact Panasonic customer support through their official website or the contact information provided in your product packaging.

Please retain your proof of purchase for warranty validation.