

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Panasonic](#) /

› [Panasonic Lamdash 3-Blade Electric Shaver ES-L320W-W User Manual](#)

Panasonic ES-L320W

Panasonic Lamdash 3-Blade Electric Shaver ES-L320W-W User Manual

Model: ES-L320W-W

1. INTRODUCTION

Thank you for purchasing the Panasonic Lamdash 3-Blade Electric Shaver ES-L320W-W. This manual provides essential information for the safe and effective use, maintenance, and care of your new shaver. Please read it thoroughly before use and keep it for future reference.

This shaver is designed for a powerful and close shave, featuring a high-speed linear motor and a 3-blade cutting system. It also offers convenient water-through cleaning for easy maintenance.





Image: Front view of the Panasonic Lamdash 3-Blade Electric Shaver ES-L320W-W.

2. SAFETY INFORMATION

WARNING:

- Avoid using the shaver in water or excessively wet environments to prevent electric shock or malfunction.
- To maintain hygiene and optimal performance, clean the shaver regularly as instructed in the maintenance section.
- Keep the shaver out of reach of children.

- Do not disassemble, repair, or modify the shaver yourself. Contact authorized service personnel for repairs.

3. PRODUCT OVERVIEW

Key Features

- **Powerful Linear Motor:** Delivers approximately 13,000 strokes per minute, resulting in approximately 39,000 cutting actions per minute for an efficient and powerful shave.
- **3-Blade System:** Designed for a close and deep shave, effectively capturing and cutting even thick stubble.
- **Water-Through Cleaning:** Allows for easy rinsing of beard clippings without removing the outer foil, ensuring hygienic maintenance.
- **Wet/Dry Shaving:** Suitable for both dry shaving and wet shaving with foam or gel.
- **Pop-up Trimmer:** Integrated trimmer for precise grooming of sideburns and pre-cutting longer hairs.
- **AC Adapter Charging:** Convenient charging system.
- **Float Blade Mechanism:** The head adapts to facial contours for a smooth shave.



Image: The flexible head mechanism of the shaver, designed to follow facial contours.

Components

The package includes:

- Panasonic Lamdash 3-Blade Electric Shaver (Main Unit)
- AC Adapter
- Dedicated Oil

- Cleaning Brush
- Protective Cap



Image: A comparison chart of Lamdash 3-blade models. The ES-L320W-W (Basic) features 3 blades, a high-speed linear motor (approx. 13,000 strokes/min), and water-through cleaning.

高速リニアモーター駆動


内刃を高速駆動させ、
とらえたヒゲを逃さず剃りきる。



Image: Illustration of the high-speed linear motor, driving the inner blades at approximately 13,000 strokes per minute for powerful shaving.

3枚刃システム

 
ラムダッシュこだわりの
「システム刃」で
濃いヒゲもしっかり深剃り。



深剃り刃



 トリマー刃



深剃り刃

○写真はイメージです。

Image: The 3-blade system, consisting of two deep shaving foils and a central trimmer blade, designed for a thorough shave.

 
その他の主な機能



ラムダッシュ
AI※1



スイッチ
ロック

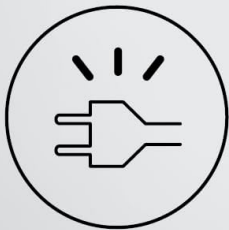

充電催促
表示



海外・国内両用
AC100-240V※2

※1 ヒゲの濃さや、シェーバーヘッド内部のヒゲクズによって、センサーが反応(駆動音の変化)しない場合がありますが、異常ではありません。※2 海外でご使用の場合には、国や地域に合わせて別途プラグアダプターをお買い求めください。

○イラストはイメージです。

Image: Other key functions include Lamdash AI (adjusts power based on beard density), a switch lock for travel, a charge indicator, and worldwide voltage compatibility (AC100-240V).

4. SETUP

Charging the Shaver

1. Ensure the shaver is turned off.
2. Connect the AC adapter to the shaver's charging port.
3. Plug the AC adapter into a suitable power outlet.
4. The charge indicator light will illuminate, indicating that charging has begun.
5. Allow the shaver to charge fully before its first use. Refer to the specifications for typical charging times.

5. OPERATING INSTRUCTIONS

Basic Shaving

1. Press the power button to turn on the shaver.

2. Hold the shaver at a right angle to your skin.
3. Move the shaver slowly against the direction of beard growth.
4. Stretch your skin with your free hand to ensure a smooth surface for shaving.

Wet/Dry Shaving & Foam Making Mode

This shaver supports both dry and wet shaving. For a more comfortable shave, especially for sensitive skin, use it with shaving foam or gel.

1. Apply shaving foam or gel to your face.
2. Turn on the shaver.
3. For Foam Making Mode: Apply a small amount of facial cleanser (non-scrub, non-soap type) directly to the shaver head. Turn on the shaver to generate fine foam.
4. Proceed with shaving as usual.

お風呂でも剃れる

充電式

入浴時にシェービングができる。



泡メイキングモード

洗顔剤※などを使って、シェービング用のきめ細かい泡が作れる。



※シェービング剤(フォーム除く)、スクラブ入りの洗顔剤、せっけんは、刃の目詰まりの原因になったり、泡が立たないので、使用しないでください。

○写真・イラストはイメージです。

Image: The shaver can be used for wet shaving, including in the bath or shower, and features a foam-making mode to create fine lather from facial cleanser.

Using the Pop-up Trimmer

The shaver includes a sharp pop-up trimmer for detailed grooming.

1. Slide the trimmer switch located on the back of the shaver upwards to engage the trimmer.
2. Use the trimmer to shape sideburns, trim mustaches, or pre-cut longer beard hairs before main shaving.
3. After use, slide the trimmer switch downwards to retract the trimmer.

シャープトリマー

モミアゲ等のお手入れ、
ヒゲのプレカットに。



トリミング用の刃を
本体背面に搭載

切れ味の良い45° 鋭角刃

○写真のモデルはES-L340D-Rです。

○写真はイメージです。

Image: The sharp pop-up trimmer, located on the back of the unit, is ideal for grooming sideburns and pre-cutting beard hair.

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your shaver.

Water-Through Cleaning

The water-through cleaning feature allows for quick and easy cleaning without removing the outer foil.

1. After shaving, turn off the shaver.
2. Hold the shaver head under running water.
3. Turn on the shaver to allow water to flow through the blades, rinsing away beard clippings.
4. Continue rinsing until all debris is cleared.

5. Turn off the shaver and gently shake off excess water.
6. Allow the shaver to air dry completely before storing.

清潔

ウォータースルー洗浄

外刃をはずさずに、
ヒゲクズを洗い流せる。

防水設計 (IPX7基準)^{※1}

本体まるごと水洗い^{※2}で
刃の剃り味と清潔性を
キープ。



○写真のモデルはES-L340D-Rです。

※1 IPX7基準(水深1メートルに30分間水に浸けても有害な影響を生じる量の水の浸入がない)検査をクリアしています。※2 ACアダプターは除く。

○写真はイメージです。

Image: Water-through cleaning allows you to rinse beard clippings easily under running water without removing the outer foil. The shaver features an IPX7 waterproof design.

Using the Cleaning Brush

For more thorough cleaning, especially for stubborn debris:

1. Ensure the shaver is turned off and unplugged.
2. Remove the outer foil frame.
3. Use the provided cleaning brush to gently brush away any trapped beard clippings from the inner blades and outer foil.
4. Do not use the brush on the outer foil itself, as this can damage it.
5. Reattach the outer foil frame securely.

Oiling the Blades

Periodically apply a drop of the dedicated oil to the blades to maintain smooth operation and cutting efficiency.

1. After cleaning and drying, apply one or two drops of the dedicated oil to the outer foil.
2. Turn on the shaver for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.

7. TROUBLESHOOTING

If you encounter any issues with your shaver, please refer to the following common solutions:

- **Shaver does not turn on:** Ensure the shaver is fully charged. If the battery is completely depleted, it may take a few minutes of charging before it can be turned on. Check if the switch lock is engaged.
- **Poor shaving performance:** Clean the blades thoroughly. Apply dedicated oil to the blades. The outer foil and inner blades are wear parts and may need replacement after approximately one year of use, depending on usage frequency.
- **Excessive noise or vibration:** Ensure the outer foil frame is correctly attached. Clean and oil the blades. If the issue persists, the blades or motor may require inspection.

For problems not listed here or if solutions do not resolve the issue, please contact customer support.

8. SPECIFICATIONS

| Feature | Detail |
|--------------------|---|
| Brand | Panasonic |
| Model Number | ES-L320W-W |
| Color | White |
| Power Source | Battery-powered (Rechargeable) |
| Charging System | AC Adapter Charging |
| Number of Blades | 3 |
| Head Type | Reciprocating (Float Blade Mechanism) |
| Motor Speed | Approx. 13,000 strokes/minute (Linear Motor) |
| Other Functions | Wet/Dry Use, Foam Making Mode, Pop-up Trimmer |
| Product Weight | Approx. 0.15 kg (150g) |
| Package Weight | Approx. 0.46 kg (460g) |
| Package Dimensions | 22.2 x 20.1 x 6.9 cm |
| Blade Material | Stainless Steel |

9. WARRANTY AND SUPPORT

Manufacturer's Warranty

This Panasonic shaver comes with a **12-month manufacturer's warranty** from the date of purchase.

Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear of consumable parts like blades and foils.

Customer Support

For technical assistance, service, or to inquire about replacement parts, please contact Panasonic customer support through their official website or the contact information provided with your product packaging. You can also visit the official Panasonic website for FAQs and additional resources:

www.panasonic.com