

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Udreamer](#) /

› [Udreamer Turntable User Manual](#)

Udreamer UD006-Marron

Udreamer Turntable User Manual

Model: UD006-Marron

INTRODUCTION

Thank you for purchasing the Udreamer Turntable with Integrated Preamplifier. This Hi-Fi system features 40W bookshelf speakers, Bluetooth connectivity, an aluminum platter, and a 2-speed belt drive. Designed for vinyl enthusiasts, it delivers high-fidelity sound reproduction close to the original recording. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device.



Image: The Udreamer Turntable system, featuring the main unit with a record on the platter, a clear dust cover, and two accompanying bookshelf speakers. The turntable and speakers are finished in a brown wood grain.

WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- Turntable Unit
- Bookshelf Speakers (2x)
- AT-3600L Cartridge (pre-installed or separate)
- Solid Platter
- Removable Dust Cover
- USB Cable for PC Connection
- User Manual
- RCA Cable
- 45 RPM Adapter
- Counterweight
- Platter Mat
- 9V 2A Power Adapter

SETUP GUIDE

1. Unpacking and Placement

Carefully remove all components from the packaging. Place the turntable on a stable, level surface away from direct sunlight, heat sources, and excessive vibration. Ensure adequate ventilation around the unit and speakers.

2. Assembling the Turntable

1. **Install the Platter:** Gently place the solid aluminum platter onto the spindle. Ensure it sits securely.
2. **Install the Belt:** Locate the drive belt (usually pre-installed or in a separate bag). Carefully stretch the belt around the inner rim of the platter and hook it onto the motor pulley.
3. **Place the Platter Mat:** Lay the felt platter mat on top of the platter.
4. **Install the Counterweight:** Slide the counterweight onto the rear of the tonearm. Rotate it to adjust tracking force later.
5. **Install the Dust Cover:** Attach the removable dust cover to the hinges at the back of the turntable.

40W Powerful Listening Experience

2*20W Speakers Provide you high fidelity stereo sound



Image: Exploded view of the Udreamer Turntable components, showing the main unit, platter, belt, and dust cover, illustrating how they fit together.

3. Connecting the Speakers

Connect the included bookshelf speakers to the passive speaker jacks on the rear of the turntable using the provided speaker wires. Ensure correct polarity (positive to positive, negative to negative) for optimal sound.

BELT DRIVE 2 SPEEDS

33 1/3 or 45 RPM



- Supports any size of vinyl record
- Including 7", 10" & 12" sizes.

Image: The Udreamer Turntable with its two bookshelf speakers, highlighting the internal speaker components and the 40W powerful listening experience.

4. Power Connection

Connect the 9V 2A power adapter to the DC IN port on the back of the turntable, then plug it into a wall outlet.

5. Tonearm Balance and Tracking Force Adjustment

Properly balancing the tonearm and setting the tracking force is crucial for sound quality and record longevity.

1. **Zero Balance:** With the stylus guard on, release the tonearm clamp. Rotate the counterweight until the tonearm floats freely and is perfectly level.
2. **Set Tracking Force:** Once balanced, hold the counterweight steady and rotate the numbered ring to '0'. Then, rotate the entire counterweight (including the numbered ring) counter-clockwise to the recommended tracking force for the AT-3600L cartridge, which is typically 3.5 grams.

AT-3600 CARTRIDGE

bring you delicate and outstanding sound quality



Image: Close-up view of the AT-3600L cartridge on the Udreamer Turntable, emphasizing its design for delicate and outstanding sound quality.



Image: Detailed views of the Udreamer Turntable's tonearm, showing the cartridge for accuracy, the counterweight for adjustment, and the control knobs for balance and overall control.

OPERATING INSTRUCTIONS

1. Playing a Record

1. Place a record on the platter.
2. Select the appropriate speed (33 1/3 or 45 RPM) using the speed selector switch. For 45 RPM records, place the 45 RPM adapter on the spindle if needed.
3. Remove the stylus guard from the cartridge.
4. Gently lift the tonearm using the cueing lever.
5. Move the tonearm over the desired starting groove of the record.
6. Slowly lower the cueing lever to gently drop the stylus onto the record.

7. Adjust the volume using the main volume knob.
8. To stop playback, lift the tonearm using the cueing lever, return it to the tonearm rest, and secure it with the clamp.



Image: The Udreamer Turntable showcasing its belt drive with 2 speeds (33 1/3 or 45 RPM) and compatibility with 7", 10", and 12" vinyl records.

2. Bluetooth Connectivity (Input & Output)

The Udreamer turntable supports both Bluetooth input and output.

Bluetooth Output (Connecting to Bluetooth Speakers/Headphones)

1. Ensure your Bluetooth receiver (speaker, headphones) is in pairing mode.
2. Turn the "BT OUT" knob on the turntable to activate Bluetooth output. The indicator light will flash.
3. The turntable will automatically search for and connect to nearby Bluetooth devices. Once connected, the indicator light will become solid.
4. You can now play records, and the audio will be streamed to your connected Bluetooth device.

Bluetooth Input (Playing Music from Phone/Tablet)

1. Turn the "BT IN" knob on the turntable to activate Bluetooth input. The indicator light will flash.
2. On your smartphone or tablet, search for Bluetooth devices and select "Udreamer Turntable" (or similar name).
3. Once connected, the indicator light will become solid.
4. You can now play music from your phone/tablet through the turntable's speakers.

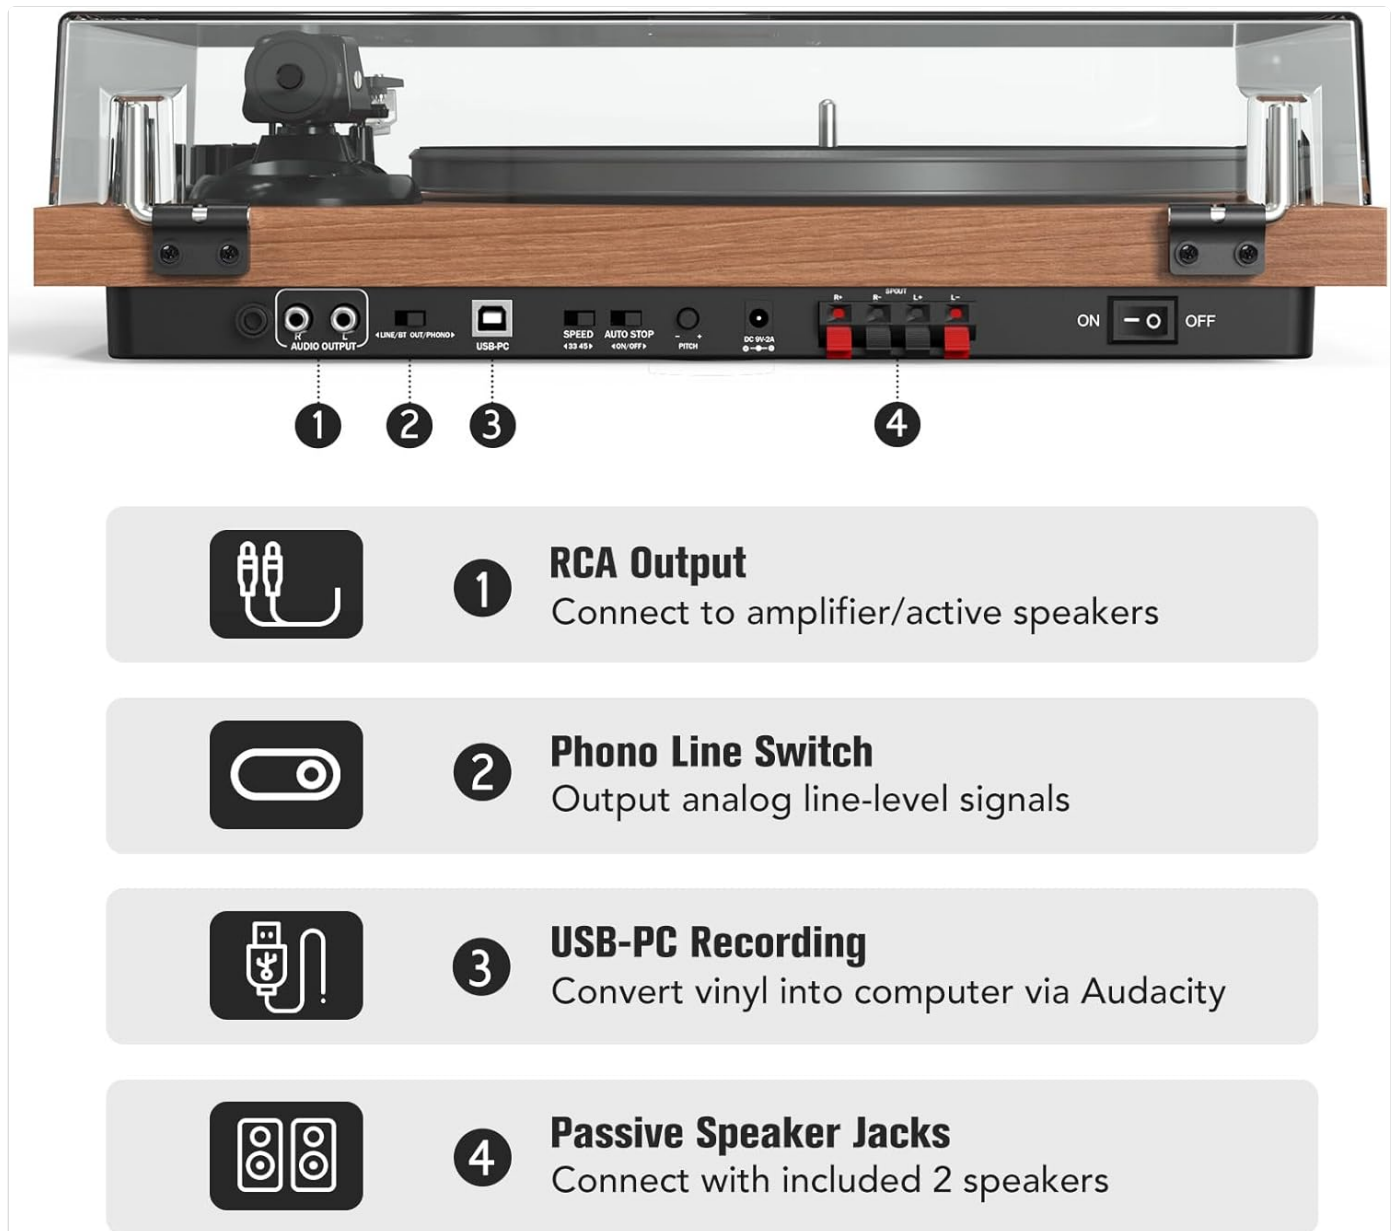


Image: The Udreamer Turntable demonstrating its dual Bluetooth output and input capabilities, showing wireless pairing with a phone and connection to Bluetooth speakers.

3. USB-PC Recording

You can convert your vinyl records into MP3 files for digital storage and playback.

1. Connect the turntable to your computer using the supplied USB cable.
2. Install audio recording software on your computer (e.g., Audacity, available for free online).
3. Follow the software's instructions to select the turntable as the input device and begin recording.
4. Play your vinyl record to record the audio.
5. Save the recorded audio as an MP3 file.

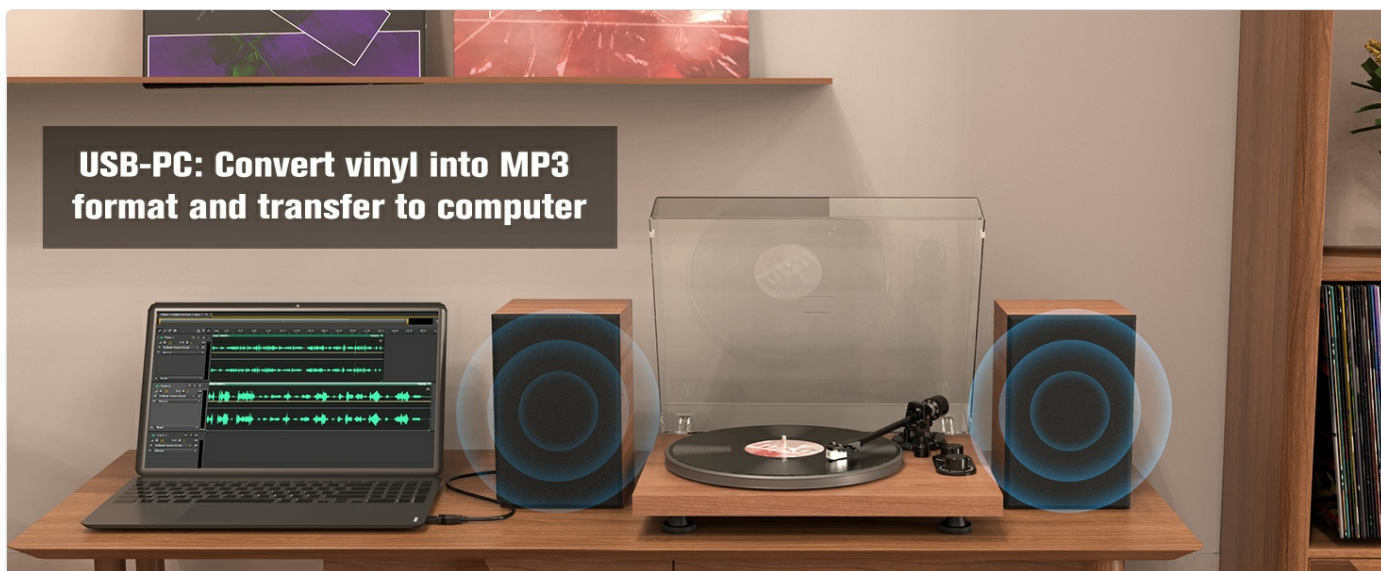


Image: The Udreamer Turntable connected to a laptop via USB, illustrating the process of converting vinyl audio to MP3 format for transfer to a computer.

4. RCA Output

The turntable features RCA output for connecting to external amplifiers or active speakers.

1. Connect the RCA cable from the "AUDIO OUTPUT" ports on the turntable to the corresponding input ports on your amplifier or active speakers.
2. Ensure the "PHONO LINE SWITCH" is set correctly based on your amplifier's input type (Phono or Line).



Image: Rear panel of the Udreamer Turntable, detailing the RCA output, Phono Line Switch, USB-PC recording port, and Passive Speaker Jacks with numerical labels for easy identification.

MAINTENANCE

1. Cleaning the Turntable

- Always unplug the turntable before cleaning.
- Use a soft, dry, lint-free cloth to wipe the dust cover and cabinet.
- For the platter and tonearm, use a slightly damp cloth, then dry immediately. Avoid harsh chemicals or abrasive cleaners.

2. Stylus Care

- Clean the stylus regularly using a soft brush designed for stylus cleaning, brushing gently from back to front.
- Avoid touching the stylus with your fingers.
- Replace the stylus (AT-3600L compatible) every 300-500 hours of playback or if you notice a degradation in sound quality.

3. Record Care

- Handle records by their edges or label.
- Store records vertically in their sleeves to prevent warping.
- Clean records with a dedicated record brush before each play to remove dust and static.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not working	Ensure power adapter is securely plugged in; try a different outlet.
No sound from speakers	Speakers not connected; volume too low; Phono/Line switch incorrect	Check speaker connections and polarity; increase volume; ensure Phono/Line switch matches your setup.
Sound distorted or skipping	Stylus dirty or worn; tracking force incorrect; record dirty or damaged	Clean stylus; re-adjust tracking force; clean record or try a different one.
Bluetooth not connecting	Device not in pairing mode; too far from turntable; interference	Ensure device is in pairing mode; move closer to turntable; reduce other wireless interference.
Platter not spinning	Drive belt dislodged or broken; motor issue	Check and re-seat the drive belt; contact customer support if belt is broken or motor is faulty.

SPECIFICATIONS

Model Name: Udreamer Platine Vinyle Système Hi-FI (UD006-Marron)

Brand: Udreamer

Connectivity Technology: Bluetooth, USB

Maximum Rotational Speed: 45 RPM (supports 33 1/3 RPM)

Material: Wood

Color: Brown

Product Dimensions: 47 x 41.5 x 37.5 cm (18.5 x 16.3 x 14.8 inches)

Weight: 9.62 Kilograms (21.2 lbs)

Included Components: Turntable, Bookshelf Speakers (2), AT-3600L Cartridge, Solid Platter, Removable Dust Cover, USB Cable, User Manual, RCA Cable, 45 RPM Adapter, Counterweight, Platter Mat, 9V 2A Power Adapter

Special Features: Detachable Speaker, Digital Recorder, Volume Control, Die-cast Aluminum Platter, Bluetooth Input and Output, Adjustable Counterweight, Adjustable Speed, Anti-resonance, Automatic Belt Drive Design, Built-in Preamplifier, Built-in Cartridge

Power Consumption (On-state): 40 watts



Image: Diagram showing the dimensions of the Udreamer Turntable and its accompanying speakers in centimeters and inches.

WARRANTY AND SUPPORT


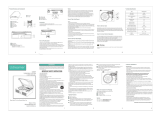 



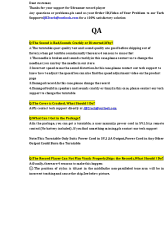
Udreamer products are designed for quality and reliability. For warranty information and technical support, please refer to the contact details provided on the product packaging or visit the official Udreamer website. Keep your purchase receipt as proof of purchase for warranty claims.

Return Policy: This product typically has a 14-day return policy for refund or replacement, subject to retailer terms.

For further assistance, you may contact the seller directly through the platform where you purchased the product.

© 2025 Udreamer. All rights reserved.

Related Documents - UD006-Marron

	<p>Udreamer UD006 Turntable System User Manual: Setup, Operation & Recording Guide</p> <p>Comprehensive user manual for the Udreamer UD006 Turntable System. Includes setup instructions, operation guides for playing records, Bluetooth connectivity, USB recording to computer, care tips, and troubleshooting.</p>
	<p>Udreamer UD001 Turntable System User Manual</p> <p>User manual for the Udreamer UD001 Turntable System, detailing product structure, components, connection, Bluetooth and vinyl playback, safety instructions, specifications, and warranty information.</p>
	<p>Udreamer UD007 Turntable System User Manual - Setup, Operation, and Features Guide</p> <p>Comprehensive user manual for the Udreamer UD007 Turntable System. This guide details setup, operation for Phono, Bluetooth, FM Radio, and USB playback, as well as encoding features, technical specifications, and maintenance instructions.</p>
	<p>Udreamer UD001 Turntable System User Manual</p> <p>Comprehensive user manual for the Udreamer UD001 turntable system, detailing product structure, connection, operation for vinyl and Bluetooth playback, safety instructions, features, specifications, package contents, service information, and warranty terms.</p>
	<p>Udreamer Record Player FAQ: Troubleshooting and Support</p> <p>Find answers to common questions about your Udreamer record player, including troubleshooting skipping, speed issues, and package contents. Contact support for assistance.</p>
	<p>Udreamer Record Player FAQ and Troubleshooting Guide</p> <p>Frequently Asked Questions (FAQ) and troubleshooting guide for the Udreamer record player, covering common issues like sound quality, skipping, speed, and power.</p>