

## Fixwal TV Stand 5566

# Fixwal TV Stand Entertainment Center

Model: TV Stand 5566

## 1. INTRODUCTION

---

Thank you for purchasing the Fixwal TV Stand Entertainment Center. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure safe and proper use of your new furniture. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



This image displays the fully assembled Fixwal TV Stand, showcasing its rustic brown finish, black metal frame, and integrated storage for a television, media players, and fabric drawers.

## 2. SAFETY INFORMATION


---

To prevent injury or damage to the product, please observe the following safety guidelines:


- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- Do not overload the shelves or drawers. Refer to specifications for weight limits.
- Utilize the included anti-toppling device to secure the TV stand to a wall, especially in households with children or pets, to prevent accidental tipping.
- Keep small parts and packaging materials away from children.
- Do not stand or climb on the TV stand.
- Ensure proper ventilation around electronic devices placed on the stand.

## 3. PRODUCT SPECIFICATIONS

Feature	Detail
Overall Dimensions (L x W x H)	63 x 13.8 x 21.7 inches
Compatible TV Sizes	43 / 50 / 55 / 60 / 65 / 70 inches
Material	Engineered Wood (MDF), Metal, Fabric
Color	Rustic Brown
Item Weight	36.2 pounds
Power Outlets	2 AC Outlets (120V/12A), 2 USB Ports (5V/2A)
Power Cord Length	5 feet

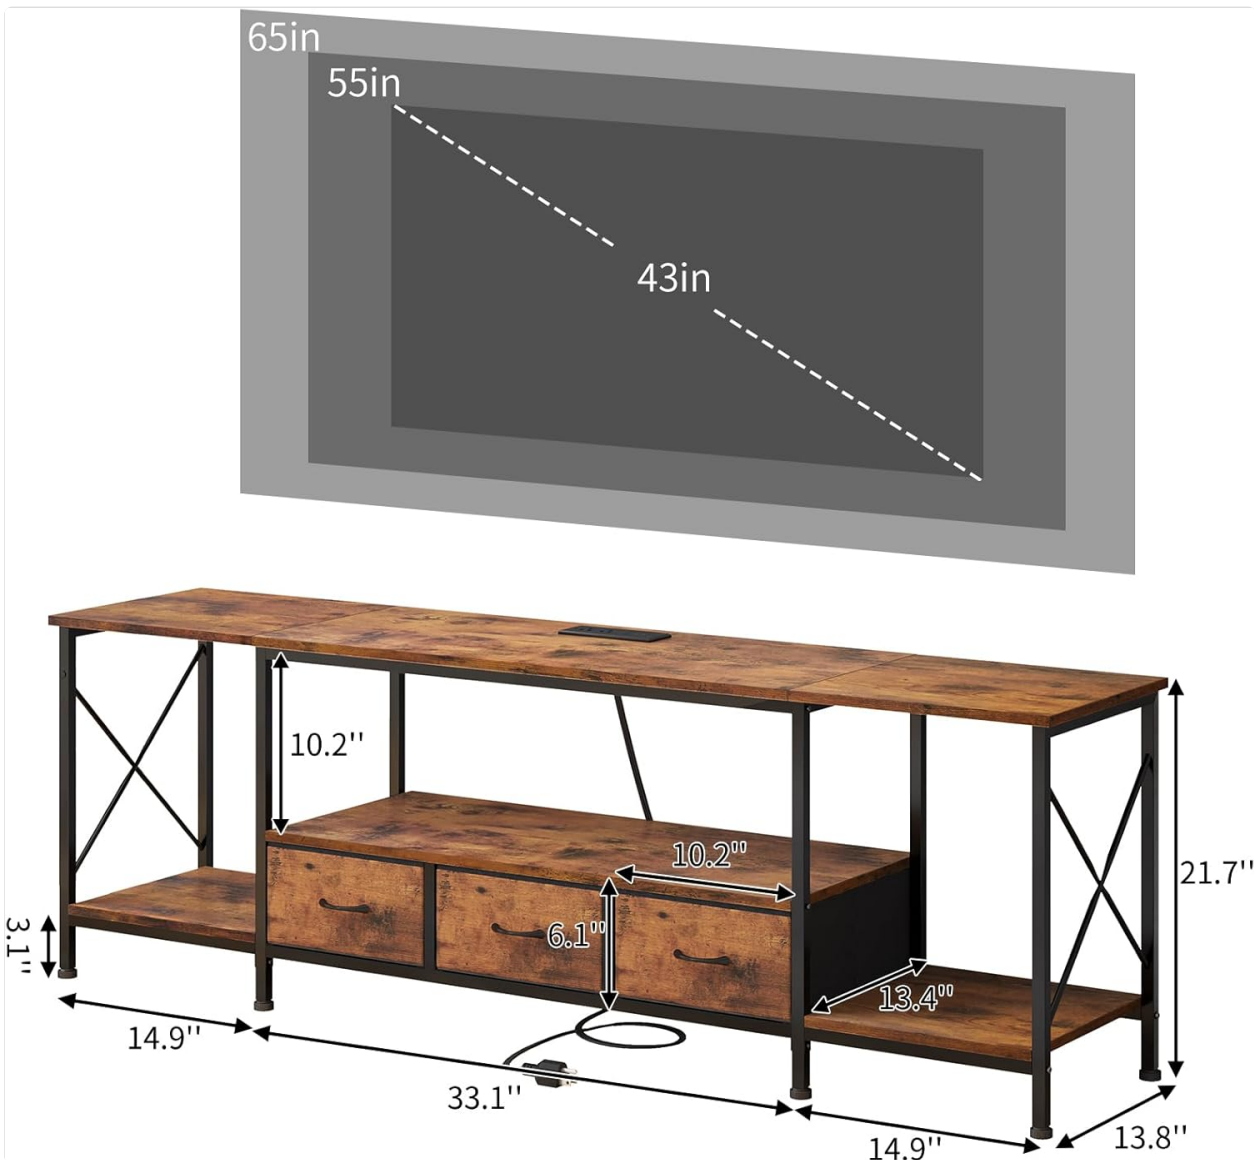

A detailed diagram illustrating the overall dimensions of the TV stand (63 L x 13.8 W x 21.7 H inches) and the internal measurements of shelves and drawer compartments, indicating compatibility for TVs from 43 to 70 inches.

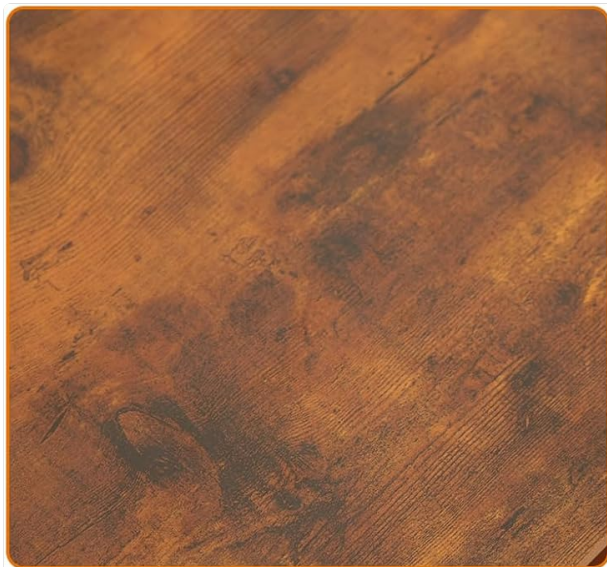

**Rustic Wood Texture**



**Strong Steel Frame**



**X Design Construction**



**Adjustable Feet**

A composite image detailing key construction elements: the rustic wood texture of the MDF board, the robust black steel frame, the stabilizing X-design on the side panels, and the adjustable plastic feet designed for leveling on uneven surfaces.

## 4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. All necessary accessories and clear step-by-step instructions are included. Please follow these steps carefully:

1. **Unpack and Identify Parts:** Carefully remove all components from the packaging. Lay them out on a soft, clean surface. Refer to the included parts list to ensure all pieces and hardware are present.
2. **Assemble the Metal Frame:** Begin by connecting the main metal frame components using the provided screws. Ensure all connections are snug but do not overtighten until the frame is fully assembled. The X-design crossbars should be installed on the back of the side frames for stability.
3. **Attach Wooden Panels:** Secure the wooden shelves and top panel to the assembled metal frame. Pay attention to the orientation of each panel to ensure proper fit and alignment.
4. **Install Power Outlet:** Integrate the power outlet unit into its designated slot on the top wooden panel. Connect any necessary wiring as per the diagram in the separate hardware instructions.
5. **Insert Fabric Drawers:** Fold and assemble the fabric drawers according to their individual instructions.

Slide them into the designated compartments. Ensure the small metal tabs are correctly oriented to prevent drawers from pushing in too far.

6. **Adjust Feet and Secure Anti-Toppling Device:** Screw the adjustable plastic feet into the bottom of the metal frame. Adjust them by rotating to level the TV stand on uneven floors. Finally, attach the anti-toppling device to the back of the TV stand and secure it to a wall stud using appropriate hardware (not always included, check package contents).



A detailed view of the adjustable plastic foot, demonstrating its ability to rotate 360 degrees to compensate for uneven flooring and ensure the stand's stability.



This image shows one of the fabric drawers partially open, illustrating its construction and capacity for storing items like books or media.


## 5. OPERATING INSTRUCTIONS

---

Once assembled, your Fixwal TV Stand is ready for use:


- **TV Placement:** Place your television centrally on the top surface. The stand is designed to accommodate TVs from 43 to 70 inches. For TVs with bases wider than 13.8 inches, it is recommended to use a separate TV bracket or mount.
- **Using Power Outlets:** Plug the TV stand's power cord into a standard wall outlet. You can then use the two AC outlets and two USB ports on the top surface to power and charge your TV, game consoles, DVD players, audio equipment, and other electronic devices.
- **Storage:** Utilize the open shelves for media players, soundbars, or decorative items. The three fabric drawers provide concealed storage for books, magazines, CDs, game cases, remotes, or other small items, helping to keep your living space organized.

## Desktop with Power Outlet

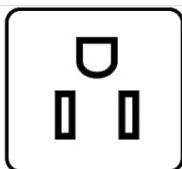

**120V/12A**

– 2 AC Outlets –

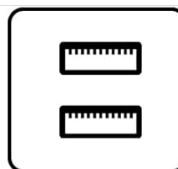

**5V/2A**

– 2 USB Ports –



**5-FOOT**

– Power Cord –



This image highlights the built-in power strip located on the top surface of the TV stand, featuring two 120V/12A AC outlets and two 5V/2A USB ports for convenient device charging.



## Open Shelves and 3 Drawers

Provide reasonable and larger storage space

This image illustrates the storage capabilities of the TV stand, featuring open shelves for electronic devices and three fabric drawers for organized storage of various items.



**It is recommended that you purchase a bracket for the underside of your TV that does not exceed 13.8inch**

This image provides a visual recommendation for purchasing a separate TV bracket if the television's base width exceeds 13.8 inches, ensuring proper support and stability.

## 6. MAINTENANCE

---

To maintain the appearance and longevity of your Fixwal TV Stand:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood.
- **Drawer Care:** The fabric drawers can be spot cleaned with a mild detergent and water. Allow to air dry completely.
- **Inspection:** Periodically check all fasteners and connections to ensure they remain tight. Re-tighten if necessary.

## 7. TROUBLESHOOTING

---

If you encounter issues during assembly or use, refer to the following common solutions:

- **Missing Parts:** If any parts are missing, double-check all packaging materials. If still missing, contact customer support with your purchase details.
- **Assembly Difficulties:** Review the assembly instructions carefully. Ensure all pieces are oriented correctly. Do not force parts together. If holes do not align, check if components are installed backward or upside down.
- **Unstable Stand:** Ensure all screws are fully tightened. Adjust the leveling feet on the bottom of the stand to compensate for uneven flooring. Verify the anti-toppling device is securely installed.
- **Drawers Not Sliding Smoothly:** Check that the fabric drawers are correctly assembled and inserted. Ensure no obstructions are in the drawer compartments. Verify the small metal tabs are facing the correct direction to allow proper drawer movement.
- **Power Outlets Not Working:** Ensure the main power cord is securely plugged into a functional wall outlet. Check if the outlet itself is receiving power. If the issue persists, discontinue use and contact customer support.

## 8. WARRANTY AND SUPPORT

---

For any questions, concerns, or assistance with your Fixwal TV Stand Entertainment Center, please contact Fixwal customer support. Please have your purchase information and model number (TV Stand 5566) ready when contacting support.

Specific warranty details may vary by retailer or region. Please refer to your purchase documentation for warranty information.