

Vetoper Mini Chainsaw -R62

Vetoper 8-Inch Cordless Mini Chainsaw Instruction Manual

Model: Mini Chainsaw -R62

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Vetoper 8-inch cordless mini chainsaw. This tool is designed for light-duty wood cutting, branch pruning, and tree trimming tasks. Please read this manual thoroughly before initial use and retain it for future reference.

2. SAFETY INFORMATION

WARNING: Always wear appropriate personal protective equipment (PPE) when operating the chainsaw. This includes safety glasses, gloves, and hearing protection.

- Ensure the work area is clear of obstructions and bystanders.
- Keep hands and body away from the chain when the tool is in operation.
- Do not operate the chainsaw in wet conditions or near flammable liquids or gases.
- Always remove the battery before performing any adjustments, maintenance, or when the tool is not in use.
- Use both hands to grip the chainsaw firmly during operation, unless performing specific one-handed tasks as instructed.
- The chainsaw features a double-sided safety switch. Ensure it is engaged before starting and disengaged when not in use.
- A safety bezel is included to prevent wood chips from flying towards the user. Ensure it is properly positioned.
- The rotatable top guard helps contain sawdust.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 8-inch Electric Chainsaw (x1)
- Quenched Chain (x1)
- Protective Sleeve (x1)

- Screwdriver (x1)
- Gloves (x1 pair)



Image 1: The Vetoper 8-inch cordless mini chainsaw shown with its included accessories: a protective sleeve, screwdriver, chain, and gloves. The battery is not included.

4. SPECIFICATIONS

Specification	Value
Brand	Vetoper
Model Number	Mini Chainsaw -R62
Power Source	Battery Powered
Horsepower	750 Watts

Voltage	20 Volts
Chain Length	8 Inches
Product Dimensions (L x W x H)	6" x 3.2" x 17.5"
Item Weight	3.32 pounds
Material	Plastic
Battery Compatibility	DeWalt 18-21V batteries (DCB200, DCB201, DCB203, DCB204, DCB205, DCB206, DCB230, DCB240, DCB246, DCB248, DCBP520, etc.)

PRODUCT PARAMETER

PRODUCT NAME	MINI CHAINSAW
BATTERY POWER	750W
CHAIN SPEED	5M / S
BARE METAL WEIGHT	800G
VOLTAGE	20V
GUIDE PLATE LENGTH	8 INCH
MOTOR DRIVEN	STRONG MOTOR
CHAIN	QUICK ADJUSTMENT

17inch

8inch

Image 2: A visual representation of the product parameters, including product name, battery power, chain speed, bare metal weight, voltage, guide plate length, motor type, and chain adjustment method.

5. SETUP

5.1 Battery Installation

This chainsaw is compatible with DeWalt 18-21V batteries (e.g., DCB200, DCB201, DCB203, DCB204, DCB205, DCB206, DCB230, DCB240, DCB246, DCB248, DCBP520). The battery is not included with the tool.

1. Ensure the chainsaw is turned off and the safety switch is engaged.
2. Align the battery with the battery port on the bottom of the chainsaw handle.
3. Slide the battery into place until it clicks securely.
4. To remove the battery, press the release button(s) on the battery and slide it out.



Image 3: Illustration demonstrating the compatibility of the chainsaw with various DeWalt 20V MAX battery models. Batteries are sold separately.

5.2 Chain Installation and Tension Adjustment

The chainsaw features a tool-free chain adjustment mechanism.

1. Ensure the battery is removed.
2. Carefully place the chain around the guide bar and sprocket. Ensure the cutting edges of the chain are facing the correct direction.
3. Position the guide bar and chain onto the chainsaw body.
4. Tighten the chain adjustment knob until the chain is snug but can still be pulled freely around the guide bar by hand. The chain should not sag from the bottom of the guide bar.
5. After initial use, check chain tension again as new chains can stretch.

5.3 Bar and Chain Oiling

IMPORTANT: This chainsaw does not have an automatic oil reservoir. The bar and chain must be manually oiled before and during use to ensure proper lubrication and prevent premature wear.

1. Before each use, apply a suitable bar and chain oil directly to the guide bar groove and the chain links.
2. Periodically reapply oil during extended operation, especially if you notice smoke or increased friction.

6. OPERATING INSTRUCTIONS

6.1 Starting and Stopping

1. Ensure the battery is securely installed.
2. Engage the double-sided safety switch by pressing it.
3. Press the trigger switch to start the chainsaw. The chain will begin to move.
4. Release the trigger switch to stop the chainsaw.
5. Disengage the safety switch when not actively cutting.

6.2 Cutting Techniques

The Vetoper mini chainsaw is designed for efficient cutting of branches and small logs up to 8 inches in diameter.

- Always maintain a firm grip with both hands on the chainsaw handle, unless performing specific tasks that allow for safe one-handed operation.
- Position the chainsaw so that the chain makes contact with the wood at a stable angle.
- Allow the chainsaw to do the work; do not force it through the wood. Excessive pressure can lead to kickback or damage to the tool.
- Be aware of potential kickback, which can occur if the tip of the guide bar contacts an object or if the wood closes in and pinches the chain.
- For branches under tension, make an undercut first to prevent pinching, then complete the cut from the top.



Image 4: The chainsaw in operation, demonstrating its high chain speed of 23.2 ft/s for efficient cutting.



Image 5: A user operating the mini chainsaw to prune a tree branch, highlighting its suitability for such tasks.

7. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your chainsaw.

7.1 Cleaning

1. Always remove the battery before cleaning.
2. Use a brush or compressed air to remove sawdust and debris from the motor housing, guide bar, and chain.
3. Wipe down the exterior with a damp cloth. Do not use harsh chemicals or abrasive cleaners.

7.2 Chain Tension

Check chain tension frequently, especially during extended use. A loose chain can derail, and a too-tight chain can cause excessive wear and reduce performance.

- If the chain slips or derails, adjust the chain tension knob as described in Section 5.2.

7.3 Chain Sharpening and Replacement

- A sharp chain is crucial for efficient and safe cutting. If the chain becomes dull or damaged, it should be sharpened or replaced.
- Refer to a qualified service technician for chain sharpening or follow manufacturer guidelines for manual sharpening.
 - Regularly replace the chain to ensure optimal cutting performance and safety.

7.4 Bar and Chain Oiling

As noted in Section 5.3, manual oiling is required. Ensure this is done consistently to prevent damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not installed correctly or discharged; Safety switch not engaged	Ensure battery is fully charged and properly seated; Engage the safety switch
Chain slips or derails	Chain tension is too loose	Adjust chain tension using the knob (refer to Section 5.2)
Poor cutting performance	Dull chain; Insufficient lubrication	Sharpen or replace chain; Manually apply bar and chain oil
Excessive smoke or friction	Lack of lubrication	Immediately stop operation and apply bar and chain oil

9. WARRANTY AND SUPPORT

Vetoper offers a 12-month replacement warranty for any quality issues with this product. For warranty claims or technical support, please contact the seller or manufacturer directly through your purchase platform.

© 2025 Vetoper. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question