

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Universal A/C Remote Control (RCEC-1000IN1-AD-KT01) Instruction Manual

ECONTROLLY RCEC-1000IN1-AD-KT01

ECONTROLLY Universal A/C Remote Control Instruction Manual


Model: RCEC-1000IN1-AD-KT01

PRODUCT OVERVIEW

The ECONTROLLY Universal A/C Remote Control is designed to operate various air conditioning units, offering a convenient replacement for your original remote. This remote is compatible with FUJITSU and many other brands, featuring a 1000-in-1 universal code database. Constructed from durable ABS environmental protection material, it provides a comfortable grip and soft silicone buttons for reliable use.

Key features include:

- Wide compatibility with 1000-in-1 universal A/C units.
- Durable ABS construction with a comfortable handle.
- Soft silicone buttons for enhanced durability and flexibility.
- Effective transmitting distance of approximately 8-10 meters (26-33 feet).
- Simple operation: no programming required, just insert batteries.

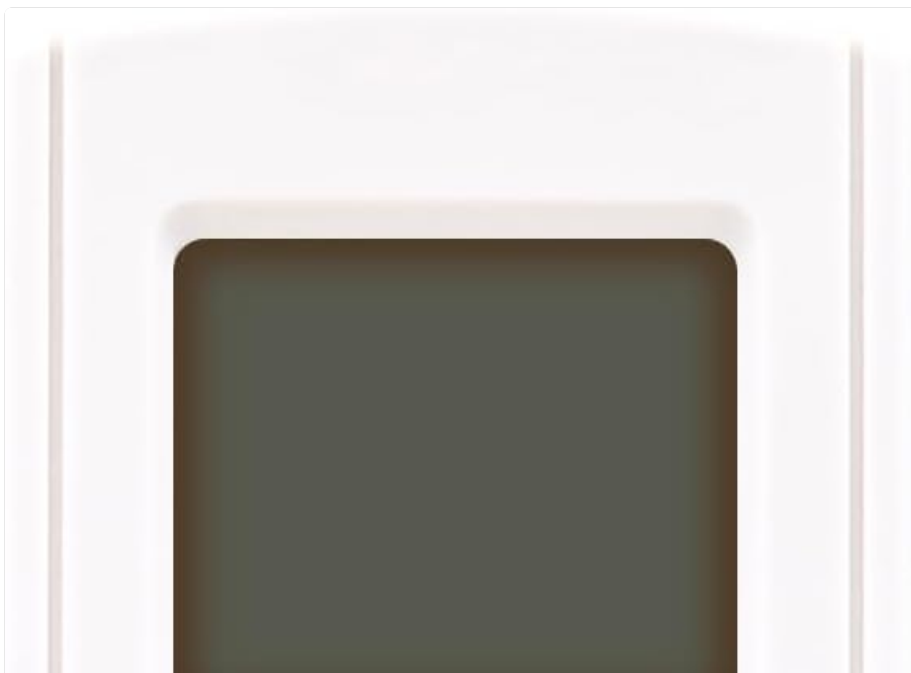

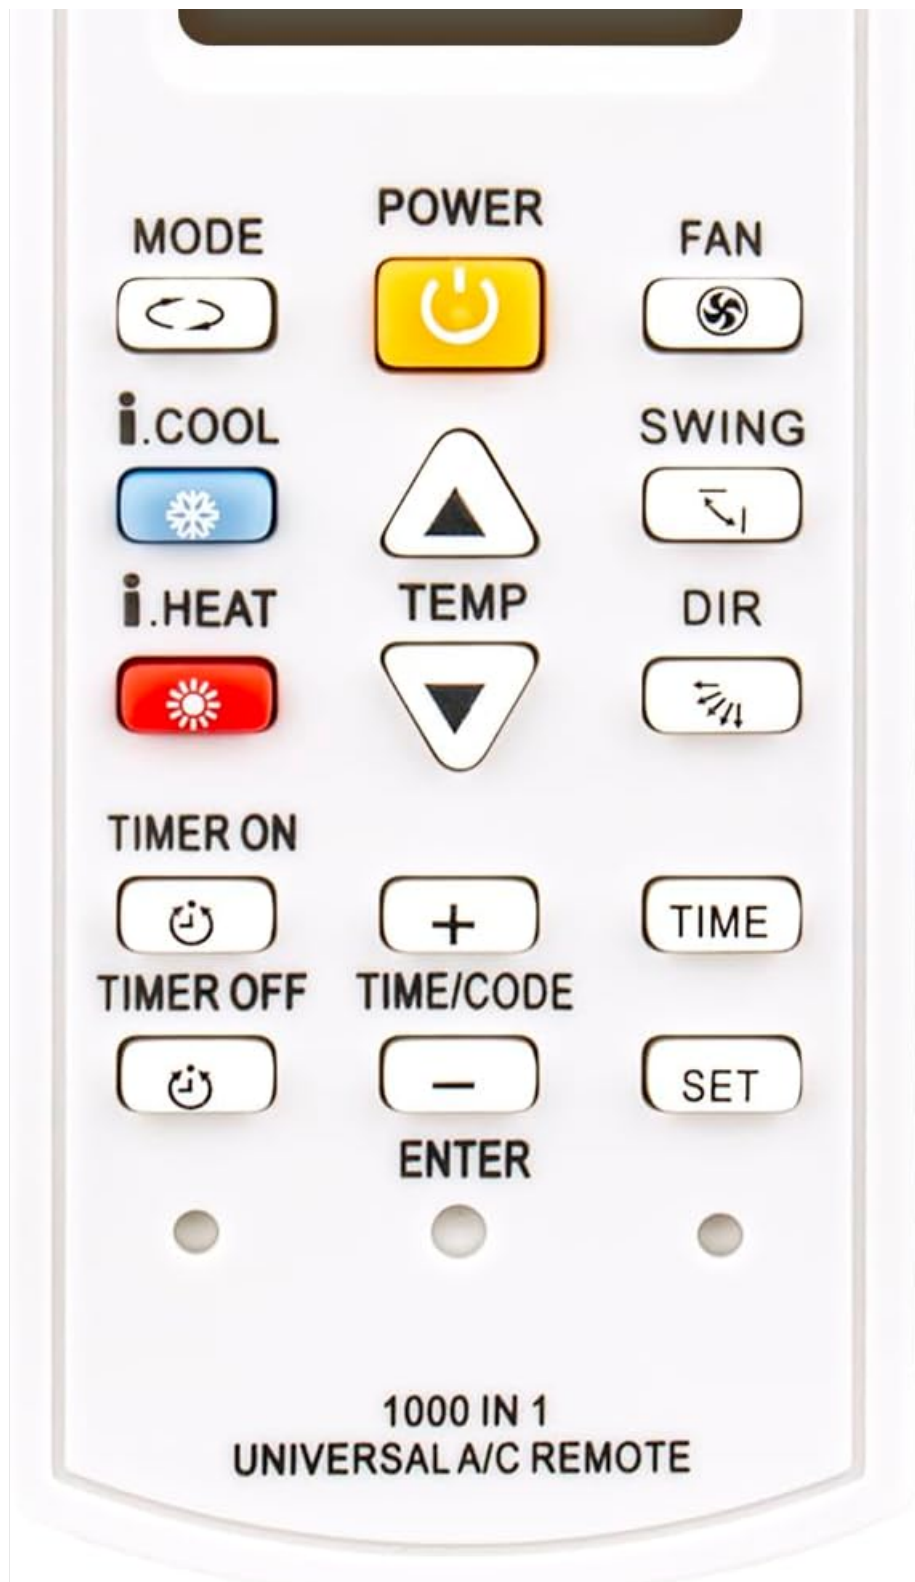


Figure 1: Front view of the ECONTROLLY Universal A/C Remote Control, showing the display and button layout.



Figure 2: Front view of the remote control with dimensions: 11.5 cm (4.53 in) length and 4.3 cm (1.69 in) width.

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the "OPEN" tab and lift to remove it.
3. Insert two AAA (UM-4/AAA/LR03) batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control is ready for use immediately after battery installation. No programming is required.





Figure 3: Rear view of the remote control with the battery compartment open, showing where to insert two AAA batteries.

OPERATING INSTRUCTIONS

This section describes the basic functions of the remote control buttons.

POWER: Turns the air conditioner unit ON or OFF.

MODE: Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).

TEMP ▲ / ▼ : Adjusts the temperature setting up or down.

FAN: Adjusts the fan speed (e.g., Low, Medium, High, Auto).

SWING: Controls the louver swing function for air direction.

DIR: Adjusts the direction of the airflow manually.

TIMER ON: Sets a timer for the unit to turn ON automatically.

TIMER OFF: Sets a timer for the unit to turn OFF automatically.

TIME/CODE (+/-): Used for setting the current time or for manual code input if required by specific A/C models (though generally not needed for this universal remote).

SET: Confirms settings or enters programming mode (if applicable).

ENTER: Confirms selections.

i.COOL / i.HEAT: Direct access buttons for Cool and Heat modes.

Note: Specific functions may vary depending on your air conditioner model. Refer to your A/C unit's manual for detailed information on compatible features.

MAINTENANCE

Cleaning the Remote

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, alcohol, or abrasive cleaning pads, as these can damage the remote's surface or internal components.
- Ensure no liquid enters the remote control, especially around buttons or the battery compartment.

Battery Replacement

- Replace batteries when the remote's operating range decreases or if the display becomes dim or unresponsive.
- Always replace both batteries at the same time with new AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	• Dead or weak batteries. • Incorrect battery polarity. • Obstruction between remote and A/C unit. • Remote out of range.	• Replace batteries with new ones. • Check battery orientation. • Remove any objects blocking the signal path. • Move closer to the A/C unit (within 8-10 meters).
Limited operating range.	• Weak batteries. • Interference from other electronic devices.	• Replace batteries. • Ensure no strong light sources or other remotes are interfering.
A/C unit does not respond to all functions.	• A/C unit does not support the specific function. • Remote code mismatch (unlikely for universal, but possible).	• Refer to your A/C unit's manual for supported features. • No programming is typically needed for this remote. If issues persist, contact support.

SPECIFICATIONS

Model Number	RCEC-1000IN1-AD-KT01
Brand	ECONTROLLY
Product Dimensions	5 x 1 x 0.25 inches (approximately 12.7 x 2.54 x 0.64 cm)
Item Weight	2.3 ounces (approximately 65 grams)
Power Source	2 x AAA Batteries (not included)
Material	ABS Environmental Protection Material
Special Feature	No programming required
Max Number of Supported Devices	18 (referring to the number of different A/C brands/models it can control via its universal database)
Compatible Devices	Air Conditioners (Universal 1000-in-1, including FUJITSU)

WARRANTY AND SUPPORT

Specific warranty information for the ECONTROLLY Universal A/C Remote Control is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product packaging or contact the manufacturer, ECONTROLLY, directly through their official website or customer service channels.

