

[Manuals.plus](#) /

> [Freaks And Geeks](#) /

> Freaks and Geeks External Battery for PS5 Controller User Manual - Model 150072

Freaks And Geeks 150072

Freaks and Geeks External Battery for PS5 Controller User Manual

Model: 150072

INTRODUCTION

This manual provides instructions for the safe and efficient use of your Freaks and Geeks External Battery for PS5 Controller. Please read this manual thoroughly before use and retain it for future reference.

The Freaks and Geeks External Battery is designed to extend the playtime of your PlayStation 5 DualSense controller, offering an additional 2500mAh capacity. It features a Type-C connection for seamless integration.

SAFETY INFORMATION

- Do not expose the battery to extreme temperatures, direct sunlight, or fire.
- Do not disassemble, modify, or attempt to repair the battery.
- Keep out of reach of children.
- Avoid dropping or subjecting the battery to strong impacts.
- Use only the provided or certified Type-C cables for charging.
- If the battery shows signs of damage, swelling, or leakage, discontinue use immediately.

PACKAGE CONTENTS

- 1 x Freaks and Geeks External Battery for PS5 Controller (Model: 150072)
- 1 x Type-C Charging Cable (*Note: PS5 controller not included*)



FREAKS & GEEKS




LONG
AUTONOMY
+150%



FOR/
POUR

PS5 / PS5 SLIM

Perfect ergonomic:
play and charge your
controller at the same time
(controller not included)

Ergonomie parfaite:
jouez et chargez votre
manette en même temps
(manette non incluse)

FOR/
POUR

PS5 / PS5 SLIM



EXTERNAL
BATTERY FOR
CONTROLLER

BATTERIE EXTERNE
POUR MANETTE



Image: Freaks and Geeks External Battery for PS5 Controller in its retail packaging, showing the product and brand.

SETUP

Attaching the External Battery to your PS5 Controller

1. Ensure your PS5 DualSense controller is clean and free of debris around the Type-C port.
2. Align the Type-C connector of the external battery with the Type-C port on your PS5 controller.
3. Gently push the external battery onto the controller until it is securely seated. The battery should click into place or feel firmly attached. Do not force it.



Image: Diagram illustrating the correct method to attach the external battery to the PS5 controller's USB-C port.



Image: Front view of the Freaks and Geeks external battery securely attached to a PS5 DualSense controller.

OPERATING INSTRUCTIONS

Charging the External Battery and Controller

The external battery charges simultaneously with the PS5 controller when connected to a power source via the Type-C cable. The battery features an LED indicator to show its charge status.

1. Connect the provided Type-C charging cable to the external battery's charging port.
2. Connect the other end of the Type-C cable to a compatible USB power adapter (not included) or a PS5 console USB port.
3. The LED indicator on the external battery will illuminate to show charging status.
4. Once fully charged, the LED indicator will change or turn off (refer to specific LED behavior below).

LED Indicator Status

- **Solid Red:** Battery is charging.
- **Solid Green:** Battery is fully charged.
- **Flashing Red:** Low battery warning.
- **No Light:** Battery is off or fully discharged.



Image: Side view of the external battery attached to a PS5 controller, highlighting the battery's display and charging port.

MAINTENANCE

- Clean the external battery with a soft, dry cloth. Do not use liquid cleaners or solvents.
- Store the battery in a cool, dry place away from direct sunlight when not in use.
- If storing for an extended period, charge the battery to approximately 50% capacity to prolong its lifespan.
- Avoid exposing the Type-C connector to dust or moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Battery not charging.	Loose cable connection, faulty cable, or power source issue.	Ensure Type-C cable is securely connected. Try a different Type-C cable or power source.
Battery not powering controller.	Battery not securely attached, battery discharged.	Re-attach the external battery firmly to the controller. Charge the external battery.

Problem	Possible Cause	Solution
Battery gets hot during use/charging.	Normal operation (slight warmth), or potential malfunction.	Slight warmth is normal. If it becomes excessively hot, disconnect immediately and discontinue use. Contact manufacturer support if concern persists.

SPECIFICATIONS

Model Number:	150072
Battery Capacity:	2500 mAh
Battery Cell Type:	Lithium Polymer
Voltage:	3.7 Volts
Input/Output:	USB Type-C
Dimensions (L x W x H):	5.91 x 1.57 x 1.97 inches (approx.)
Compatibility:	PlayStation 5 DualSense Controller

WARRANTY INFORMATION

Specific warranty details for this product are not provided within this manual. Please refer to the manufacturer's official website or your purchase documentation for comprehensive warranty terms and conditions.

SUPPORT

For technical support, troubleshooting assistance beyond this manual, or inquiries regarding your Freaks and Geeks External Battery, please visit the official Freaks and Geeks website or contact their customer service department. Contact information is typically available on the product packaging or the manufacturer's website.

