

[Manuals.plus](#) /

› [VivaEase](#) /

› VivaEase Vacuum Beard Trimmer User Manual

VivaEase Vacuum Beard Trimmer (B0DBLNFLCW)

VivaEase Vacuum Beard Trimmer User Manual

Model: Vacuum Beard Trimmer (B0DBLNFLCW)

1. INTRODUCTION

Thank you for choosing the VivaEase Vacuum Beard Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new grooming device. Please read these instructions thoroughly before first use and retain them for future reference.

2. SAFETY INFORMATION

To reduce the risk of electric shock, injury, or damage, always observe the following safety precautions:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- Always unplug the trimmer from the power outlet immediately after charging.
- Do not use the trimmer if it is damaged. Inspect the trimmer and its accessories before each use.
- Keep the charging cable away from heated surfaces.
- Only use the charging cable provided with the trimmer.
- Do not immerse the charging adapter in water or other liquids.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- VivaEase Vacuum Beard Trimmer

- Long Hair Comb (11-20mm)
- Short Hair Comb (1-10mm)
- USB Charging Cable
- Cleaning Brush



Image 1: The VivaEase Vacuum Beard Trimmer shown with its two adjustable comb attachments.

4. PRODUCT FEATURES

The VivaEase Vacuum Beard Trimmer is designed for efficient and clean grooming:

- **Integrated Vacuum System:** Captures trimmed hairs directly into an internal compartment, minimizing mess. Features two-speed adjustment for strong adsorption.
- **Adjustable Length Settings:** Two comb attachments provide 20 length settings from 1 mm to 21 mm, controlled via a calibration dial.
- **Powerful Battery:** Offers over 91 minutes of continuous use on a single charge. Convenient USB charging.
- **IPX7 Waterproof:** Fully washable design for easy cleaning under running water.
- **LED Display:** Shows power left, cleaning reminder, travel lock status, and low battery warning.
- **Precision Blades:** High-precision blades designed for a smooth and close cut, gentle on sensitive skin.



Image 2: Illustration of the vacuum design, showing trimmed hairs being drawn into the trimmer's internal chamber during use.

TWO COMBS, ALL NEEDS COVERED

Easy to use calibration dial with 20 trim length Settings to meet everyday styling needs



Long Hair Comb
Ideal for long Beards
(11-20mm)



Short Hair Comb
Ideal for long Beards
(1-10mm)



Image 3: Detail of the length adjustment dial on the trimmer, demonstrating how to select trim lengths from 1mm to 21mm using the two included combs.

RECHARGEABLE & LED DISPLAY



Cleaning Reminder



90 Mins Shave



Travel Lock



Low Battery Warning



PC/MAC



USB Charger



Power Bank



Car Charge

Image 4: The trimmer's LED display indicating 'POWER LEFT' and various USB charging options including PC/MAC, USB charger, power bank, and car charge.

5. SETUP

5.1 Initial Charging

1. Before first use, fully charge the trimmer for approximately 2 hours.
2. Connect the USB charging cable to the trimmer's charging port and plug the other end into a compatible USB power source (e.g., computer, USB wall adapter, power bank).
3. The LED display will indicate charging status. A full charge provides over 91 minutes of cordless operation.

5.2 Attaching Comb Attachments

1. Ensure the trimmer is turned off.
2. Select the desired comb attachment (short for 1-10mm, long for 11-20mm).
3. Align the comb with the trimmer head and push it firmly until it clicks into place.

4. To remove, gently pull the comb attachment away from the trimmer head.

6. OPERATING INSTRUCTIONS

6.1 Turning On/Off and Speed Adjustment

- Press the power button once to turn on the trimmer at the default speed.
- Press the power button a second time to switch to the higher speed setting.
- Press the power button a third time to turn off the trimmer.

6.2 Adjusting Trim Length

1. With a comb attachment installed, rotate the calibration dial located on the trimmer body.
2. Align the desired length setting (e.g., 3mm, 15mm) with the indicator mark.
3. Ensure the comb is securely locked at the chosen length before trimming.

6.3 Trimming Techniques

- For best results, ensure your beard is clean and dry before trimming.
- Start with a longer length setting than desired and gradually reduce it to achieve your preferred style.
- Move the trimmer against the direction of hair growth for an even cut.
- Use smooth, controlled strokes.
- For precise edging or detailing without a comb, remove the comb attachment and use the trimmer blades directly.



Image 5: A detailed view of the trimmer's precision blades, illustrating their capability for smooth and close cutting without a comb attachment.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your trimmer.

7.1 Cleaning the Trimmer

1. Turn off the trimmer and disconnect it from any charging source.
2. Remove the comb attachment.
3. Empty the hair collection chamber by opening the designated compartment. Dispose of collected hair.
4. Rinse the trimmer head and blades under running water. The trimmer is IPX7 waterproof, allowing for easy rinsing.
5. Use the provided cleaning brush to remove any stubborn hair particles from the blades and vacuum intake.
6. Allow all parts to air dry completely before reassembling or storing.

7.2 Cleaning Reminder

The trimmer features an innovative cleaning reminder function on its LED display. When this icon appears, it indicates that the trimmer should be cleaned to maintain performance and hygiene.



Image 6: The VivaEase trimmer being held under running water, demonstrating its IPX7 waterproof capability for easy cleaning.

8. TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common problems and solutions:

- **Trimmer not turning on:** Ensure the trimmer is charged. If the battery is low, connect it to a power source.
- **Poor trimming performance:** Clean the blades and hair collection chamber. Ensure the comb attachment is correctly seated. The blades may require oiling (use a small drop of light machine oil if available, not included).
- **Vacuum not collecting hair effectively:** Check if the hair collection chamber is full and needs emptying. Ensure the vacuum intake is clear of debris. Select the higher speed setting for stronger suction.
- **Trimmer stops during use:** The battery may be depleted. Recharge the trimmer.
- **Cleaning reminder icon persists:** Ensure all hair has been removed from the blades and vacuum chamber,

and the trimmer has been thoroughly rinsed and dried.

9. SPECIFICATIONS

Feature	Detail
Model	B0DBLNFLCW
Brand	VivaEase
Power Source	Battery Powered
Material	Stainless Steel (Blades)
Waterproof Rating	IPX7
Adjustable Lengths	1-21mm (with 2 comb attachments)
Battery Life	Over 91 minutes
Recommended Uses	Beard, Mustache, Facial Hair
Package Dimensions	8.78 x 5.47 x 2.48 inches
Weight	15.17 ounces

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact VivaEase customer service directly through their official website or the retailer where the product was purchased. Please have your model number (B0DBLNFLCW) and purchase date available when contacting support.