

ECONTROLLY AKB73715642

ECONTROLLY AKB73715642 Replacement Remote Control User Manual

Model: AKB73715642

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your ECONTROLLY AKB73715642 replacement remote control. This remote is designed to be compatible with various LG Commercial Display models, offering a direct replacement without the need for complex programming.

Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

2. PRODUCT FEATURES

- **Direct Replacement:** Specifically designed to replace the original AKB73715642 remote for LG Commercial Displays.
- **No Programming Required:** Operates immediately upon battery installation.
- **Infrared Technology:** Utilizes standard infrared signals for reliable communication with your display.
- **Ergonomic Design:** Features a comfortable grip and clearly labeled buttons for ease of use.
- **Wide Compatibility:** Supports a broad range of LG Commercial Display models.

3. SETUP

3.1 Battery Installation

The remote control requires two (2) AAA ALKALINE batteries for operation. Rechargeable batteries are not recommended.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image 1: Front view of the ECONTROLLY AKB73715642 replacement remote control. This image shows the layout of the buttons, including power, number keys, navigation, and function buttons.

Important: Batteries are not included with the remote control. Do not use rechargeable batteries.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

Once batteries are installed, the remote control is ready for use. Point the remote directly at the infrared receiver on your LG Commercial Display and press the desired button.

- **Power (Red Button):** Turns the display ON or OFF.
- **Input:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** For direct channel selection or data entry.
- **Volume (+/-):** Adjusts the audio volume.
- **Mute:** Silences the audio output.

- **Navigation (Up/Down/Left/Right, OK):** Used to navigate menus and confirm selections.
- **Settings:** Accesses the display's main settings menu.
- **Back/Exit:** Returns to the previous screen or exits the current menu.



Image 2: A user operating the remote control with an LG Commercial Display setup. This illustrates the typical usage scenario for the remote.

4.2 Compatible LG Commercial Display Models

This remote control is compatible with the following LG Commercial Display models:

- 42WL30MS-D
- 55WL30MS-D
- 60WL30MS-D
- 47WL30MS-D
- 55LV35A
- 47LV35A-5B
- 42WL30MS
- 47LV35A
- 65LS33A

- 47LS35A
- 55LS35A
- 49SM5CB
- 32LS33A
- 55LS33A5BC
- 47LS55A5B
- 42LS33A
- 47WL30MS
- 55WL30MS
- 60WL30MS
- 55LS33A5DC
- 42WL30MSD
- 47WL30MSD
- 55WL30MSD
- 60WL30MSD
- 47LS33A
- 42LS35A
- 55LS33A

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these may damage the surface or internal components.

5.2 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

5.3 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA ALKALINE batteries. Dispose of used batteries according to local regulations.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--------------------------------------|---|---|
| Remote is not working. | Dead or incorrectly inserted batteries. Obstruction between remote and display. Remote is out of range. | Check battery polarity and replace with fresh AAA ALKALINE batteries. Ensure a clear line of sight to the display's IR receiver. Move closer to the display (within 33 feet). |
| Buttons are unresponsive or delayed. | Low battery power. | Replace batteries with new AAA ALKALINE batteries. |

| Problem | Possible Cause | Solution |
|--------------------------------------|----------------------------------|---|
| Remote does not control the display. | Display model is not compatible. | Verify your LG Commercial Display model is listed in the "Compatible LG Commercial Display Models" section (Section 4.2). |

7. SPECIFICATIONS



6.7 inch



Image 3: The ECONTROLLY AKB73715642 remote control displaying its physical dimensions (6.7 inches length, 2.0 inches width).

| Feature | Detail |
|---------------------------------|--|
| Brand | ECONTROLLY |
| Model | AKB73715642 |
| Connectivity Technology | Infrared |
| Special Feature | Pre Programmed |
| Compatible Devices | LG Commercial Displays (specific models listed in Section 4.2) |
| Max Number of Supported Devices | 1 |
| Battery Type | 2 x AAA ALKALINE batteries (not included) |
| Maximum Range | 33 Feet |
| Item Weight | 50 Grams |
| Item Dimensions (L x W x H) | 6.75" x 2" x 0.56" |
| Color | Black |

8. WARRANTY INFORMATION

This ECONTROLLY remote control comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

Please retain your proof of purchase for warranty claims.

9. SUPPORT

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact the seller or manufacturer directly through your purchase platform. Provide your product model number (AKB73715642) and a detailed description of the issue for efficient support.