

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Replacement Remote Control User Manual for Onn Soundbar Models 100020788 and 100024201

ECONTROLLY 100020788, 100024201

ECONTROLLY Replacement Remote Control User Manual

For Onn Soundbar Models 100020788 and 100024201

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY Replacement Remote Control, designed for use with Onn Soundbar models 100020788 and 100024201. This remote control is an infrared type and does not require any programming for operation. Simply insert the batteries, and it is ready for use with compatible soundbar models.

2. SETUP

2.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Important Note:

- Only use AAA ALKALINE batteries. Do not use rechargeable batteries.
- Batteries are not included with the remote control.
- Ensure correct battery polarity to prevent damage to the remote control.

3. OPERATING INSTRUCTIONS

This remote control is pre-programmed and ready to use with compatible Onn Soundbar models 100020788 and 100024201 once batteries are installed. Point the remote control directly at the soundbar's infrared receiver for optimal performance.





Image 3.1: Front view of the remote control with button layout.

This image displays the front of the ECONTROLLY replacement remote control. Key buttons visible include Power, Bluetooth, Mute,

3.1. Button Functions

Button	Function
Power ()	Turns the soundbar on or off.
Bluetooth (📶)	Switches the soundbar to Bluetooth input mode.
Mute ()	Mutes or unmutes the soundbar audio output.
VOL + / VOL -	Adjusts the volume level up or down.
Play/Pause ()	Plays or pauses audio playback.
Skip Forward ()	Skips to the next track or chapter.
Skip Backward ()	Skips to the previous track or chapter.
AUX	Selects the Auxiliary input source.
OPTICAL	Selects the Optical input source.
MUSIC	Activates the Music sound mode.
MOVIE	Activates the Movie sound mode.
TALK	Activates the Talk sound mode (e.g., for enhanced dialogue).

4. MAINTENANCE

4.1. Battery Replacement

When the remote control's range decreases or it becomes unresponsive, it is time to replace the batteries. Follow the battery installation steps outlined in Section 2.1. Always replace both AAA ALKALINE batteries at the same time with new ones.

4.2. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the remote's finish or internal components.

Avoid exposing the remote control to excessive moisture, direct sunlight, or extreme temperatures.

5. TROUBLESHOOTING

• Remote not responding:

- Ensure the remote is pointed directly at the soundbar's infrared receiver.
- Check if there are any obstructions between the remote and the soundbar.
- Replace the batteries with fresh AAA ALKALINE batteries, ensuring correct polarity.
- Verify that the soundbar is powered on.

• Short operating range:

- This usually indicates low battery power. Replace the batteries.
- Ensure there are no strong light sources (like direct sunlight or bright fluorescent lights) interfering with the infrared signal.

• Specific button not working:

- Clean the remote control, especially around the buttons, to ensure no debris is preventing proper contact.
- If only one button is unresponsive after cleaning and battery replacement, the remote may be faulty.



5.9 inch



Image 6.1: Remote control dimensions.

This image illustrates the physical dimensions of the remote control, indicating a length of 5.9 inches and a width of 1.57 inches.

Product Dimensions: 3.94 x 1.57 x 0.59 inches (L x W x H)

Item Weight: 1.76 ounces

Batteries Required: 2 x AAA ALKALINE (not included)

Compatibility: Onn Soundbar Models 100020788, 100024201

Special Feature: Pre-Programmed (No setup required)

Color: Black

7. PACKAGE CONTENTS

The package for the ECONTROLLY Replacement Remote Control typically includes:

- 1 x ECONTROLLY Replacement Remote Control

Note: Batteries and additional instructions are not included in the package.

8. WARRANTY AND SUPPORT

Specific warranty information for this ECONTROLLY product is not provided in the product details. For any support inquiries or issues, please refer to the seller's contact information or the platform where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DBLZPJ6S>

More documents and user manuals: <https://manuals.plus/>