

ECONTROLLY AXD7407

ECONTROLLY AXD7407 Replacement Remote Control User Manual


For Pioneer DVD/CD Receivers and Speaker Systems

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your ECONTROLLY AXD7407 replacement remote control. This remote is designed to be a direct replacement for the original Pioneer AXD7407 remote, offering seamless compatibility and ease of use without requiring any programming.

2. PRODUCT OVERVIEW

The ECONTROLLY AXD7407 is an infrared remote control specifically manufactured to operate various Pioneer DVD/CD Receiver and Speaker System models. It features a standard layout with all necessary functions for controlling your compatible audio-visual equipment.

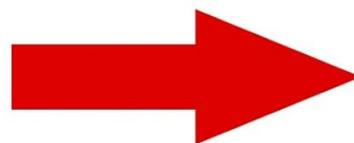

Our Replace Remote

Original Remote

Image 2.1: Comparison showing the ECONTROLLY replacement remote control alongside the original Pioneer remote control, highlighting their similar design and button layout.

3. SETUP

3.1. Battery Installation

To begin using your remote control, you must install batteries. This remote requires AAA ALKALINE batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

Important: Do not use rechargeable batteries. Only AAA ALKALINE batteries are recommended for optimal performance and to prevent potential damage.

3.2. Initial Use

This remote control is pre-programmed and does not require any setup or coding. Once batteries are installed, it is ready for immediate use with compatible Pioneer devices.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor on your Pioneer DVD/CD Receiver or Speaker System. Ensure there are no obstructions between the remote and the device.



Image 4.1: An illustration of a user operating a remote control towards a home theater system, demonstrating typical usage.

All buttons on the remote correspond to their labeled functions. For specific operations related to your Pioneer device, refer to your device's original user manual.

- **Power (STANDBY/ON):** Turns the device on or off.
- **MUTE:** Mutes or unmutes the audio.
- **FM/AM TUNER:** Selects the FM or AM radio band.
- **DISPLAY:** Changes the display information.
- **DVD/CD:** Selects the DVD or CD input source.

- **Volume (+/-):** Adjusts the volume level.
- **Number Buttons (0-9):** For direct track selection or input.
- **Navigation (ST-, ENTER, ST+):** For menu navigation and selection.
- **Play/Pause/Stop/Skip:** Standard media playback controls.

5. COMPATIBILITY

This ECONTROLLY AXD7407 replacement remote control is compatible with the following Pioneer DVD/CD Receiver and Speaker System models:

- XV-DV250
- XV-DV350
- XV-DV240
- XV-DV232
- XV-DV131
- S-DV232
- S-DV131
- S-DV240SW
- S-DV340ST
- S-DV250
- S-DV750ST
- S-DV350SW

If your model is not listed, please verify compatibility with the manufacturer before purchase.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes. Remove batteries if the remote will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

7.1. Remote Control Not Working

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-) and are not depleted. Replace with fresh AAA ALKALINE batteries if necessary.
- **Line of Sight:** Make sure there are no objects blocking the path between the remote control and the infrared sensor on your Pioneer device.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically up to 20 feet or 6 meters).
- **Device Power:** Confirm that your Pioneer DVD/CD Receiver or Speaker System is powered on.

7.2. Specific Functions Not Responding

- Verify that the function you are trying to use is supported by your specific Pioneer model.
- Some functions may require the device to be in a specific mode (e.g., DVD mode for DVD playback controls).

8. SPECIFICATIONS

- **Model:** AXD7407
- **Type:** Infrared Remote Control
- **Power Source:** 2 x AAA ALKALINE Batteries (not included)
- **Special Feature:** Pre-Programmed (no setup required)
- **Color:** Black
- **Product Dimensions:** Approximately 3.94 x 1.57 x 0.59 inches (10 x 4 x 1.5 cm)
- **Item Weight:** Approximately 1.76 ounces (50 grams)





1.9 inch

Image 8.1: The ECONTROLLY AXD7407 remote control with its approximate length (7.6 inches) and width (1.9 inches) indicated.

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your ECONTROLLY AXD7407 replacement remote control, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for warranty claims, if applicable.