

[manuals.plus](#) /

› [Grundig](#) /

› [Grundig Wireless LED Light Bar with Motion Detector - Instruction Manual](#)

Grundig 8711252574158

Grundig Wireless LED Light Bar with Motion Detector

Model: 8711252574158 | Brand: Grundig

INTRODUCTION

This manual provides instructions for the Grundig Wireless LED Light Bar with Motion Detector. This smart LED lamp is designed for use in cabinets, closets, kitchen furniture, or any dark area requiring additional illumination. It features a sleek design and offers three operating modes: continuously on, off, and automatic motion detection.

SETUP AND INSTALLATION

Follow these steps to install your LED light bar:

- 1. Mount the Metal Brackets:** Select the desired location for the light bar. Mount the two metal brackets, ensuring a minimum spacing of 20 cm (approximately 7.9 inches) between them.
- 2. Place the LED Lamp:** Carefully place the LED light bar into the mounted metal brackets.
- 3. Secure Attachment:** The integrated magnets within the light bar will securely hold it in place on the metal brackets.



Image: Grundig Wireless LED Light Bar with Motion Detector. The image shows the sleek, white LED light bar, highlighting its compact design suitable for under-cabinet installation.

OPERATING MODES

The Grundig LED Light Bar offers three operating modes for versatile use:

- **ON Mode:** The light remains continuously on.
- **OFF Mode:** The light is turned off.
- **AUTO (Motion Detection) Mode:** The light automatically turns on when motion is detected and turns off after a period of inactivity. This mode is energy-efficient.

To switch between modes, locate the mode selection switch on the device and slide it to the desired setting.

MAINTENANCE

To ensure optimal performance and longevity of your Grundig LED Light Bar, follow these maintenance guidelines:

- **Cleaning:** Wipe the surface of the light bar with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Charging:** Recharge the light bar via its USB port when the battery is low. Ensure you use a compatible 5V

DC, 1A power source.

- **Storage:** If storing the device for an extended period, ensure it is fully charged and stored in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your LED light bar, refer to the following common solutions:

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted.	Recharge the light bar using the provided USB cable.
Motion sensor not working in AUTO mode.	Insufficient ambient light or sensor obstruction.	Ensure the sensor is not blocked and test in a darker environment. Verify the mode switch is set to AUTO.
Light flickers or is dim.	Low battery.	Recharge the light bar.

SPECIFICATIONS

Brand	Grundig
Model Number	8711252574158
Power	1.5 Watts
Voltage	5 Volts DC
Current	1 Ampere
Number of LEDs	48
Luminous Flux	85 Lumens
Dimensions (L x W x H)	0.45 x 3.6 x 0.15 cm
Weight	187 grams
Material	Metal
Color	White
Special Features	Motion Detector
Power Source	Battery Powered (USB Rechargeable)
Installation Type	Surface Mount
Specific Use	Kitchen, Cabinet, Closet Lighting

WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details is typically provided with the product packaging or on the manufacturer's official website. Please refer to those resources for the most accurate and up-to-date information.

For further assistance, please contact Grundig customer service.

© 2024 Grundig. All rights reserved.