

Nuwave Nuwave Pro-Smart Grill & Air Fryer Oven

Nuwave Pro Smart Air Fryer Oven Combo User Manual

Model: Nuwave Pro-Smart Grill & Air Fryer Oven

Brand: Nuwave

1. INTRODUCTION

The Nuwave Pro Smart Air Fryer Oven Combo is a versatile kitchen appliance designed to simplify your cooking experience. It combines the functionalities of an air fryer, grill, and oven, offering a wide range of cooking methods including air frying, grilling, baking, broiling, toasting, reheating, warming, and slow cooking. Featuring a unique Powerport™ Plug-In Grill with sheath heating coils for authentic char flavor, a 2024 improved convection system for even cooking, and an integrated smart temperature probe, this appliance ensures precise and delicious results every time. With 100 easy-cook presets and 50 memory slots for custom recipes, it caters to both novice and experienced cooks.

2. WHAT'S INCLUDED

Your Nuwave Pro Smart Air Fryer Oven Combo package includes the following components:

- 1 x Nuwave Pro Smart Air Fryer Oven Combo Unit
- 1 x Non-stick Plug-in Grill
- 1 x Baking and Drip Pan
- 1 x Air Fry Basket
- 1 x Wire Cooking Rack
- 1 x Digital Smart Probe
- 1 x User Manual (this document)
- 1 x Quick Guide
- 1 x Recipe Book

100 *Easy-Cook* Presets



7 Functions



50 Memory Slots



Image: The Nuwave Pro Smart Air Fryer Oven Combo displayed with its various accessories, including the plug-in grill, baking pan, air fry basket, and wire rack.

3. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent personal injury or property damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is plugged into a grounded outlet. Do not immerse the cord, plug, or appliance in water or other liquids.
- **Hot Surfaces:** The appliance surfaces become hot during and after operation. Always use oven mitts or gloves when handling hot components.
- **Placement:** Do not place the unit on or near a hot gas burner, electric burner, or in a heated oven or on a stovetop. Ensure adequate ventilation around the appliance.
- **Children:** Keep the appliance out of reach of children. Close supervision is necessary when any appliance is used by or near children.
- **Maintenance:** Do not attempt to repair the appliance yourself. Refer to qualified service personnel for repairs.
- **Food Safety:** Always cook food to safe internal temperatures to prevent foodborne illness.

4. SETUP

Follow these steps to set up your Nuwave Pro Smart Air Fryer Oven Combo for the first time:

1. **Unboxing:** Carefully remove all packaging materials, including plastic covers and tape from the unit and accessories.
2. **Initial Cleaning:** Before first use, wipe down the interior and exterior of the unit with a damp cloth. Wash all accessories (plug-in grill, baking/drip pan, air fry basket, wire rack) with warm, soapy water.
3. **Rack Positions:** The oven has three rack positions. Position 1 is the lowest, Position 2 is the middle, and Position 3 is the highest.
4. **Inserting Plug-in Grill:** For grilling, slide the drip pan into the bottom of the unit. Then, insert the plug-in grill into Position 1 with the grill plug facing the back of the unit. Push until it securely connects to the grill power connector.
5. **Placing Air Fry Basket & Wire Rack:** For air frying, slide the air fry basket into Position 3 and the wire rack into Position 2. You can adjust positions based on your recipe.
6. **Connecting Temperature Probe:** To use the temperature probe, simply plug the probe into the jack on the control panel. Insert the other end into the food when ready to cook.
7. **Initial Use Smell:** It is normal for your new unit to produce a heated plastic smell when used for the first few times. This will dissipate with continued use.

Video: Nuwave Pro Smart Grill - Unboxing. This video demonstrates the unboxing process, identifying included accessories, and initial setup steps for the Nuwave Pro Smart Grill.

5. OPERATING INSTRUCTIONS

The Nuwave Pro Smart Air Fryer Oven Combo offers various cooking functions and settings. Familiarize yourself with the control panel and follow these instructions for optimal use.

5.1. General Operation (Power, Temperature, Time)

- **Power On/Off:** Press the **On/Off** button to turn the unit on or off.
- **Setting Cooking Time:** After turning on, the LED display will show a default cooking temperature (e.g., 350°F). Press **Temp/Time** and turn the **Start/Pause** dial to select your desired cooking time (from 1 minute up to 99 hours and 59 minutes).
- **Setting Cooking Temperature:** Press **Temp/Time** again and turn the **Start/Pause** dial to change the cooking temperature.

The temperature range varies by cooking mode.

- **Change °F to °C:** To switch temperature units, press and hold the **Temp/Time** button for 4 seconds until you hear two beeps. Repeat to switch back to Fahrenheit.

5.2. Cooking Modes

- **Preheat Function:** The unit automatically preheats before cooking. After pressing **Start/Pause**,

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question