



Manuals.plus /

› MYPIN /

› User Manual for MYPIN Portable Stereo Walkman Cassette Recorder Player

MYPIN PC000371

User Manual for MYPIN Portable Stereo Walkman Cassette Recorder Player

Model: PC000371

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your MYPIN Portable Stereo Walkman Cassette Recorder Player. This versatile device allows you to play your cherished cassette tapes, convert tape audio to MP3 format via a USB flash drive, and record audio to blank tapes using its built-in microphone or an external microphone. Please read this manual thoroughly before using the product to ensure proper function and longevity.

WHAT'S IN THE BOX

- Portable Cassette Player (1 unit)
- USB-C Charging Cable (1 unit)
- User Manual (1 unit)
- Mini Microphone (1 unit)



Image: The MYPIN Portable Cassette Player shown with its included accessories: a USB-C charging cable and a mini microphone.

Packing List



Image: A visual representation of the packing list, displaying the cassette player, user manual, USB-C charging cable, and mini microphone. Dimensions of the player are also indicated.

PRODUCT OVERVIEW AND CONTROLS

Familiarize yourself with the various parts and controls of your MYPIN Portable Cassette Player.

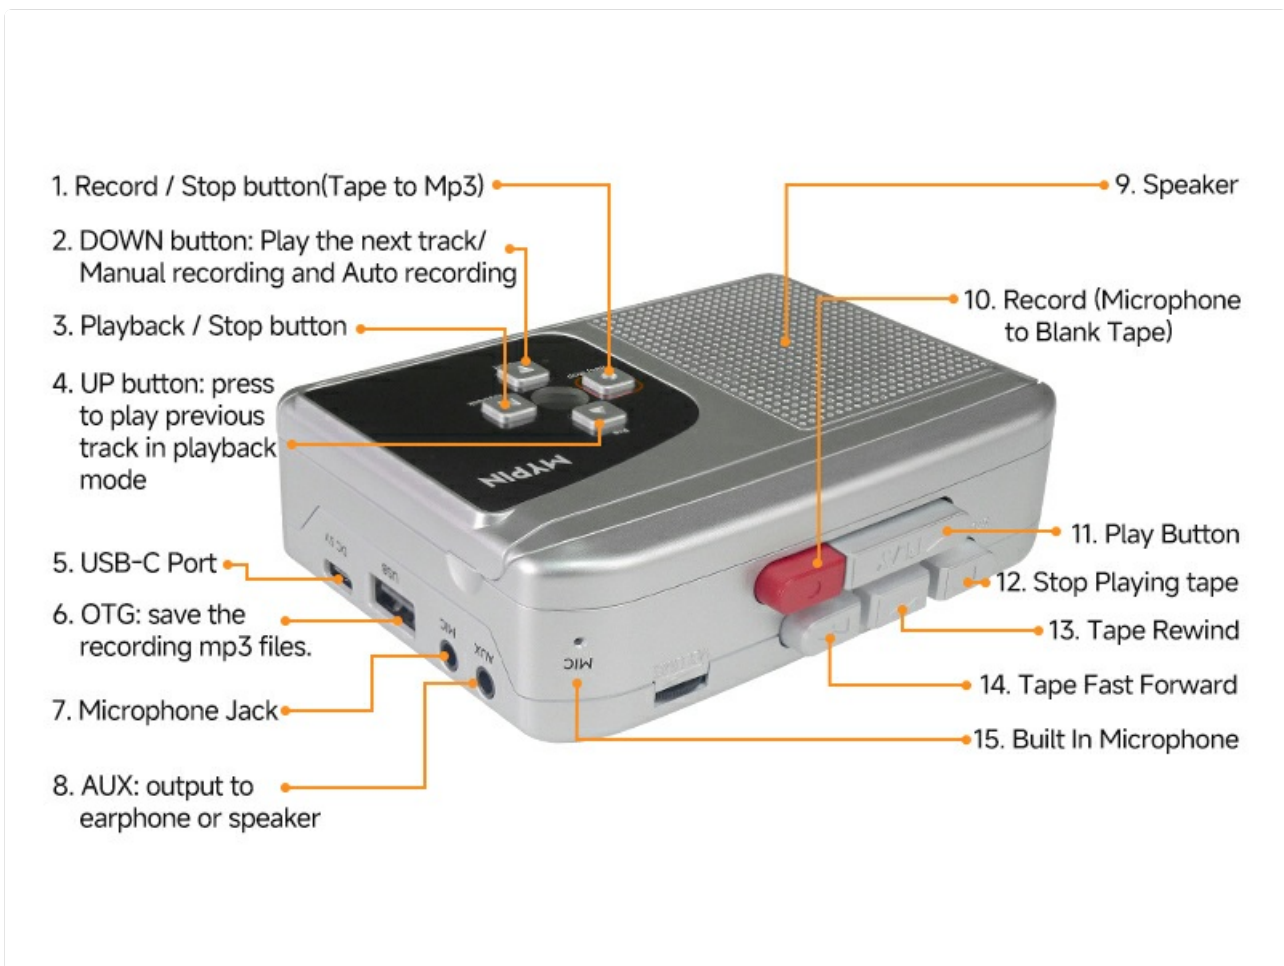


Image: A detailed diagram highlighting the various buttons, ports, and features of the MYPIN Portable Cassette Player, each labeled with a number for easy identification.

1. **Record / Stop button (Tape to MP3):** Initiates or stops recording from tape to MP3 format.
2. **DOWN button:** Plays the next track in playback mode; used for manual or auto recording settings.
3. **Playback / Stop button:** Controls playback and stops the current operation.
4. **UP button:** Plays the previous track in playback mode.
5. **USB-C Port:** For power supply and data transfer.
6. **OTG:** Used to save recorded MP3 files to a USB flash drive.
7. **Microphone Jack:** Connects an external microphone for recording.
8. **AUX:** Audio output to earphones or external speakers.
9. **Speaker:** Built-in speaker for audio output.
10. **Record (Microphone to Blank Tape):** Button to initiate recording from microphone to a blank tape.
11. **Play Button:** Starts tape playback.
12. **Stop Playing Tape:** Stops tape playback.
13. **Tape Rewind:** Rewinds the cassette tape.
14. **Tape Fast Forward:** Fast forwards the cassette tape.
15. **Built-In Microphone:** Internal microphone for recording.

SETUP

Powering the Device

Your MYPIN cassette player can be powered in two ways:

- **USB-C Cable:** Connect the included USB-C cable to the USB-C Port (5) on the device and to a 5V power adapter (not included) or a USB port on a computer.
- **AA Batteries:** Insert 2 AA batteries (not included) into the battery compartment located on the back of the device. Ensure correct polarity.

Portable Simple Design



Image: An illustration demonstrating the two power options for the device: using the USB-C cable for indoor operation and using 2 AA batteries for portable outdoor use.

Inserting a Cassette Tape

1. Gently open the cassette compartment door.
2. Insert your cassette tape with the open side facing the player's head.
3. Close the compartment door firmly until it clicks.



Switch The Tape A&B Side Manually

Image: A hand demonstrating how to manually flip a cassette tape to switch between Side A and Side B within the player's compartment.

Connecting an External Microphone

For clearer audio recording, you can connect the included mini microphone or another compatible external microphone.

- Plug the 3.5mm jack of the external microphone into the Microphone Jack (7) on the side of the device.

OPERATING INSTRUCTIONS

Playing a Cassette Tape

1. Ensure a cassette tape is properly inserted.
2. Press the **Play Button** (11) to begin playback.
3. Adjust the volume using the volume control dial (if present, not explicitly labeled in diagram but implied by "Stereo Sound Effects").
4. To stop playback, press the **Stop Playing Tape** button (12).
5. Use the **Tape Fast Forward** (14) and **Tape Rewind** (13) buttons to navigate through the tape.



Listen to your Favorite Classic Music with 3.5mm Headphone Jack

Image: A user enjoying music through headphones connected to the 3.5mm headphone jack of the MYPIN cassette player, illustrating private listening.

Converting Tape to MP3 (via USB Flash Drive)

This feature allows you to digitize your cassette collection without a computer. Ensure your USB flash drive is formatted to FAT or FAT32 and has sufficient space (supports up to 32GB).

1. Insert a USB flash drive into the OTG port (6).
2. Insert the cassette tape you wish to convert.
3. Press the **Play Button** (11) to start playing the tape.
4. Press the **Record / Stop button (Tape to MP3)** (1) to begin recording. The device will convert the audio to MP3 format and save it to the USB drive.
5. You can choose between automatic or manual recording. Use the **DOWN button** (2) to select the desired mode.
6. To stop recording, press the **Record / Stop button (Tape to MP3)** (1) again.
7. To check the recorded file, use the **Playback / Stop button** (3) and **UP/DOWN buttons** (4, 2) to navigate.

Record Your Voice to Tape

Connecting an external microphone makes the sound clearer



Image: A visual guide illustrating the process of converting audio from a cassette tape to an MP3 file, which is then saved directly onto a USB flash drive connected to the player.

Recording Audio to Blank Tape

You can record audio from the built-in microphone, an external microphone, or an external audio source via AUX input onto a blank cassette tape.

1. Insert a blank cassette tape into the player.

2. **For Microphone Recording:**

- Use the Built-In Microphone (15) or connect an external microphone to the Microphone Jack (7).
- Press the **Play Button** (11) and the **Record (Microphone to Blank Tape)** button (10) simultaneously to start recording.

3. **For External Audio Source Recording (via AUX):**

- Connect your external audio source (e.g., CD player, turntable) to the AUX port (8) using an AUX cable.
- Press the **Play Button** (11) and the **Record (Microphone to Blank Tape)** button (10) simultaneously to start recording the external audio.

4. To stop recording, press the **Stop Playing Tape** button (12).

3.5mm Earphone Jack

Provides private personal listening space



Image: The MYPIN cassette player positioned on a table, with a group of people in the background, suggesting its use for recording conversations or voices onto a blank tape.

Record High-Quality External Audio Sources via AUX cable



Image: The MYPIN cassette player connected to a turntable using an AUX cable, illustrating its capability to record external audio sources onto a blank tape or convert to MP3.

Using the 3.5mm Headphone Jack

For private listening, connect your headphones to the 3.5mm headphone jack (AUX port 8). The built-in speaker will automatically mute when headphones are connected.

2 Ways Powered

USB-C cable (included)

Only one 5V plug is needed



Indoor

2 AA Batteries (Not included)



Outdoor

Image: A person using the MYPIN cassette player with headphones, demonstrating the private listening feature via the 3.5mm earphone jack.

MAINTENANCE

General Care

- Keep the device clean and free from dust. Use a soft, dry cloth for cleaning the exterior.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Do not drop or subject the device to strong impacts.
- When not in use for extended periods, remove the AA batteries to prevent leakage.

Cleaning the Cassette Head

Periodically clean the cassette head and pinch rollers to ensure optimal sound quality and prevent tape damage. Use a cotton swab lightly dampened with isopropyl alcohol.

Upgrade High Technology Tape Player

High Quality Motor



High Quality Cassette Head

Image: An internal view of the MYPIN cassette player, highlighting the high-quality cassette head and motor, which are crucial for smooth tape playback and recording.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	No power supply; batteries drained or incorrectly inserted; USB-C cable not connected properly.	Check battery insertion and charge level. Ensure USB-C cable is securely connected to a working power source.
No sound during playback.	Volume too low; headphones connected; tape not inserted correctly; dirty cassette head.	Increase volume. Disconnect headphones if using built-in speaker. Reinsert tape. Clean cassette head.
Poor sound quality / distorted audio.	Dirty cassette head; worn-out tape; low battery power.	Clean cassette head. Try a different tape. Replace batteries or use USB-C power.
MP3 conversion not working.	USB flash drive not inserted; incorrect format (not FAT/FAT32); drive full; tape not playing.	Ensure USB drive is inserted. Format drive to FAT/FAT32. Delete files to free space. Ensure tape is playing before pressing record.
Recording to tape not working.	Blank tape not inserted; microphone not connected (if external); record button not pressed simultaneously with play.	Insert a blank tape. Connect external microphone if desired. Press Play and Record buttons together.

SPECIFICATIONS

Feature	Detail
Model Number	PC000371
Power Supply	2 x AA Batteries (not included) or USB-C 5V
Audio Output	Built-in Speaker, 3.5mm Headphone Jack (AUX)
Recording Format	MP3 (for USB conversion), Analog (for tape recording)
USB Flash Drive Support	FAT, FAT32 format, Max 32GB
Microphone	Built-in, External Microphone support (3.5mm jack)
Dimensions	6.18 x 4.92 x 2.32 inches (approx.)
Item Weight	10.5 ounces / 0.3 Kilograms

WARRANTY AND CUSTOMER SUPPORT

MYPIN provides a **12-month warranty** for this Portable Stereo Walkman Cassette Recorder Player from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

For any questions, technical assistance, or warranty claims, please contact our customer service team. We offer **24/7 customer service** to assist you.

Please refer to your purchase documentation or the MYPIN official website for specific contact details.

ADDITIONAL INFORMATION

Cassette to MP3 Converter

Save MP3 digital files onto USB Flash Drive



Only Support Max 32G USB Flash Drive (NO included)

Image: The MYPIN cassette player demonstrating its compact and portable design, fitting easily into a bag pocket and comfortably held in one hand.

Listening to Cassette Through Your Car's AUX



Image: The MYPIN cassette player positioned in a car, indicating its compatibility and convenience for listening to cassette tapes on the go, potentially through the car's AUX system.

Multifunctional Cassette Player Recorder For Everyone



Image: A collage of images depicting the MYPIN cassette player being used in diverse settings such as home, fishing, camping, gardening, and the kitchen, highlighting its versatility.