

Philips DES6572WB/37

Philips Wireless Security Doorbell Chime Kit DES6572WB/37 Instruction Manual

Model: DES6572WB/37

INTRODUCTION

The Philips Wireless Security Doorbell Chime Kit, model DES6572WB/37, provides an enhanced sense of security for your home. This kit includes a realistic decoy security camera doorbell and a wireless chime unit. The decoy doorbell features a motion-activated downlight and an LED ring that illuminates upon motion detection or when the doorbell button is pressed, creating the impression of active surveillance. The wireless chime offers multiple melodies and adjustable volume levels, ensuring you hear visitors from anywhere within its 150-foot range.



Image: The Philips Wireless Security Doorbell Chime Kit, featuring the decoy doorbell and the wireless chime unit.

PACKAGE CONTENTS

Verify that all components are present in the package:

- Decoy Security Camera Doorbell Unit
- Wireless Doorbell Chime Unit
- Mounting Hardware (screws and double-sided tape)

IMPORTANT SAFETY INFORMATION

- This product is designed for outdoor use but should be protected from direct heavy rainfall or extreme weather conditions to ensure longevity. The unit has an IP65 rating, indicating protection against dust and low-pressure water jets.
- Use only the specified battery types and ensure correct polarity during installation.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.
- Keep small parts and batteries away from children.

SETUP

Battery Installation

For the Decoy Doorbell Unit:

1. Locate the battery compartment on the back of the decoy doorbell unit.
2. Insert three (3) AAA batteries (not included), ensuring correct polarity (+/-).
3. Securely close the battery compartment cover.

For the Wireless Chime Unit:

1. Locate the battery compartment on the back of the chime unit.
2. Insert three (3) AA batteries (not included), ensuring correct polarity (+/-).
3. Securely close the battery compartment cover.

Mounting the Decoy Doorbell

The decoy doorbell can be mounted using either the included double-sided tape or screws.

- **Using Double-Sided Tape:** Clean the mounting surface thoroughly. Apply the tape to the back of the doorbell unit and firmly press it onto the desired location next to your entrance. This method is suitable for temporary installations or surfaces where drilling is not preferred.
- **Using Screws:** Mark the desired mounting location. Drill pilot holes if necessary. Secure the doorbell unit to the wall using the provided screws. This method offers a more permanent installation.

Ensure the doorbell is mounted in a location that allows for optimal motion detection and visibility, ideally within 150 feet of the chime unit for reliable signal transmission.



Signal range

between push button
and doorbell

Motion-activated downlight

deters would-be intruders



Image: The decoy doorbell in use, illustrating the motion-activated downlight and the 150-foot signal range.

Chime Placement

The wireless chime unit can be placed on a tabletop or mounted on a wall. Choose a central location within your home to ensure the chime is audible throughout the desired area and within the 150-foot signal range of the decoy doorbell.



Image: Examples of chime unit placement, highlighting its versatility for wall or tabletop use.

OPERATION

Doorbell Function

When the push button on the decoy doorbell unit is pressed, it sends a wireless signal to the chime unit, which then plays the selected melody. Simultaneously, the LED ring around the push button illuminates, giving the impression of an active security device.

Chime Settings

The chime unit offers 32 unique melodies and four adjustable volume levels. Refer to the buttons on the chime unit to cycle through melodies and adjust the volume to your preference. The maximum volume is 95 dB.

Motion-Activated Downlight and LED Ring

The decoy doorbell is equipped with integrated light- and motion-sensing technologies. At night, the downlight and the LED ring around the push button will activate when motion is detected, further enhancing the illusion of constant surveillance.

Band of light
glows when push
button is pressed



Image: The chime unit displaying its glowing band of light when activated.

Dummy Security Camera

Realistic appearance adds a layer of safety and blue light gives the impression of constant surveillance



*Does not have any video capabilities

Image: The decoy security camera doorbell illuminated at night, suggesting active surveillance.

MAINTENANCE

Battery Replacement

When the doorbell or chime unit's performance diminishes (e.g., reduced range, dimming lights, or inconsistent chime), it is time to replace the batteries. Follow the battery installation steps outlined in the Setup section.

Cleaning

To clean the units, use a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface or internal components.

TROUBLESHOOTING

- **Chime not sounding:**

- Check if batteries in both the doorbell and chime units are correctly installed and not depleted.
- Ensure the chime unit is within the 150-foot signal range of the doorbell. Obstacles like thick

walls or metal structures can reduce range.

- Verify the chime's volume is not set to the lowest level or muted.

- **Lights not activating:**

- Confirm batteries in the doorbell unit are fresh and correctly installed.
- For motion-activated lights, ensure the motion sensor is not obstructed and is clean.
- The motion-activated downlight and LED ring activate at night; ensure ambient light conditions are dark enough for activation.

- **Intermittent operation:**

- Weak batteries are a common cause of intermittent operation. Replace them.
- Relocate the chime unit closer to the doorbell to improve signal strength.
- Ensure no strong radio frequency interference sources are nearby.

SPECIFICATIONS

Model Number	DES6572WB/37
Brand	Philips
Indoor/Outdoor Usage	Outdoor
Power Source	Battery Powered
Connectivity Technology	Wireless (RF)
Controller Type	Push Button
Mounting Type	Wall Mount
Color	White
Included Components	Decoy Camera, Doorbell Chime
Signal Range	Up to 150 feet
Material	Plastic
Wattage	7.5 watts (for light)
Item Dimensions (L x W x H)	1.6 x 7.3 x 7.4 inches
Batteries Required	Yes (3x AAA for doorbell, 3x AA for chime)
Batteries Included	No
International Protection Rating	IP65
UPC	030878737920
Special Features	Decoy Camera, Doorbell Chime, LED Ring Doorbell, Motion Sensor, Quick Installation

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Philips support website. Keep your proof of purchase for any warranty claims.