

Snughome PTGA001GDD

Snughome Arch Backdrop Stand Instruction Manual

Models: 7.2FT+6FT Gold (PTGA001GDD)

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Snughome Arch Backdrop Stand set. This set includes two metal arch stands, one measuring 7.2 feet in height and the other 6 feet in height, both in a gold finish. Please read this manual thoroughly before assembly and use to ensure safe and proper operation.

2. SAFETY INFORMATION

WARNING:

- Always ensure all screws are tightened securely to prevent the arch stand from becoming unstable and potentially causing injury or damage.
- Use the provided water bags to enhance stability, especially when using outdoors or with heavier decorations.
- Do not overload the arch stand with excessive weight, as this may compromise its stability and structural integrity.
- Keep children and pets away from the arch stand during assembly and while in use to prevent accidents.
- Place the arch stand on a flat, stable surface to minimize the risk of tipping.

3. PACKAGE CONTENTS

Verify that all components listed below are included in your package:

- 1 x Large Gold Arch Backdrop Stand (7.2FT H x 4FT W)
- 1 x Small Gold Arch Backdrop Stand (6FT H x 2.6FT W)
- 2 x Premium Water Bags (for added stability)
- All necessary metal tubes and screws for assembly.

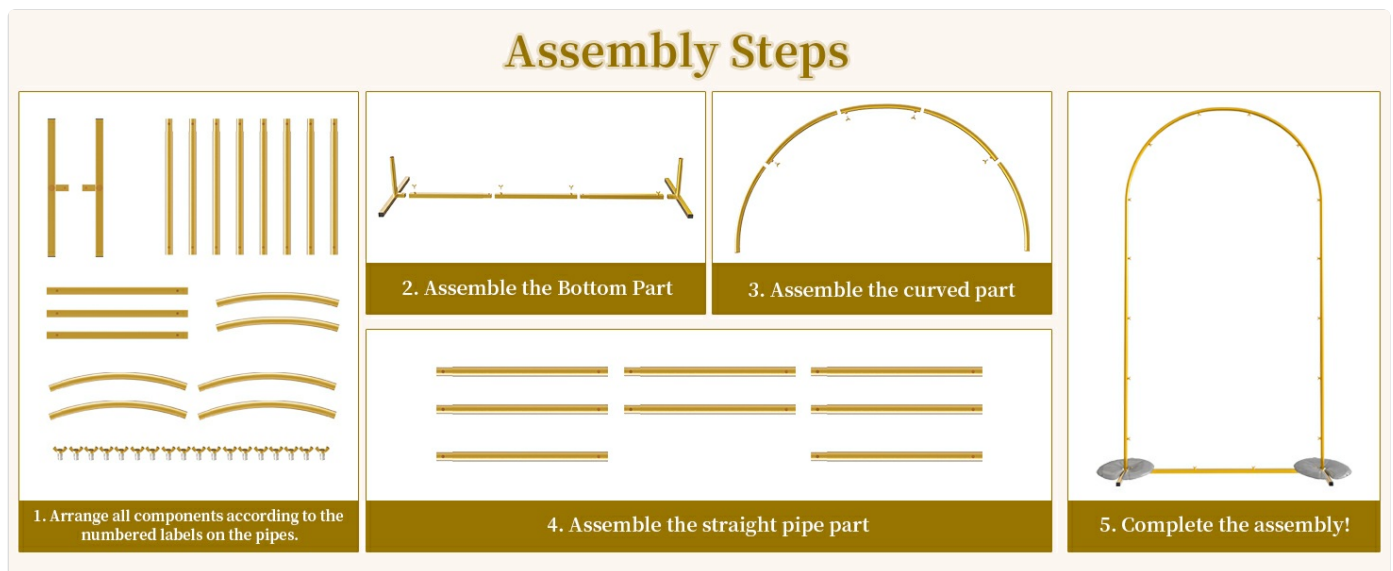 


Figure 1: Overview of all components and assembly steps.

4. SETUP AND ASSEMBLY

The Snughome Arch Backdrop Stand is designed for easy, tool-free assembly. Follow these steps:

- 1. Unpack and Identify Components:** Carefully remove all parts from the packaging. Lay them out and identify the different sections (straight pipes, curved pipes, base parts) according to the numbered labels on the pipes.
- 2. Assemble the Bottom Part:** Connect the base sections for each arch stand. Ensure the pieces fit snugly and secure them using the provided screws.
- 3. Assemble the Curved Part:** Attach the curved sections to form the top arch of each stand. Match the numbered sections and secure them with screws.
- 4. Assemble the Straight Pipe Part:** Connect the straight pipe sections to the base and the curved top, forming the vertical sides of the arch. Ensure all connections are firm.
- 5. Complete Assembly:** Once all sections are connected, ensure all screws are fully tightened for maximum stability.
- 6. Attach Water Bags (Optional but Recommended):** For enhanced stability, especially outdoors or with heavy decorations, fill the two provided water bags and place them over the base of each arch stand.

Your browser does not support the video tag.

Video 1: Assembly demonstration for the Snughome Arch Backdrop Stand. This video shows the step-by-step process of connecting the metal pipes and securing them with screws, as well as demonstrating the use of water bags for stability.

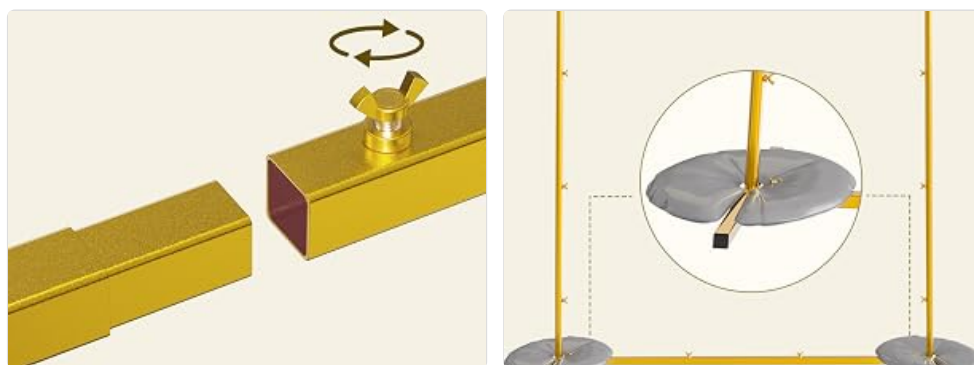 


Figure 2: Details of the upgraded screws and water bag for enhanced stability.

5. OPERATING INSTRUCTIONS

The Snughome Arch Backdrop Stands are versatile and can be used for various events and decorations:

- **Decoration:** Customize the arches with balloons, flowers, tulle, LED lights, fabric drapes, or other decorative elements. Ensure decorations are evenly distributed and do not excessively weigh down one side.
- **Placement:** Position the arch stands on a flat, level surface. For outdoor use, always utilize the provided water bags to prevent tipping due to wind or accidental bumps.
- **Event Types:** Ideal for weddings, proposals, birthdays, baby showers, holiday decorations, and other festive events.



Figure 3: Various decoration options for the arch stands.







Figure 4: Examples of arch stands used in various event settings.

6. MAINTENANCE

- **Cleaning:** Wipe down the metal frames with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the gold finish.
- **Storage:** When not in use, the arch stands can be easily disassembled and stored in their original packaging or a protective bag to prevent scratches and damage. Store in a dry place.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Arch stand is wobbly or unstable.	Screws are not fully tightened; uneven surface; insufficient weight at base; strong winds (outdoor use).	Ensure all screws are tightened. Place on a flat, level surface. Use the provided water bags, filled, on the base. Avoid use in very strong winds.
Difficulty assembling pipes.	Incorrect pipe alignment; debris in connection points.	Ensure pipes are aligned correctly according to their numbers. Check for any obstructions in the connection points and clear them. Do not force connections.
Arch stand appears bent or damaged after assembly.	Improper handling during assembly; manufacturing defect.	Disassemble and re-examine all parts for damage. If a part is bent or damaged, contact customer support.

8. SPECIFICATIONS

- Brand:** Snughome
- Model Number:** PTGA001GDD
- Material:** Metal
- Color:** Gold
- Large Arch Dimensions (H x W):** 7.2 ft x 4 ft (86.4 inches x 48 inches)
- Small Arch Dimensions (H x W):** 6 ft x 2.6 ft (72 inches x 31.2 inches)
- Item Weight:** Approximately 8.82 Pounds (total for set)
- Assembly Required:** Yes
- GTIN/UPC:** 792483811098

love Product Dimension

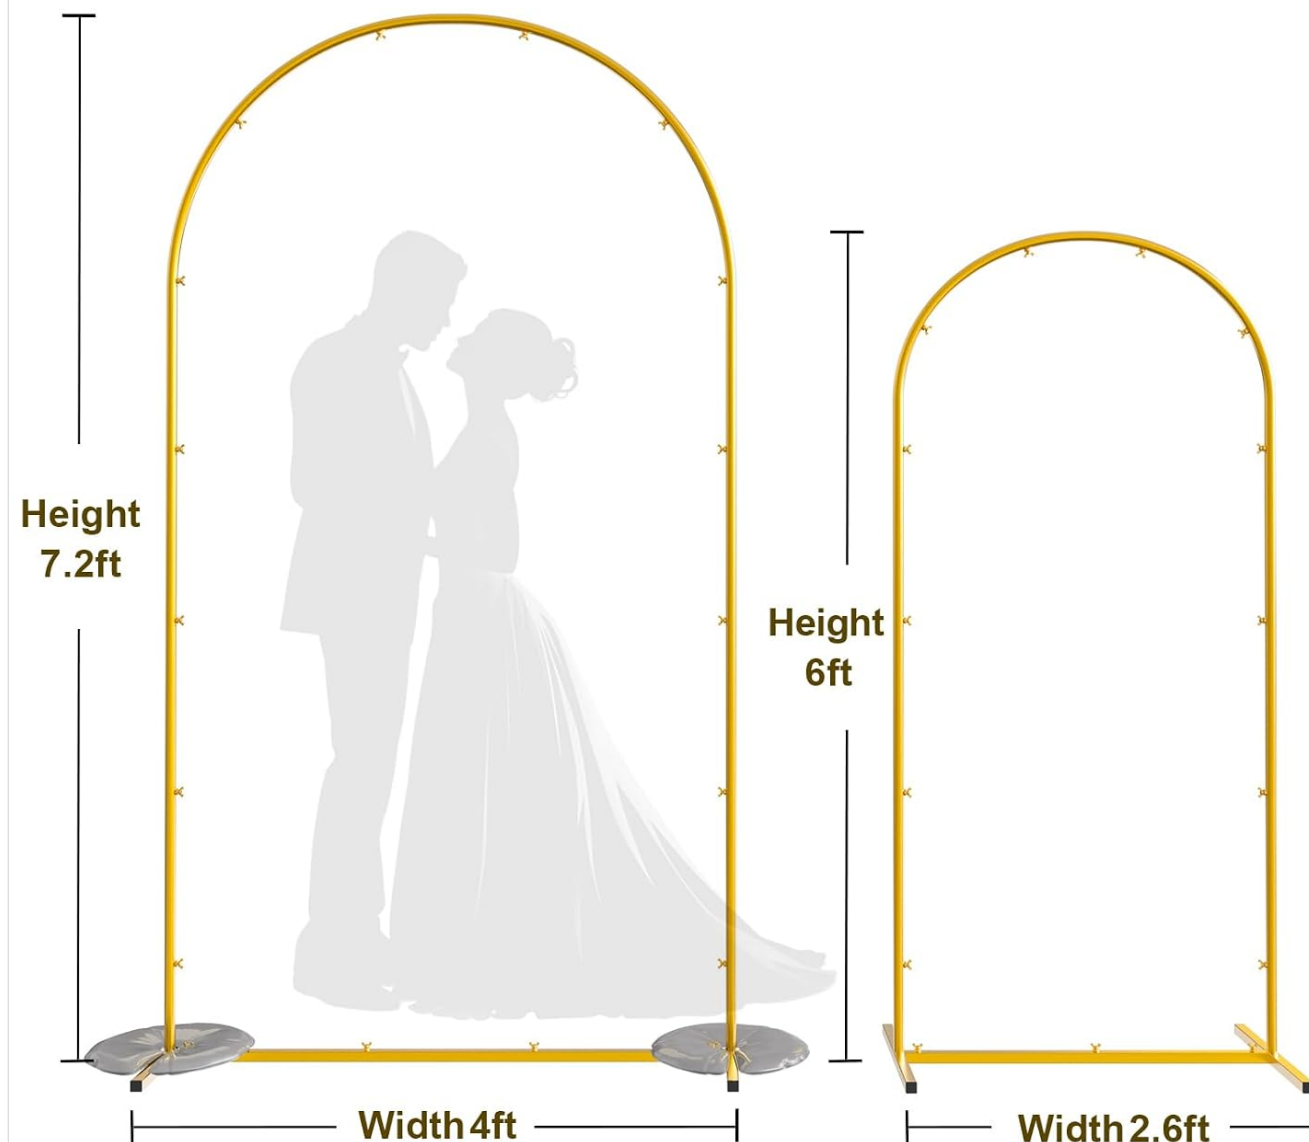 


Figure 5: Detailed product dimensions for both arch stands.

9. WARRANTY AND SUPPORT

Snughome products are designed for quality and durability. For any questions, concerns, or to report a missing or damaged part, please contact Snughome customer support through your retailer's platform or the official Snughome website. Please have your model number (PTGA001GDD) and purchase information ready when contacting support. *Specific warranty details may vary by region and retailer. Please refer to your purchase documentation for precise warranty terms.*

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question