

## Yanhama H5

# Yanhama 55KPA/600W Cordless Vacuum Cleaner User Manual

Model: H5

## 1. INTRODUCTION

Thank you for purchasing the Yanhama H5 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and keep it for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using the vacuum cleaner.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the vacuum cleaner indoors. Put away after use to prevent accidents.
- Use only the charger supplied by the manufacturer to recharge.
- Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.

### 3. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all components are present and undamaged. If any parts are missing or damaged, please contact customer support.



Image: The Yanhama H5 Cordless Vacuum Cleaner shown with its various attachments, including the main vacuum body, extension wand, floor brush, crevice tool, dusting brush, and wall-mount charging dock. Also visible are the OLED display remote and a washable filter component.

- Main Vacuum Body with Dustbin
- Extension Wand
- Motorized Floor Brush
- Crevice Tool
- 2-in-1 Dusting Brush
- Wall-Mount Charging Dock
- Power Adapter
- HEPA Filter (pre-installed)
- User Manual

## 4. ASSEMBLY

---

The Yanhama H5 vacuum cleaner is designed for easy assembly. Follow these steps to set up your vacuum:

1. **Attach the Extension Wand:** Align the electrical contacts on the extension wand with those on the main vacuum body. Push firmly until it clicks into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension wand. Ensure the electrical contacts align and it clicks securely.
3. **Attach Accessories:** For handheld use, you can directly attach the crevice tool or 2-in-1 dusting brush to the main vacuum body.
4. **Wall-Mount Installation (Optional):** Choose a suitable location near a power outlet. Secure the wall-mount charging dock to the wall using the provided screws and anchors.

## 5. CHARGING THE BATTERY

---

Before first use, fully charge the vacuum cleaner's battery. A full charge typically takes 4-5 hours.



Image: An illustration showing the internal battery pack of the Yanhama H5 vacuum cleaner, indicating a 70-minute maximum runtime and a 4-5 hour charging time for its 9\*2500mAh battery cells.

- Connect the power adapter to the charging port on the main vacuum body or the wall-mount charging dock.
- Plug the adapter into a power outlet.
- The OLED display will show the charging status. When fully charged, the battery indicator will show full.
- The vacuum offers up to 70 minutes of runtime on the Max power setting.

## 6. OPERATING THE VACUUM CLEANER

### 6.1 Power On/Off and Mode Selection

# OLED Smart Display +Tastendruck

Anzeige des Saugniveaus und der verbleibenden Leistung



Image: A close-up of the Yanhama H5 vacuum cleaner's handle, highlighting the OLED smart display and the control buttons for adjusting suction power (Low, Mid, High, Max, Auto).

- Press the power button to turn the vacuum on or off.
- Use the mode selection buttons (Low, Mid, High, Max, Auto) on the handle to adjust suction power. The OLED display will show the current mode and remaining battery life.
- **ECO Mode (Low):** For light cleaning. Suction power: 15 KPa. Runtime: 15 minutes.
- **Mid Mode:** For general cleaning. Suction power: 25 KPa. Runtime: 28 minutes.
- **High Mode:** For deeper cleaning. Suction power: 38 KPa. Runtime: 35 minutes.
- **Max Mode:** For stubborn dirt and carpets. Suction power: 55 KPa. Runtime: 70 minutes.
- **Auto Mode:** The vacuum automatically adjusts suction power based on the dust level detected.

# Super Saugkraft, Extra hohe Leistung

15 Kpa ECO Mode | 25 Kpa Mid Mode | 38 Kpa High Mode | 55 Kpa Max Mode



Image: An illustration demonstrating the four suction power levels of the Yanhama H5 vacuum cleaner: ECO Mode (15 KPa), Mid Mode (25 KPa), High Mode (38 KPa), and Max Mode (55 KPa), with a large "55KPa 600W" overlay.

## 6.2 Intelligent Dust Recognition System

# Intelligentes Stauber kennungs System

Entsprechend der Staubmenge wird die Saugleistung automatisch



Image: A visual representation of the Yanhama H5's intelligent dust recognition system, showing the vacuum automatically adjusting suction power from Min to Max based on the amount of debris on the floor.

In Auto Mode, the vacuum cleaner utilizes an intelligent sensor to detect the amount of dust and debris on the surface. It will automatically increase or decrease suction power as needed, optimizing cleaning efficiency and battery life.

## 6.3 V-shaped Anti-Tangle Floor Brush

# V-förmige Anti-Knäuel-Bodenbürste



Image: A cutaway view of the Yanhama H5's V-shaped anti-tangle floor brush, illustrating how hair and debris are directed towards the center to prevent tangling around the brush roll.

The motorized floor brush features a V-shaped design that helps to prevent hair and pet fur from tangling around the brush roll. This design guides debris towards the center, making it easier to collect into the dustbin and reducing the need for frequent manual cleaning of the brush.

## 7. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.


### 7.1 Emptying the Dustbin



**1.6L+Ein-Knopf-Demontage**



**Waschbar**

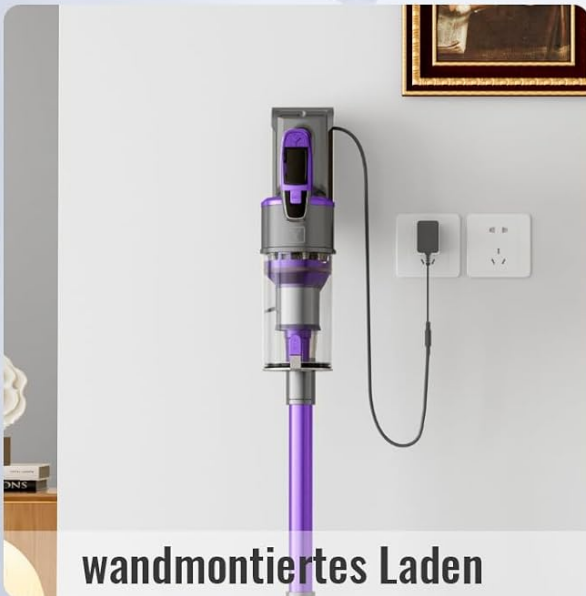

**wandmontiertes Laden**



**Geräuscharm**

Image: A collage showing the 1.6L dustbin being detached with a single button, the dustbin and internal filter components being washed under water, the vacuum charging on a wall mount, and the vacuum in use on a floor.

- The dustbin has a capacity of 1.6 liters.
- To empty, press the one-button release mechanism located on the dustbin.
- Carefully detach the dustbin from the main vacuum body.
- Empty the contents into a trash bin.

## 7.2 Cleaning the Filters

# 12-Kegel 7-stufiger Filte

der 99,99 % des winzigen Staubs unter 0,1 µm effektiv herausfiltert

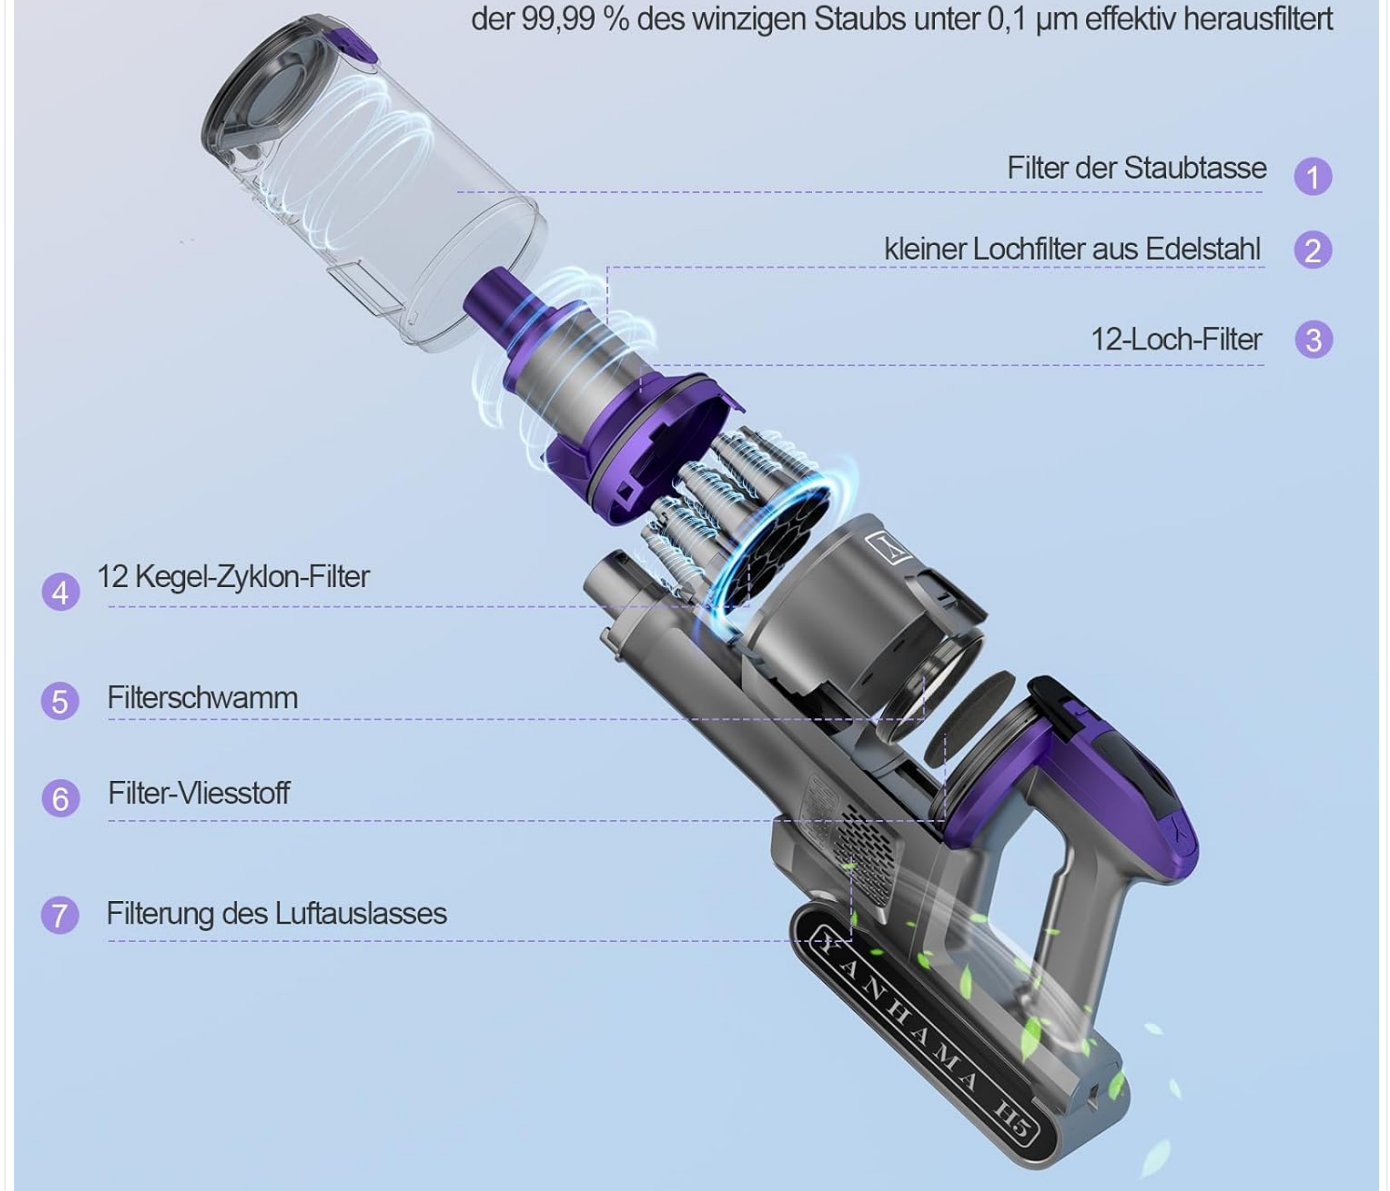


Image: An exploded diagram illustrating the 12-cone, 7-stage filtration system of the Yanhama H5 vacuum cleaner, labeling components such as the dust cup filter, small stainless steel hole filter, 12-hole filter, 12-cone cyclone filter, filter sponge, filter fleece, and air outlet filtration.

The Yanhama H5 features a 12-cone, 7-stage filtration system, including a HEPA filter, designed to capture 99.99% of fine dust particles down to 0.1 µm.

- **Dust Cup Filter & Stainless Steel Filter:** These components are washable. After emptying the dustbin, detach these filters and rinse them under running water. Ensure they are completely dry before reassembling.
- **HEPA Filter:** The HEPA filter is also washable. Gently tap off loose dust, then rinse under cool running water until the water runs clear. Allow it to air dry completely for at least 24 hours before reinserting. Do not use a dryer or direct heat.
- **Frequency:** Clean the dustbin and filters regularly, ideally after every few uses, or when suction power noticeably decreases.

## 7.3 Cleaning the Brush Roll

- Periodically check the motorized floor brush for tangled hair or debris.

- To remove the brush roll, typically there's a release latch on the side of the brush head. Consult the product diagram for specific instructions.
- Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
- Reinsert the brush roll, ensuring it clicks back into place securely.

## 8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

| Problem                  | Possible Cause                                                                                         | Solution                                                                                                            |
|--------------------------|--------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Vacuum does not turn on. | Battery is depleted.                                                                                   | Charge the battery fully.                                                                                           |
| Low suction power.       | Dustbin is full.<br>Filters are clogged.<br>Brush roll is tangled.<br>Obstruction in the wand or hose. | Empty the dustbin.<br>Clean or wash the filters.<br>Clean the brush roll.<br>Check for and remove any blockages.    |
| Brush roll not spinning. | Brush roll is tangled or jammed.<br>Connection issue.                                                  | Clean the brush roll.<br>Ensure the floor brush and wand are securely connected.                                    |
| Vacuum stops suddenly.   | Battery is depleted.<br>Overheating protection activated.                                              | Recharge the battery.<br>Turn off the vacuum and allow it to cool down for at least 30 minutes before resuming use. |

## 9. SPECIFICATIONS

| Feature                | Specification                             |
|------------------------|-------------------------------------------|
| Brand                  | Yanhama                                   |
| Model Number           | H5                                        |
| Power (Motor)          | 600 W                                     |
| Suction Power (Max)    | 55 KPa                                    |
| Dustbin Capacity       | 1.6 Liters                                |
| Runtime (Max Mode)     | Up to 70 minutes                          |
| Charging Time          | 4-5 hours                                 |
| Number of Speeds/Modes | 4 (ECO, Mid, High, Max) + Auto Mode       |
| Noise Level            | 62 dB                                     |
| Filter Type            | HEPA Filter (12-cone, 7-stage filtration) |

| Feature            | Specification   |
|--------------------|-----------------|
| Product Dimensions | 43 x 33 x 19 cm |
| Product Weight     | 4.31 kg         |

## 10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your product packaging or contact Yanhama customer service through the retailer where you purchased the product. Please have your model number (H5) and purchase date ready when contacting support.

For further assistance, visit the official Yanhama website or contact their customer support channels.

© 2024 Yanhama. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question