

[Manuals.plus](#) /

› [BERGNER](#) /

› BERGNER CASA VISSANI Set of 4 Kitchen Appliances Instruction Manual (Juicer, Hand Mixer, Toaster, Air Fryer) - Model B0DBQFN8J3

**BERGNER B0DBQFN8J3**

# BERGNER CASA VISSANI Set of 4 Kitchen Appliances Instruction Manual

Model: B0DBQFN8J3

## INTRODUCTION

---

This instruction manual provides essential information for the safe and efficient use of your BERGNER CASA VISSANI Set of 4 Kitchen Appliances. This set includes a Citrus Juicer, an Electric Hand Mixer, a Toaster, and an Air Fryer. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The complete set of BERGNER CASA VISSANI kitchen appliances, including an air fryer, toaster, citrus juicer, and hand mixer, all in a matching sage green color.

## GENERAL SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before operating the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.

## 1. CITRUS JUICER

---

### Components

- 40W motor base
- 1.2L removable juice container
- Transparent lid
- Two different sized cones for various fruits
- Pulp filter



Image: The BERGNER CASA VISSANI citrus juicer in sage green with a transparent juice container and lid.

## Setup

1. Place the motor base on a stable, flat surface.
2. Assemble the juice container, pulp filter, and appropriate cone onto the motor base.
3. Ensure the transparent lid is securely placed on top.

## Operation

- Plug the juicer into a suitable power outlet.
- Cut citrus fruits (oranges, lemons, grapefruits) in half.
- Place a fruit half onto the cone and press down gently. The juicer will automatically start.
- The 'reverse rotation' function ensures optimal juice extraction.
- Release pressure to stop the juicer.
- Pour the fresh juice from the removable container.

## Cleaning & Maintenance

- Unplug the appliance before cleaning.
- Disassemble all removable parts.
- Wash the juice container, pulp filter, and cones with warm, soapy water. Rinse thoroughly and dry.
- Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
- The appliance is **not** dishwasher safe.
- Utilize the cord storage compartment on the bottom of the unit for neat storage.

## 2. ELECTRIC HAND MIXER

---

### Components

- 300W motor unit with ergonomic handle
- Speed selector (5 speeds + Turbo Boost)
- Accessory ejection button with safety device
- 2 stainless steel whisks for beating
- 2 stainless steel dough hooks for kneading



Image: The BERGNER CASA VISSANI electric hand mixer in sage green and grey, shown with the whisk attachments.



Image: The BERGNER CASA VISSANI electric hand mixer in sage green and grey, shown with the dough hook attachments.

## Setup

1. Ensure the mixer is unplugged.
2. Insert the desired attachments (whisks or dough hooks) into the designated openings until they click into place. Ensure they are inserted correctly to avoid damage.

## Operation

- Plug the hand mixer into a power outlet.

- Select the desired speed using the speed selector switch. Start with a low speed and gradually increase as needed.
- For a quick burst of power, press the 'Turbo Boost' button.
- When finished, switch the mixer to the 'off' position and unplug it.
- Press the accessory ejection button to release the attachments.

## Cleaning & Maintenance

- Always unplug the mixer before cleaning.
- Remove the whisks or dough hooks. Wash them in warm, soapy water or place them in the dishwasher (if specified by manufacturer, otherwise hand wash).
- Wipe the main unit with a damp cloth. Do not immerse the motor unit in water.
- The appliance is **not** dishwasher safe.

## 3. TOASTER

---

### Components

- 2-slice toaster with 870W power
- 6 browning levels selector
- Functions: Cancel, Reheat, Defrost
- Automatic bread ejection and shutdown
- Removable crumb tray
- Cool-touch exterior and tongs
- Non-slip feet



Image: The BERGNER CASA VISSANI 2-slice toaster in sage green, featuring control buttons and a browning level dial.

## Setup

1. Place the toaster on a heat-resistant, stable surface, away from flammable materials.
2. Ensure the crumb tray is properly inserted.

## Operation

- Plug the toaster into a power outlet.
- Insert up to two slices of bread into the slots.
- Select your desired browning level using the dial (1 for light, 6 for dark).
- Press the carriage lever down until it locks. The toasting cycle will begin.
- The toaster will automatically eject the toast and shut off when the cycle is complete.

- Use the 'Reheat' function to warm up cold toast without further browning.
- Use the 'Defrost' function to toast frozen bread.
- Press the 'Cancel' button at any time to stop the toasting cycle.

## Cleaning & Maintenance

- Always unplug the toaster and allow it to cool completely before cleaning.
- Slide out the removable crumb tray from the bottom of the toaster and empty crumbs. Wipe the tray clean with a damp cloth.
- Wipe the exterior of the toaster with a damp cloth. Do not use abrasive cleaners.
- Never insert utensils into the toaster slots.
- The appliance is **not** dishwasher safe.
- Use the cord storage area for tidy storage.

## 4. AIR FRYER

---

### Components

- 4.2L capacity air fryer with 1300W power
- Digital LED display with touch controls
- 8 preset cooking functions
- Removable internal grill plate
- Cool-touch exterior protection
- Viewing window to monitor cooking progress

# CASAVISSANI



Image: The BERGNER CASA VISSANI air fryer in sage green, featuring a digital display on top and a viewing window on the front drawer.



Image: The BERGNER CASA VISSANI air fryer with its cooking drawer pulled open, revealing the internal basket.

## Setup

1. Place the air fryer on a stable, heat-resistant surface, ensuring adequate space around it for air circulation.
2. Remove all packaging materials and stickers.
3. Clean the cooking basket and grill plate with warm, soapy water before first use. Wipe the exterior with a damp cloth.

## Operation

- Plug the air fryer into a grounded power outlet.
- Pull out the cooking drawer and place food onto the removable grill plate inside the basket. Do not overfill.
- Slide the drawer back into the air fryer.

- Use the LED display to select one of the 8 preset functions or manually set the temperature and time.
- The 360° HOT AIR technology circulates hot air for even cooking and crispy results with little to no added oil.
- Monitor cooking progress through the viewing window.
- Once cooking is complete, carefully remove the drawer and transfer food.

## Cleaning & Maintenance

- Unplug the air fryer and allow it to cool completely before cleaning.
- Remove the cooking drawer and grill plate. Wash them with warm, soapy water. A non-abrasive sponge is recommended.
- Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
- The appliance is **not** dishwasher safe.

## TROUBLESHOOTING

If you encounter issues with your appliances, refer to the following common troubleshooting tips:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working outlet. Check your household's circuit breaker.
- **Juicer not extracting juice:** Ensure the fruit is properly centered on the cone and sufficient pressure is applied. Check for blockages in the pulp filter.
- **Hand mixer attachments not spinning:** Verify attachments are correctly inserted and locked into place. Ensure no debris is obstructing the mechanism.
- **Toaster not browning evenly:** Ensure bread slices are centered in the slots. Clean the crumb tray regularly to prevent buildup.
- **Air fryer not cooking food:** Check that the drawer is fully closed. Ensure temperature and time settings are appropriate for the food type. Do not overfill the basket.
- For any persistent issues, contact customer support.

## SPECIFICATIONS

<b>Brand</b>	BERGNER
<b>Model</b>	B0DBQFN8J3 (Set of 4 Kitchen Appliances)
<b>Color</b>	Sage Green
<b>Power Source</b>	Corded Electric
<b>Voltage</b>	230 Volt (AC)
<b>Material</b>	Plastic (main bodies), Stainless Steel (mixer blades, toaster elements)
<b>Citrus Juicer Power</b>	40W
<b>Citrus Juicer Capacity</b>	1.2 Liters
<b>Hand Mixer Power</b>	300W

<b>Hand Mixer Speeds</b>	5 + Turbo Boost
<b>Toaster Power</b>	870W
<b>Air Fryer Power</b>	1300W
<b>Air Fryer Capacity</b>	4.2 Liters
<b>Dishwasher Safe</b>	No

## **WARRANTY AND SUPPORT**

---

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official BERGNER website. Keep your proof of purchase for any warranty claims.