

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KIDISLE](#) /

› [KIDISLE 8-in-1 Nut Milk Maker Blender HB1018W2407 Instruction Manual](#)

## KIDISLE HB1018W2407

# KIDISLE 8-in-1 Nut Milk Maker Blender HB1018W2407 Instruction Manual

Model: HB1018W2407

## INTRODUCTION

---

Welcome to the user manual for your new KIDISLE 8-in-1 Nut Milk Maker Blender. This appliance is designed to simplify the preparation of various homemade plant-based milks, juices, and other beverages. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the power cord, plug, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the lid is properly aligned and secured before operation. The appliance features a safety mechanism that prevents operation if the lid is not correctly placed.
- Be cautious of sharp blades when handling and cleaning the interior of the jug. Always use the provided cleaning brush.

- The appliance is equipped with overheating protection. If the unit overheats, it will automatically shut off. Allow it to cool down before resuming use.



Image: Proper lid alignment is crucial for safe operation. Align the arrow on the lid with the arrow on the handle.



Image: The appliance includes an overheating protection system to ensure user safety and product longevity.

## PRODUCT OVERVIEW

---

### Components



Image: The KIDISLE Nut Milk Maker Blender and its complete set of accessories.

- **Main Unit:** The primary appliance with integrated motor, heating element, and control panel.
- **Lid:** Features a safety interlock mechanism.
- **Power Cord:** Detachable for easy storage and cleaning.
- **Measuring Cup:** For precise ingredient measurement.
- **Cleaning Brush:** Designed for safe and effective cleaning of the blades and interior.
- **Fine Mesh Strainer:** For straining pulp from beverages.
- **Nut Milk Bag:** Provides an alternative method for straining finer particles.
- **Recipe Book:** Contains various recipes and usage suggestions.

## Key Features

- **8-in-1 Functionality:** Capable of making Nut Milk, Soy Milk, Oat Milk, Milk Shake, Juice, Rice Paste, Boil Water, and a dedicated Clean function.
- **32oz Capacity:** Ideal for individual or small family use.
- **Delay Start:** Program the appliance to start at a later time, up to 12 hours.
- **Keep Warm:** Maintains the temperature of hot beverages for up to 2 hours.
- **Durable Construction:** Features a stainless steel container and blades.

- **Touch Controls:** Intuitive and easy-to-use control panel.

# 32 OZ CAPACITY

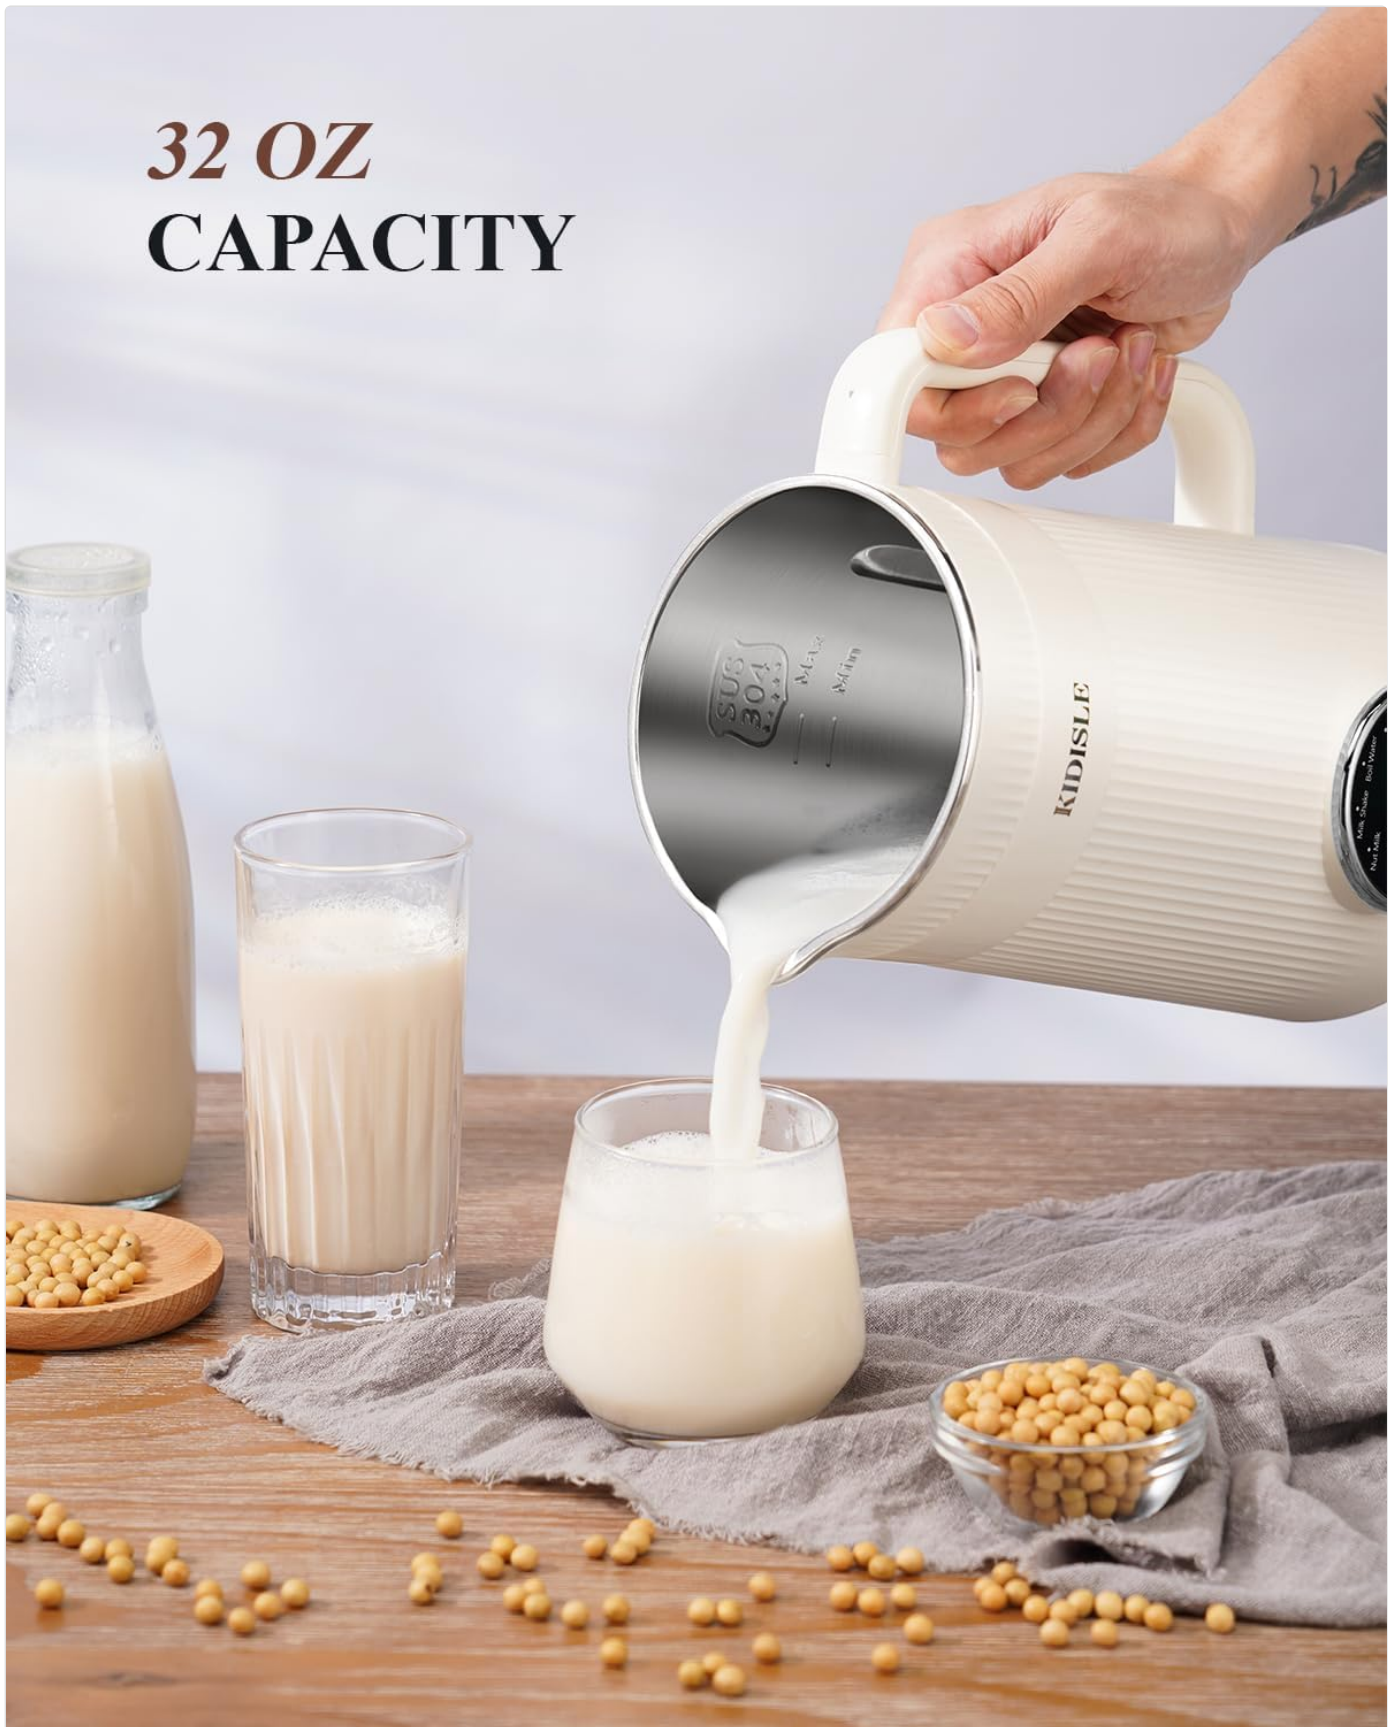 


Image: The 32oz capacity of the appliance, suitable for various preparations.

# ***EFFICIENT BLENDING AND PROCESSING***

With **10** sharp blades



Image: The internal stainless steel blades designed for efficient blending.

## **SETUP**

### **Unpacking and Initial Cleaning**

1. Carefully remove all components from the packaging.
2. Inspect the appliance for any damage. Do not use if damaged.

3. Wipe the exterior of the main unit with a damp cloth.
4. Wash the interior of the jug, lid, measuring cup, strainer, and nut milk bag with warm, soapy water. Rinse thoroughly and dry. Be extremely careful when cleaning around the blades.
5. Ensure all parts are completely dry before assembly and use.

## **Assembly**

1. Place the main unit on a stable, flat, and dry surface.
2. Ensure the power cord is securely plugged into the appliance and then into a grounded electrical outlet.
3. Place the lid onto the jug, ensuring the alignment marks on the lid and handle match. This activates the safety interlock.

## **OPERATING INSTRUCTIONS**

---

### **Control Panel Overview**

# 8-IN-1 MULTI-FUNCTION

Versatile culinary companion

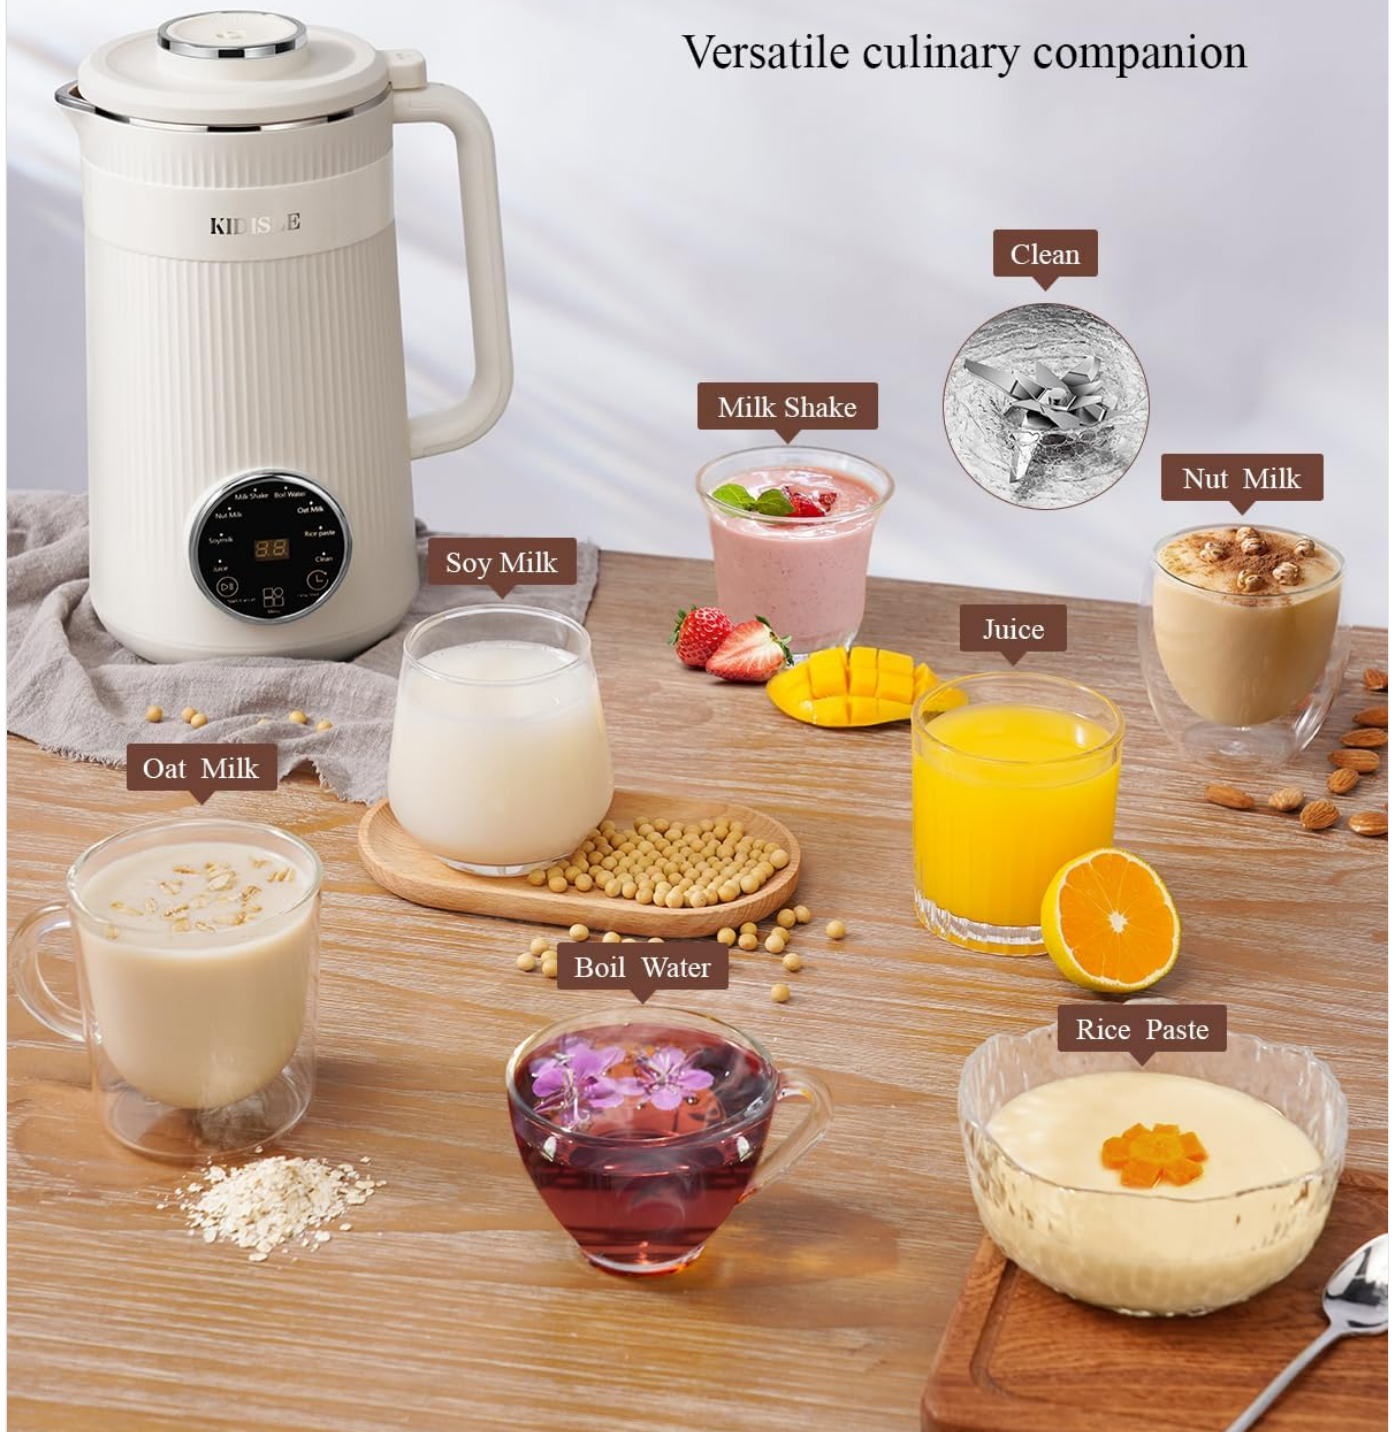


Image: The intuitive touch control panel with all function selections.

The control panel features touch-sensitive buttons for selecting functions, starting/canceling operations, and setting the delay start. The digital display shows remaining time or delay settings.

## General Operation Steps

1. Add ingredients to the jug, ensuring the liquid level is between the MIN and MAX fill lines.
2. Securely place the lid on the jug, aligning the marks.
3. Plug in the appliance. The display will illuminate.

4. Press the 'Menu' button repeatedly to cycle through the available functions (Soy milk, Juice, Milk Shake, Nut Milk, Oat Milk, Boil Water, Rice Paste, Clean).
5. Once the desired function is selected, press 'Start/Cancel' to begin the operation.
6. To cancel an operation, press 'Start/Cancel' again.
7. When the program finishes, the appliance will beep, and the display will show 'End'.

# ***EASY TO USE***

One-touch operation

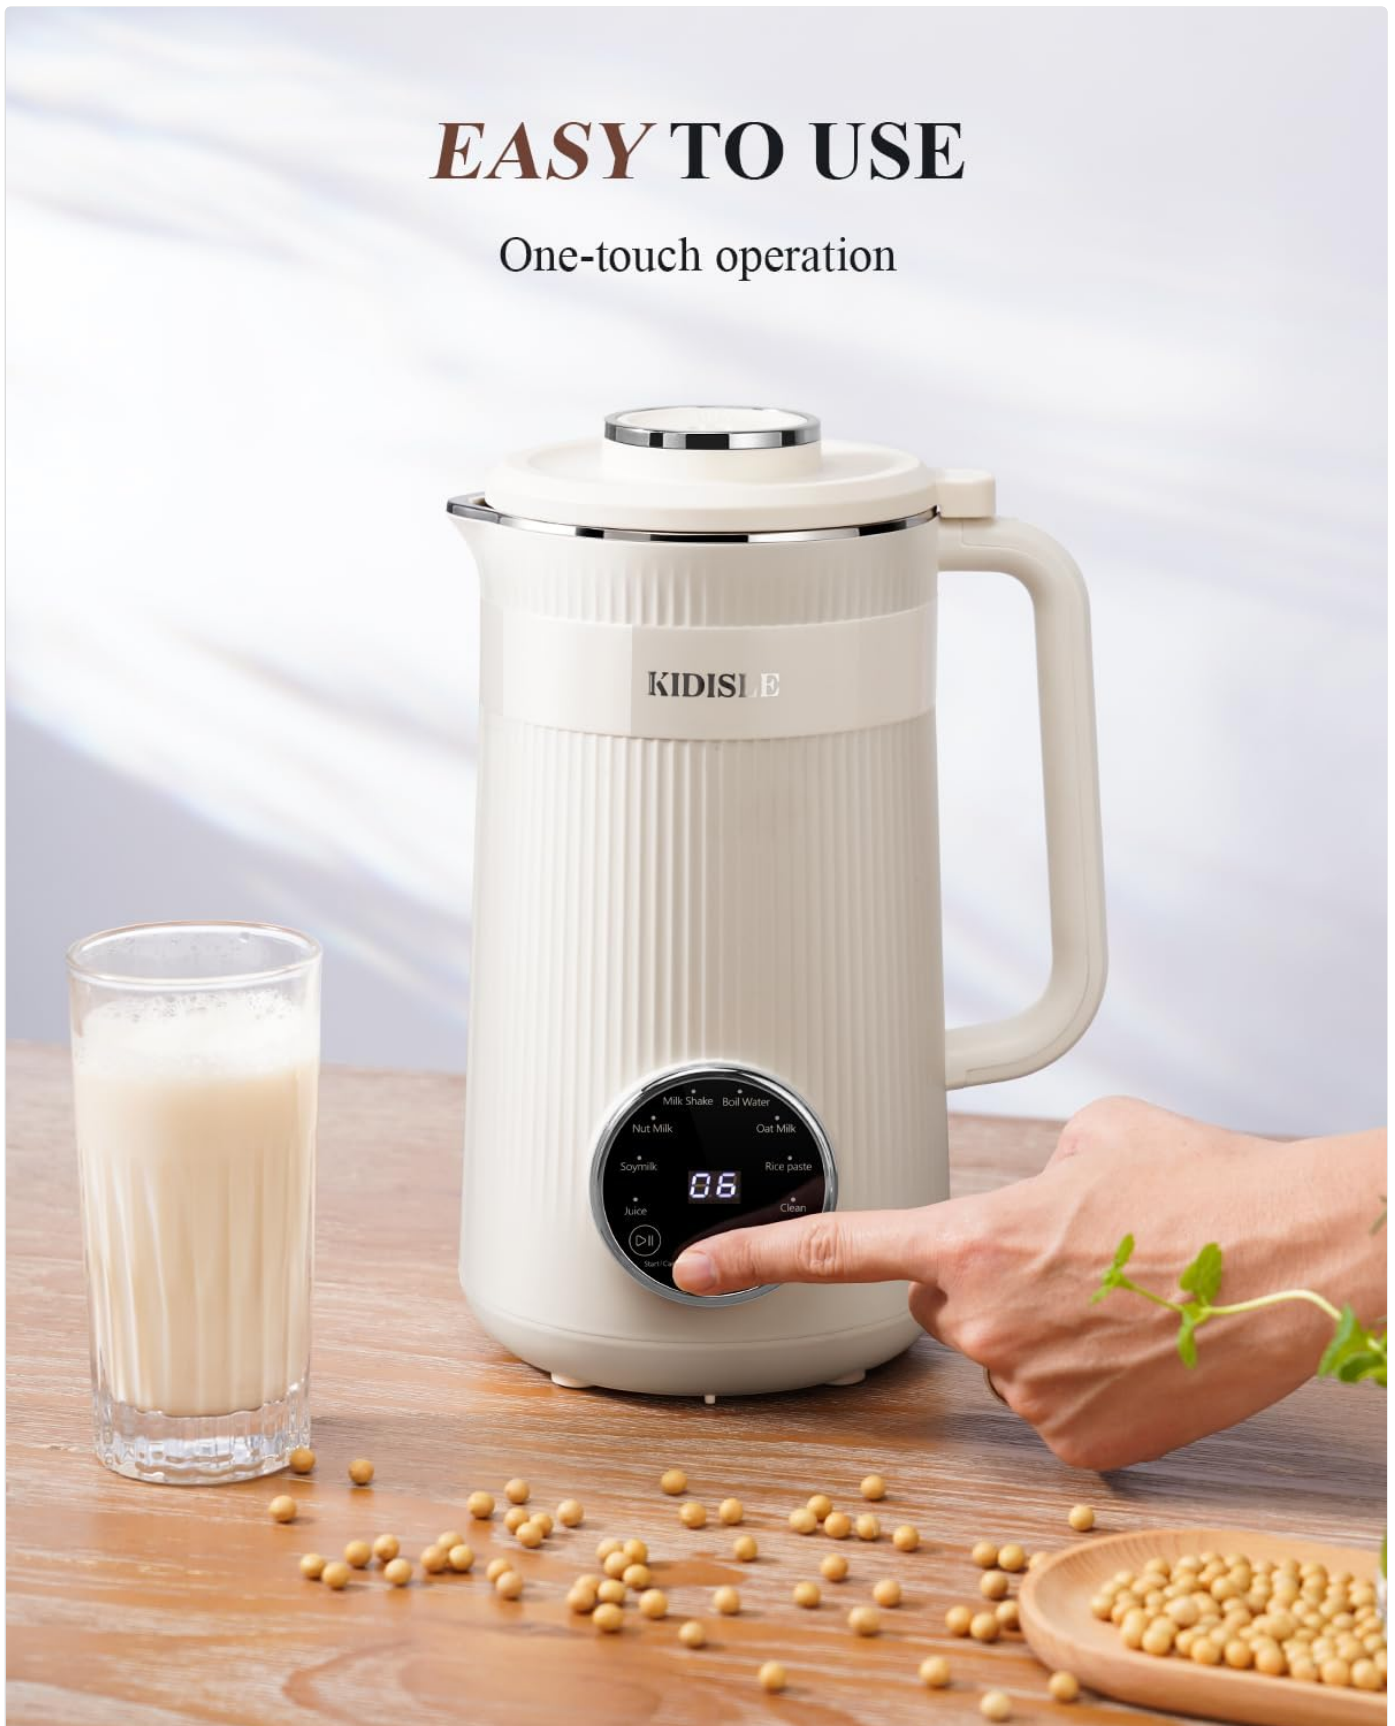


Image: Simple one-touch operation for ease of use.

## **Specific Functions**

- **Nut Milk:** Designed for making various nut milks (e.g., almond, cashew). Add soaked nuts and water. The program typically includes heating and blending cycles. Use the provided strainer or nut milk bag for a smoother consistency if desired.
- **Soy Milk:** For preparing fresh soybean milk. Soaking soybeans overnight is recommended for best results. The program involves heating, grinding, and cooking.
- **Oat Milk:** Creates creamy oat milk. Use rolled oats and water. This function typically involves blending without extensive heating to prevent sliminess.
- **Milk Shake:** Blends ingredients for milkshakes or smoothies. This is a cold blending function.
- **Juice:** Extracts juice from fruits and vegetables. This is a cold blending function.
- **Rice Paste:** Prepares warm rice paste or porridge. Add rice and water. The program includes cooking and blending.
- **Boil Water:** Heats water to boiling temperature.
- **Clean:** A self-cleaning cycle to assist with post-use cleanup. Add water and a drop of dish soap, then run the cycle.



Image: Visual representation of the 8-in-1 multi-functionality, showcasing different beverages and dishes that can be prepared.

## Delay Start Function

The Delay Start function allows you to set a timer for the appliance to begin operation at a later time, up to 12 hours.

1. Add ingredients and secure the lid.
2. Select your desired function using the 'Menu' button.
3. Press the 'Delay Start' button. The display will show a default delay time.
4. Press 'Delay Start' repeatedly to adjust the delay time in increments.
5. Once the desired delay time is set, press 'Start/Cancel' to confirm. The appliance will count down and begin the program automatically.

# DELAY START TIME

Up to 12 hours



Image: Illustrates setting the delay start for overnight preparation, providing fresh beverages in the morning.

## Keep Warm Function

After certain hot programs (e.g., Soy Milk, Rice Paste), the appliance may automatically enter a 'Keep Warm' mode, maintaining the temperature for up to 2 hours. Refer to the recipe book for specific program behaviors.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Cool Down:** Allow the appliance to cool completely if it has been used for hot programs.
3. **Self-Clean Function:** For initial cleaning, add water up to the MIN line and a drop of dish soap. Select the 'Clean' function and press 'Start/Cancel'.
4. **Manual Cleaning (Jug Interior):** After the self-clean cycle or for thorough cleaning, carefully rinse the interior. Use the provided cleaning brush to scrub around the blades and the bottom of the jug. **Exercise extreme caution around the sharp blades. Do not use your bare hands.**
5. **Lid:** Wash the lid with warm, soapy water and rinse thoroughly.
6. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
7. **Accessories:** Wash the measuring cup, strainer, and nut milk bag with warm, soapy water. Rinse and dry.
8. **Drying:** Ensure all parts are completely dry before storing.



Image: The sharp blades require careful handling during cleaning. Use the provided brush.

## TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not power on.	Not plugged in; power outlet issue; lid not properly secured.	Ensure power cord is firmly plugged into both the appliance and a working outlet. Check lid alignment.
Program stops unexpectedly.	Lid dislodged; overheating; insufficient liquid.	Check lid position. Allow appliance to cool down. Ensure liquid level is between MIN and MAX lines.
Poor blending results.	Too many ingredients; insufficient liquid; ingredients not properly soaked (for some programs).	Reduce ingredient quantity. Add more liquid. Ensure ingredients like soybeans are pre-soaked as recommended.
Overflow during operation.	Overfilled past MAX line.	Do not fill past the MAX fill line. Reduce liquid or ingredient volume.
Unusual noise during operation.	Hard ingredients; foreign object; motor issue.	Ensure no hard foreign objects are in the jug. If noise persists, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact KIDISLE customer support.

## SPECIFICATIONS

Feature	Detail
Brand	KIDISLE
Model Number	HB1018W2407
Capacity	32 oz (approximately 2 Pounds)
Product Dimensions	7.8"D x 7.8"W x 12.8"H
Material	Stainless Steel (Container, Blades), BPA Free
Power Source	AC (120V)
Controls Type	Touch
Special Feature	Programmable, Delay Start, Keep Warm
Included Components	Brush, Fine mesh strainer, Nut milk bag, Recipe Guide
Item Weight	4.3 pounds

## WARRANTY AND SUPPORT

This KIDISLE 8-in-1 Nut Milk Maker Blender (Model HB1018W2407) comes with a **2-Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by accident, abuse, misuse, or improper operation.
- Damage caused by unauthorized repair or modification.
- Normal wear and tear.
- Damage from failure to follow cleaning and maintenance instructions.

For warranty claims, technical support, or any questions regarding your product, please contact KIDISLE customer service through the retailer where the product was purchased or visit the official KIDISLE website for contact information.

