

SC30

Generic SC30 6L Digital Air Fryer Oven Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. Please read all instructions carefully before operating this appliance.

- **Read All Instructions:** Familiarize yourself with the appliance's operation before first use.
- **Electrical Safety:** Do not immerse the power cord, plugs, or the main housing in water or other liquids to prevent electric shock.
- **Children:** Close supervision is necessary when any appliance is used by or near children.
- **Hot Surfaces:** Surfaces may become hot during use. Always use oven mitts or heat-resistant gloves when handling hot components.
- **Ventilation:** Do not block any air vents. Ensure adequate space (at least 4 inches) around the appliance for proper air circulation.
- **Placement:** Place the appliance on a stable, heat-resistant surface, away from walls and other heat-sensitive materials.
- **Unplug When Not In Use:** Always unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling or storing.
- **Damaged Cord/Plug:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- **Intended Use:** Use the appliance only for its intended household purpose.

2. PRODUCT OVERVIEW

The Generic SC30 6L Digital Air Fryer Oven is designed for efficient and versatile cooking. It features a large capacity, digital controls, and a non-stick cooking surface for healthier meal preparation.

Key Components:

- **Main Unit:** Houses the heating element and fan.
- **Cooking Basket/Pot:** Removable container for food, featuring a PTFE non-stick coating.
- **Digital Control Panel:** Touch-sensitive interface for setting time, temperature, and selecting presets.
- **Air Vents:** Located at the rear and bottom for proper airflow.
- **Handle/Release Button:** For safe handling and removal of the cooking basket.



Figure 2.1: Overall view of the Generic SC30 6L Digital Air Fryer Oven, showing its tilted position and digital display.

3. SETUP

Before using your air fryer oven for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials, including any stickers or labels.
2. **Clean:** Wipe the exterior of the appliance with a damp cloth. Wash the cooking basket/pot and any accessories with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the main unit on a stable, level, heat-resistant surface. Ensure there is at least 4 inches (10 cm) of clear space around the back and sides of the appliance for proper ventilation. Do not place it directly under cabinets.
4. **First Use Cycle:** To eliminate any manufacturing odors, it is recommended to run the air fryer empty for about 10-15 minutes at 350°F (175°C) before cooking food. A slight odor may be present, which is normal.



Figure 3.1: The air fryer oven placed on a kitchen counter, ready for use.

4. OPERATING INSTRUCTIONS

Operating your Digital Air Fryer Oven is straightforward with its intuitive touch control panel.

Basic Operation:

1. **Prepare Food:** Place your ingredients into the cooking basket/pot. Do not overfill; ensure there is enough space for air to circulate.
2. **Insert Basket:** Slide the cooking basket securely into the main unit.
3. **Power On:** Plug the power cord into a grounded electrical outlet. The digital display will illuminate.
4. **Set Temperature and Time:** Use the touch controls to adjust the desired cooking temperature and time. Refer to cooking guides for recommended settings.
5. **Select Preset (Optional):** The appliance may have preset functions for common foods. Select a preset if available and desired.
6. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
7. **Shake/Turn Food:** For even cooking, some recipes may require shaking or turning the food halfway through the cooking time. Carefully remove the basket, shake/turn, and reinsert. The appliance will resume cooking.
8. **Remove Food:** Once the cooking cycle is complete, the appliance will beep. Carefully remove the cooking basket using oven mitts.

9. **Serve:** Transfer cooked food to a serving dish.



Figure 4.1: The cooking basket containing chicken wings, demonstrating food placement and capacity.



Figure 4.2: The air fryer oven in a tilted position, illustrating its capability to cook larger items like a whole chicken.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer oven.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Cooking Basket/Pot:** Wash the cooking basket/pot and any accessories with warm, soapy water. Use a non-abrasive sponge or cloth to protect the PTFE non-stick coating. Rinse thoroughly and dry completely. *Note: The cooking basket/pot is NOT dishwasher safe.*
3. **Clean Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh abrasive cleaners or scouring pads.
4. **Clean Interior:** If necessary, wipe the interior of the main unit with a damp cloth. Ensure no water enters the electrical components.
5. **Storage:** Once clean and dry, store the appliance in a cool, dry place.

6. TROUBLESHOOTING

If you encounter issues with your air fryer oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Basket is overfilled; food not shaken/turned.	Do not overfill the basket. Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty food cooking.	Clean the cooking basket and interior thoroughly after each use. For fatty foods, drain excess fat during cooking.
Food is not crispy.	Too much moisture; not enough oil (if desired).	Pat food dry before air frying. Lightly brush or spray food with oil for extra crispiness.

7. SPECIFICATIONS

Technical details for the Generic SC30 6L Digital Air Fryer Oven:

Model: SC30

Capacity: 6 Liters

Product Dimensions: 15.15"D x 13.89"W x 13.66"H

Output Wattage: 1500 Watts

Voltage: 120 Volts

Control Method: Touch

Material: Plastic, PTFE (for cooking surfaces)

Item Weight: Approximately 16.8 Pounds

Special Feature: BBQ Grill Rack

Dishwasher Safe: No (for cooking basket/pot)

8. WARRANTY AND SUPPORT

This product is covered by a limited warranty. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or service inquiries, please reach out to the customer service department of your retailer or the manufacturer.