

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ECR4Kids](#) /

› [ECR4Kids Tree Storage Organizer with 12 Bins - Instruction Manual](#)

ECR4Kids ELR-17524-CT

ECR4Kids Tree Storage Organizer with 12 Bins - Instruction Manual

Model: ELR-17524-CT

[Introduction](#) [Safety Information](#) [Parts List](#) [Setup Instructions](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your ECR4Kids Tree Storage Organizer with 12 Bins. Please read this manual thoroughly before assembly and use to ensure safe and proper operation. Keep this manual for future reference.

The ECR4Kids Tree Storage Organizer is designed to help organize children's spaces, offering a practical solution for toys, books, and art supplies. It features a four-tier design with 12 plastic bins, promoting independent access and organization for children.

2. SAFETY INFORMATION

- **Adult Supervision:** Adult active engaged and direct supervision is required during assembly and use of this product.
- **Tip-Resistant Design:** The unit features a tip-resistant design. For additional stability, ensure the unit is securely attached to a wall using appropriate hardware (not explicitly stated if included, but implied by "anti-tip design allows a secure fit along a wall").
- **CPSIA Compliant:** This product is CPSIA compliant, meeting safety standards for children's products.
- **UL GREENGUARD Gold Certified:** Certified for low VOCs (Volatile Organic Compounds), contributing to healthier indoor air quality.
- **Rounded Edges:** Bins and frame feature rounded edges for enhanced safety.
- **Weight Distribution:** Distribute items evenly across the bins to maintain stability.
- **Choking Hazard:** Ensure small items are stored appropriately to prevent choking hazards for young children.

3. PARTS LIST

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- Organizer Frame (2 side panels, crossbars)
- Large Bins (4 units)
- Standard Bins (8 units)
- Assembly Hardware (screws, etc. - implied by "adult assembly required")



Image: Components of the ECR4Kids Tree Storage Organizer, showing the frame and various sized bins.

4. SETUP INSTRUCTIONS

Adult assembly is required for this storage organizer. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all parts listed in Section 3 are present.

2. **Assemble Frame:** Attach the crossbars to the side panels using the provided hardware. Ensure all connections are secure. The frame is designed with a "tree-inspired" aesthetic.
3. **Insert Bins:** Once the frame is assembled, place the 8 standard and 4 large plastic bins onto the four tiers. The bins can be positioned at a sloped angle for easy access or flat, depending on preference.
4. **Positioning:** Place the assembled unit against a wall for optimal stability. The anti-tip sides are designed for this purpose. Two units can be placed back-to-back to create an island configuration (additional unit sold separately).
5. **Secure to Wall (Recommended):** For maximum safety, especially in environments with active children, it is recommended to secure the unit to a wall using appropriate wall anchors and screws (not included, but standard for furniture safety).



Image: A fully assembled ECR4Kids Tree Storage Organizer with bins in place, demonstrating its four-tiered structure.

Standout Features



12 removable storage bins



Bins can be placed flat or at an angle



Easy to clean



Cut-out handles



Image: Close-up of the ECR4Kids Tree Storage Organizer showing how bins can be placed either flat or at an angle on the shelves.

5. OPERATING INSTRUCTIONS

The ECR4Kids Tree Storage Organizer is designed for intuitive use by children, promoting self-sufficiency in organizing their belongings.

- **Accessing Items:** Children can easily access toys, books, or art supplies from the open-front bins. The sloped angle of the bins (if configured that way) makes contents visible and reachable.
- **Removing Bins:** Each lightweight bin is easy to remove, allowing children to take their play items to the floor, an activity table, or another area.
- **Returning Items:** Encourage children to return items to their designated bins after use. The open design facilitates easy cleanup and organization.
- **Versatile Storage:** Utilize the eight standard and four large bins for various items. Large bins are suitable for bulkier toys, while standard bins can hold smaller items or art supplies.



Image: A child independently accessing toys from one of the bins in the organizer.

Your browser does not support the video tag.

Video: Official product video demonstrating the features and use of the ECR4Kids Tree Storage Organizer with 12 Bins. It shows how bins can be removed and replaced, and children interacting with the organizer.

6. MAINTENANCE

- **Cleaning:** Wipe clean with a damp cloth or sponge. Avoid abrasive cleaners that may damage the plastic or frame finish.
- **Regular Inspection:** Periodically check all connections and hardware to ensure they remain tight and secure. Tighten any loose screws as needed.
- **Bin Care:** The plastic bins are durable. If a bin becomes damaged, contact customer support for replacement options.

360° Storage

Create an island by placing two units back to back to maximize organization and accessibility (additional unit sold separately)



Angled anti-tip sides for stability

Image: A hand demonstrating how to easily clean the plastic bins of the storage organizer with a cloth.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit feels wobbly or unstable.	Loose assembly hardware; unit not secured to a wall; uneven weight distribution.	Ensure all screws are tightened. Secure the unit to a wall using appropriate anchors. Distribute items evenly in bins.
Bins fall off the rods easily.	Bins not properly seated on the rods; excessive force when removing/inserting.	Ensure bins are fully seated on the support rods. Instruct children to handle bins gently.
Difficulty removing or inserting bins.	Bins are overloaded; debris on the rods or bin edges.	Reduce the weight in the bins. Clean the rods and bin edges to ensure smooth movement.

Problem	Possible Cause	Solution
---------	----------------	----------

8. SPECIFICATIONS

Feature	Detail
Model Name	Tree Storage Organizer with 12 Bins
Model Number	ELR-17524-CT
Brand	ECR4Kids
Color	Contemporary
Product Dimensions (Overall)	35.9" W x 15.28" D x 35.5" H (91.2 cm W x 38.8 cm D x 90.2 cm H)
Standard Bin Dimensions	8.1" L x 11.6" W x 5.1" H (20.5 cm L x 29.5 cm W x 13 cm H)
Large Bin Dimensions	16.3" L x 11.6" W x 5.1" H (41.5 cm L x 29.5 cm W x 13 cm H)
Number of Bins	12 (8 standard, 4 large)
Material	Plastic (bins), Frame material not explicitly stated but implied durable.
Item Weight	15 Pounds (6.8 kg)
Assembly Required	Yes
Certifications	UL GREENGUARD Gold Certified, CPSIA Compliant

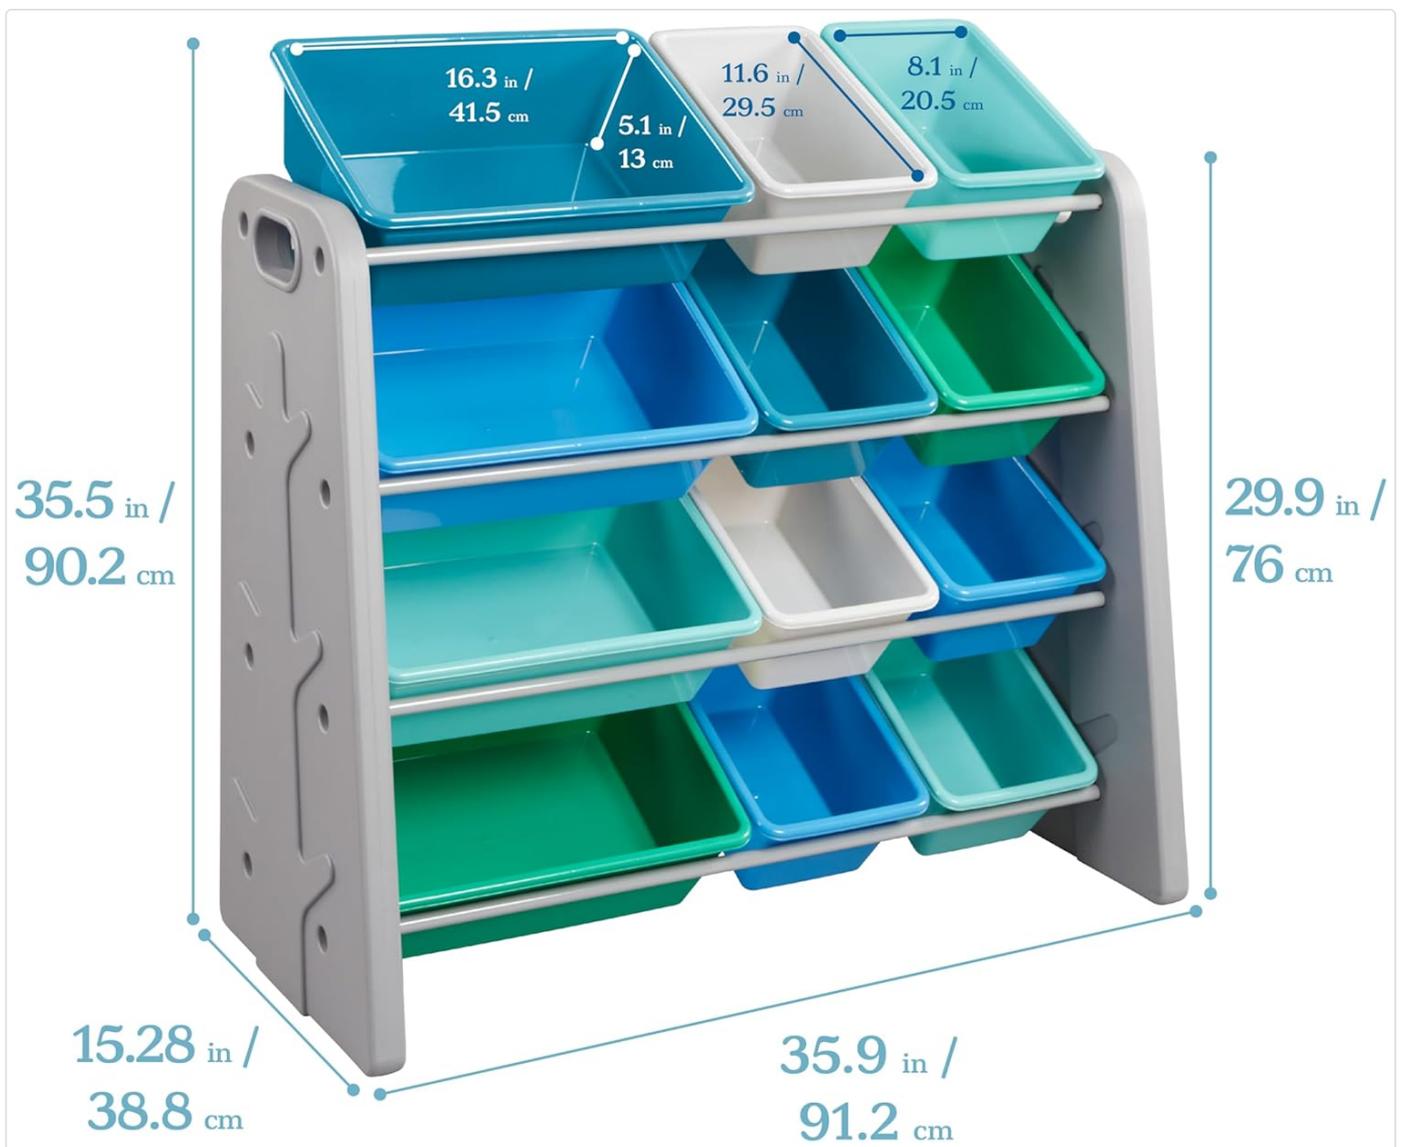


Image: Detailed diagram of the ECR4Kids Tree Storage Organizer showing overall dimensions and individual bin dimensions.

9. WARRANTY & SUPPORT

For warranty information or customer support, please refer to the official ECR4Kids website or contact their customer service department directly. Details regarding specific warranty periods and coverage are typically provided with your purchase documentation or on the manufacturer's website.

Contact Information:

- **Brand:** ECR4Kids
- **Website:** [Visit the ECR4Kids Store on Amazon](#) (for general product information)
- For direct support, please search for ECR4Kids customer service contact details online.