

DOBE TYX-3611

DOBE TYX-3611 Controller Charging Dock Instruction Manual

For Xbox One and Xbox Series X|S Controllers

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your DOBE TYX-3611 Controller Charging Dock. Please read this manual thoroughly before operating the device to ensure optimal performance and safety. This high-speed single-controller charging dock provides a convenient, fast, and safe charging experience for Xbox controllers.

PRODUCT OVERVIEW AND FEATURES

The DOBE TYX-3611 charging dock is designed to efficiently charge your Xbox One or Xbox Series X|S controllers. Key features include:

- **High-Speed Charging:** Utilizes advanced charging technology for rapid controller power replenishment.
- **Compact Design:** Small footprint for easy portability and placement.
- **Broad Compatibility:** Suitable for various Xbox Series and Xbox One controllers.
- **Safety and Reliability:** Constructed with quality materials and stable charging technology for secure operation.
- **Charging Indicator:** Features an intuitive indicator light for charging status.
- **Oxidation Resistant Contacts:** Metal contact points designed to prevent rust and ensure consistent charging.



Image: Two DOBE TYX-3611 charging docks, green and red, displaying the DOBE logo and charging indicator.



Image: An Xbox controller correctly seated on the charging dock.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- DOBE TYX-3611 Controller Charging Dock
- 2000mAh Rechargeable Battery Pack
- Battery Cover (compatible with Xbox One/Series X|S controllers)
- USB Charging Cable



Image: The retail packaging illustrating the included charging dock, battery, battery cover, and USB cable.

SETUP INSTRUCTIONS

- 1. Install Battery Pack:** Open the battery compartment on your Xbox controller. Insert the provided 2000mAh rechargeable battery pack, ensuring correct polarity. Replace the original battery cover with the included compatible battery cover.
- 2. Connect Power:** Connect one end of the USB charging cable to the USB-C port on the back of the DOBE TYX-3611 charging dock. Connect the other end to a compatible USB power source (e.g., console USB port, USB wall adapter).
- 3. Place Controller:** Gently place your Xbox controller onto the charging dock, aligning the charging contacts on the controller with the pins on the dock. Ensure the controller is seated firmly.



Image: Rear view of the charging dock showing the USB-C power input.

OPERATING INSTRUCTIONS

Once the controller is correctly placed on the charging dock and the dock is powered, the charging process will begin automatically.

- **Charging Indication:** The indicator light on the front of the charging dock will illuminate to show the charging status. Typically, a specific color (e.g., red) indicates charging, and another color (e.g., green or blue) indicates a full charge. Refer to the product packaging or specific model details for exact color indications.
- **Full Charge:** Once the controller battery is fully charged, the indicator light will change, and the dock will cease charging to prevent overcharging.

Charge indication Perceptual intuition

Charging indicator light, embellish the atmosphere, add color, intuitive charging.



Image: Visual representation of the charging indicator light on the dock.

MAINTENANCE

To ensure the longevity and proper functioning of your charging dock:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the charging dock. Do not use abrasive cleaners or solvents.
- **Storage:** Store the dock in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Avoid Liquids:** Keep the charging dock away from water and other liquids to prevent damage.
- **Handle with Care:** Avoid dropping or subjecting the dock to strong impacts.

TROUBLESHOOTING

If you encounter issues with your charging dock, please refer to the following common solutions:

- **Controller Not Charging:**
 - Ensure the USB cable is securely connected to both the dock and the power source.
 - Verify that the power source is active and providing sufficient power.
 - Check that the controller is correctly seated on the dock, and the charging contacts are aligned and clean.
 - Confirm the rechargeable battery pack is properly installed in the controller.
- **Indicator Light Not Working:**
 - Ensure the dock is receiving power.
 - If the controller is fully charged, the light may indicate a full charge or turn off.
- **Slow Charging:**
 - Ensure you are using a compatible USB power adapter (e.g., 5V/1A or higher).

- Avoid charging through unpowered USB hubs or low-power USB ports.

If problems persist, please contact customer support.

SPECIFICATIONS

Model Number	TYX-3611
Compatibility	Xbox One, Xbox Series X S Controllers
Battery Capacity	2000mAh (included)
Input Port	USB-C
Item Weight	9.5 ounces (approx. 269 grams)
Package Dimensions	5.47 x 4.02 x 3.46 inches (approx. 13.9 x 10.2 x 8.8 cm)
Manufacturer	Shenzhen Yuyuanxin Electronic Technology Co.,Ltd

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.