

[Manuals.plus](#) /

› [SLOPEHILL](#) /

› SLOPEHILL Dog Training Collar Instruction Manual

SLOPEHILL D17T

SLOPEHILL Dog Training Collar Instruction Manual

Model: D17T | Brand: SLOPEHILL

INTRODUCTION

Welcome to the SLOPEHILL Dog Training Collar instruction manual. This device is designed to assist in humane and effective dog training through various modes, including beep, vibration, safe shock, and flash light. It is suitable for small, medium, and large dogs, aiming to improve behavior and enhance communication between you and your pet.

IMPORTANT SAFETY INFORMATION

- Do not leave the collar on your dog for more than 8 hours per day!
- Do not give this training kit to children or anybody with little to no expertise teaching dogs.
- Do not attach the dog leash to this training collar!
- Do not use the device on dogs who are less than three months old, weigh less than eight pounds, are old or pregnant, easily scared, aggressive, or in poor condition!
- Daily check the skin health of the dog's neck and clean the dog's neck region and collar with a damp towel. If there are any anomalies, discontinue usage of this product and consult a veterinarian!
- Training should start with the lowest level of stimulation.
- Shock mode is always the last choice.
- Don't charge with a charger above 5 volts.

PACKAGE CONTENTS

The SLOPEHILL Dog Training Collar package includes:

- Remote Control
- Receiver Collar (Orange, IP68 Waterproof)
- USB Charging Cable (Dual Type-C)
- Lanyard
- Conductive Silicone Contact Points (various lengths)
- Test Light
- User Manual



Image: The complete SLOPEHILL Dog Training Collar kit, including the remote control and the orange receiver collar.

Remote Control

The remote control features an intuitive design for easy operation.

- **Mode Gear Adjustment Knob:** Press to cycle through beep, vibration, and shock modes. Rotate to adjust intensity levels (1-8 for beep/vibration, 0-99 for shock).
- **Channel Button:** Supports training up to 2 dogs simultaneously.
- **Beep Button:** Activates an audible tone.
- **Vibration Button:** Delivers a vibration.
- **Shock Button:** Activates a static shock.
- **OFF/ON/Shock Locked Switch:** Turns the remote on/off or locks the shock function to prevent accidental activation.
- **Light Button:** Short press for solid white light, long press for flashing lights on the receiver collar.

No Shock Mode

Prevent Accidental Shock

Back Clip



Security No Shock
(Ensure safety during use)



Image: Close-up of the SLOPEHILL remote control, highlighting its buttons and display, including the 'No Shock' switch.

Receiver Collar

The receiver collar is designed for durability and comfort.

- **IP68 Waterproof:** Allows for use in various outdoor conditions, including swimming, splashing, and rain.
- **Adjustable Collar Strap:** Length from 8 to 26 inches, suitable for dogs from 8 to 140 lbs. Can be cut to size.

- **Flash Light:** Two safety anti-lost light modes (solid white and flashing) for visibility at night.
- **Conductive Silicone Prongs:** Deliver vibration and shock. Replaceable with different lengths.

IP68 Waterproof Receiver Collar

Note: Remote is not waterproof



Swimming



Splash



Rain



Bathing

Image: The IP68 waterproof receiver collar shown on a dog near water, demonstrating its water resistance.

SETUP GUIDE

Charging the Device

Both the remote and receiver are rechargeable. Use the provided dual Type-C USB cable to charge both units simultaneously.

- Connect the USB cable to a power source (e.g., laptop, phone charger, PC, power bank).
- Connect the Type-C ends to the charging ports on the remote and receiver.
- A full charge takes approximately 2 hours. The collar can work for 15-20 days, and the remote for up to 45 days on a single charge.



Image: The remote and receiver collar connected to the dual Type-C USB charging cable, illustrating the

charging process.

Adjusting Collar Fit

Ensure the collar fits snugly but comfortably around your dog's neck. The strap is adjustable from 8 to 26 inches and can be trimmed if too long.

Recommended Dog Weight 8-140 lbs

Collar length: 8-26 inch



Adjustable collar strap - Cut the excess length



Image: Diagram illustrating the adjustable collar strap and recommended dog weight range (8-140 lbs) for proper fit.

Pairing the Remote and Receiver

To pair your remote and receiver:

1. Long press the receiver button.
2. After a beep, the green light on the receiver will flash continuously.
3. Then, press any function button on the remote control.
4. The receiver will beep again when the pairing is successful.

Video: A detailed demonstration of the functional operations of the Slopehill Dog Shock Collar, including the pairing process.

Replacing Electrode Columns

To replace the electrode columns:

1. Remove the two conductive silicone caps.
2. Use the hexagonal holes on the electric shock test lamp to unscrew the two electrode columns.
3. Replace the electric shock column with another length and tighten it, and finally install the conductive silicone cap.

Video: Step-by-step guide on how to replace the electrode columns on the receiver collar.

OPERATING MODES

The SLOPEHILL Dog Training Collar offers five humane training modes:

- **Beep Mode:** Provides an audible tone (1-8 levels).
- **Vibration Mode:** Delivers a vibration (0-8 levels).
- **Safe Shock Mode:** Provides static stimulation (0-99 levels).
- **Flash Light Mode:** Activates a light on the collar (solid or flashing).
- **No Shock Mode:** Disables the static shock function for safety.

To select and adjust modes:

1. Press the top knob on the remote to cycle through beep, vibration, and shock modes.
2. Rotate the knob to adjust the intensity level for the selected mode.

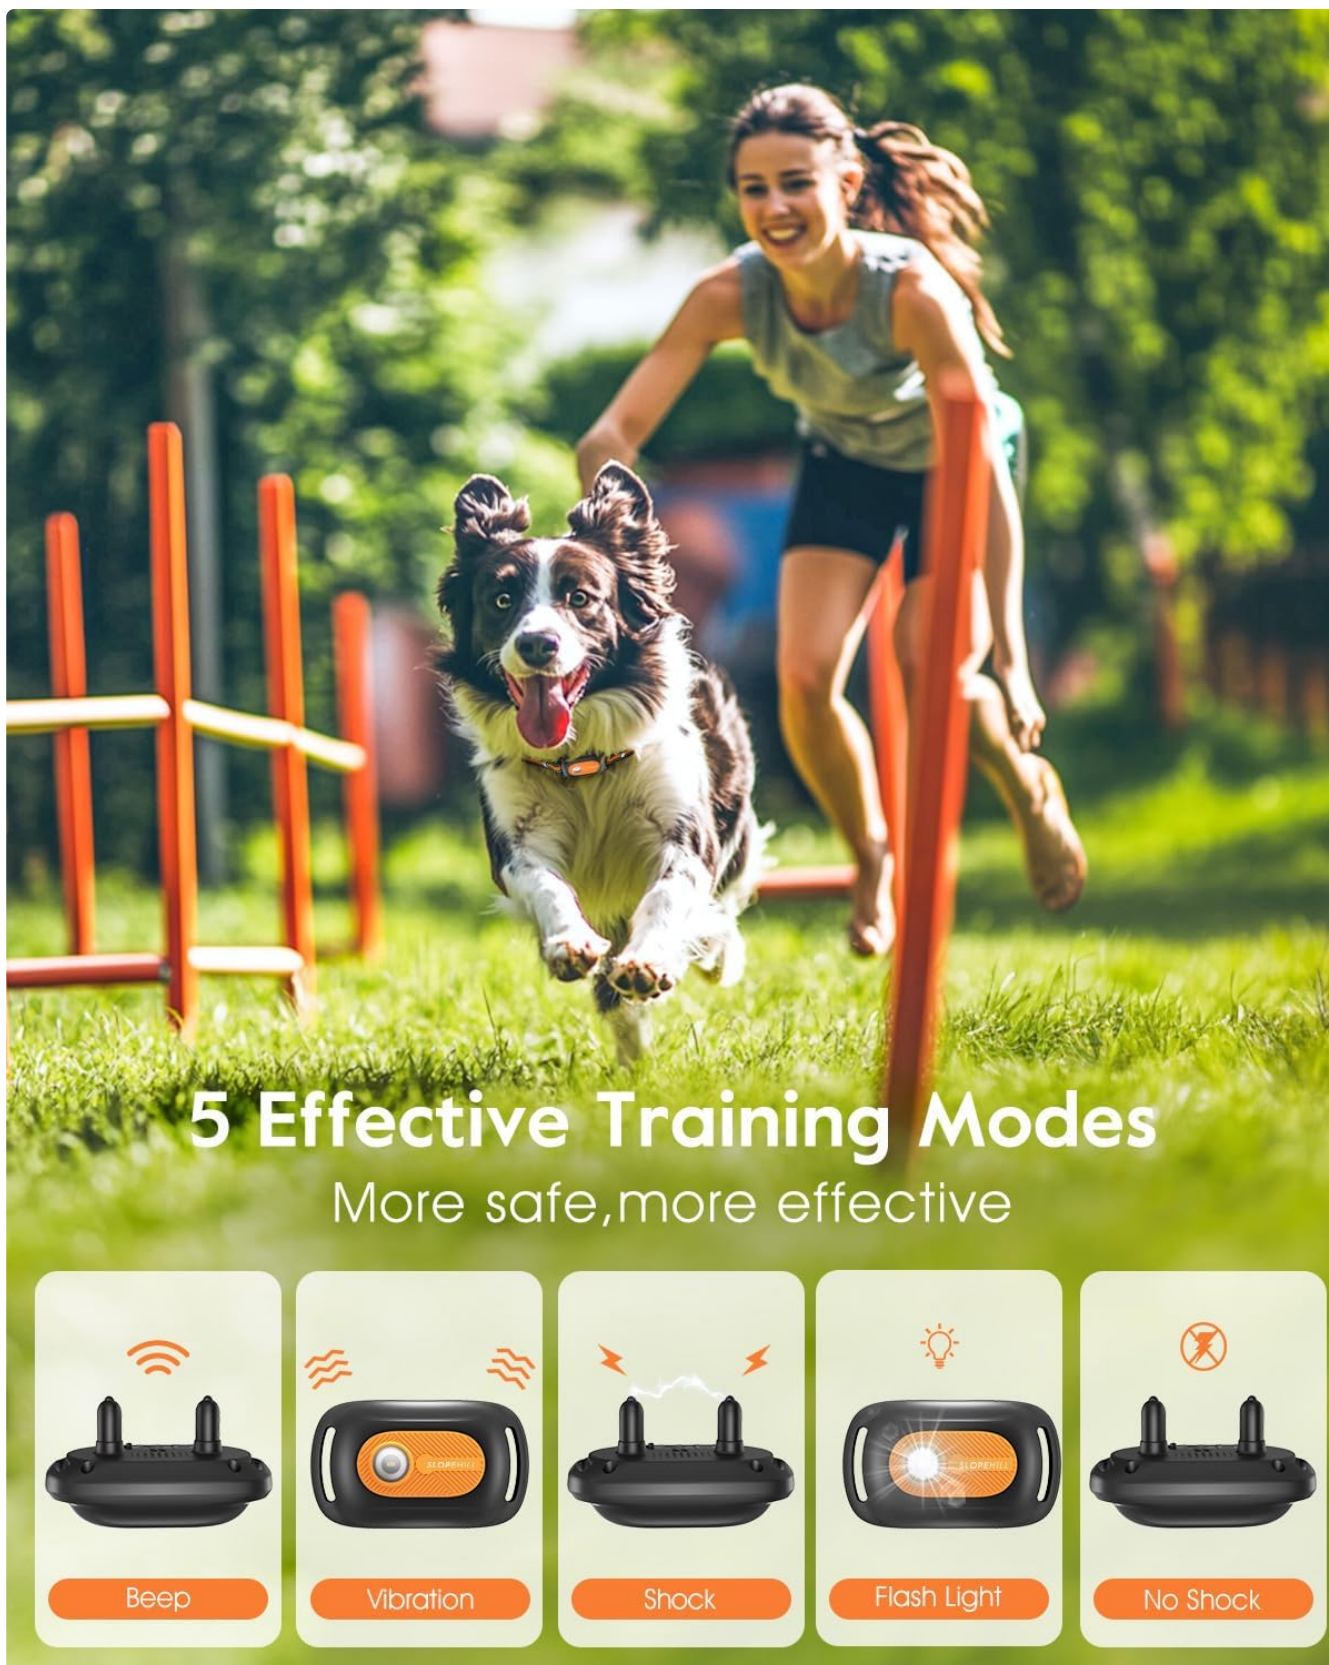


Image: Visual representation of the five effective training modes: Beep, Vibration, Shock, Flash Light, and No Shock.

Testing the Shock Function

To test the electric shock function safely:

1. Connect the test light to the receiver's two electric shock pins.
2. Push the remote control's electric shock button (ensure the intensity level is more than 0).
3. The test red light will illuminate if the shock function is working.

Video: Demonstration of how to test the electric shock function using the provided test light.

MAINTENANCE

- Regularly check the skin health of your dog's neck.
- Clean the dog's neck region and the collar with a damp towel.
- Ensure the collar is dry before charging or prolonged storage.

TROUBLESHOOTING

If you encounter issues with your SLOPEHILL Dog Training Collar, consider the following:

- **Device not responding:** Ensure both remote and receiver are charged and powered on. Re-pair the devices if necessary.
- **Shock function not working:** Check if the "Shock Locked" switch is in the OFF position. Ensure the intensity level is set above 0.
- **Collar not vibrating/beeping:** Check battery levels and ensure the correct mode is selected and intensity is set above 0.
- **Poor range:** Ensure there are no significant obstructions between the remote and the collar.

For further assistance, refer to the user manual or contact customer support.

SPECIFICATIONS

Feature	Detail
Item Weight	10.8 ounces
Item Model Number	D17T
Batteries	2 CR123A batteries required. (included)
Item Package Dimensions L x W x H	6.85 x 4.45 x 2.01 inches
Item Dimensions LxWxH	5.5 x 1.77 x 0.1 inches
Color	Orange
Material	Nylon
Age Range Description	All Life Stages
Breed Recommendation	All Breed Sizes

Feature	Detail
Remote Range	Up to 4200ft
Waterproof Rating (Receiver)	IP68
Training Modes	Beep, Vibration, Safe Shock, Flash Light, No Shock
Beep/Vibration Levels	1-8
Shock Levels	0-99

WARRANTY & SUPPORT

Warranty: 1 year manufacturer warranty.

Money-back Guarantee: 30-day money-back guarantee.

Free Returns: 60-day free returns.

Customer Support:

- Email: support@islopehill.com
- Phone: +1-732-762-2943
- 24-Hour Online Support (7 days/24 hours)
- Professional customer service team.