

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AKASO](#) /

› [AKASO Action Camera Ski Kit Bundle Instruction Manual](#)

AKASO Ski Kit Bundle

AKASO Action Camera Ski Kit Bundle

INSTRUCTION MANUAL

Brand: AKASO | Model: Ski Kit Bundle

Introduction

This instruction manual provides essential information for the proper setup, operation, and maintenance of your AKASO Action Camera Ski Kit Bundle. Please read this manual thoroughly before using the product to ensure optimal performance and safety. This kit is designed to be compatible with most action camera brands, offering versatile mounting solutions for various activities, especially skiing.

Package Contents

The AKASO Action Camera Ski Kit Bundle includes the following components:

- Flat Mounts (x2):** For attaching to flat surfaces.
- Adhesive Tape (x2):** Double-sided adhesive for secure mounting.
- Handlebar Clip Mount (x1):** For attaching to handlebars or ski poles.
- J-Hook Mount (x1):** Provides an extended mounting option.
- A Mount (x1):** Additional mounting accessory.
- Rubber Ring for Clip Mount (x1):** Enhances grip for clip mounts.
- Long Thumb Screw (x4):** For securing mounts.
- Chest Strap (x1):** Adjustable strap for chest-level recording.
- Buckle Mount (x4):** Quick-release buckles for various attachments.
- Extension Stick (x1):** Hollow stick for helmet mounting, reducing wind resistance.



Flat Mount x2



Adhesive Tape x2



Handlebar Clip
Mount x1



J-Hook
Mount x1



A Mount x1 Rubber Ring for
Clip Mount x1



Long Thumb
Screw x4



Chest Strap x1



Buckle Mount x4



Extension Stick x1


Image showing all components included in the AKASO Action Camera Ski Kit Bundle: Flat Mounts, Adhesive Tapes, Handlebar Clip Mount, J-Hook Mount, A Mount, Rubber Ring for Clip Mount, Long Thumb Screws, Chest Strap, Buckle Mounts, and Extension Stick.

Setup Instructions

1. Helmet Mounting

To mount your action camera to a helmet, use the flat double-sided adhesive tape with the extension stick. The hollow design of the extension stick helps reduce wind resistance during movement. This setup is ideal for capturing wide-angle footage, especially with 360 cameras.

1. Clean the desired flat surface on your helmet thoroughly.
2. Attach a Flat Mount to the helmet using the Adhesive Tape, ensuring a firm press for secure adhesion.
3. Connect the Extension Stick to the Flat Mount using a Long Thumb Screw.
4. Attach your action camera to the other end of the Extension Stick.

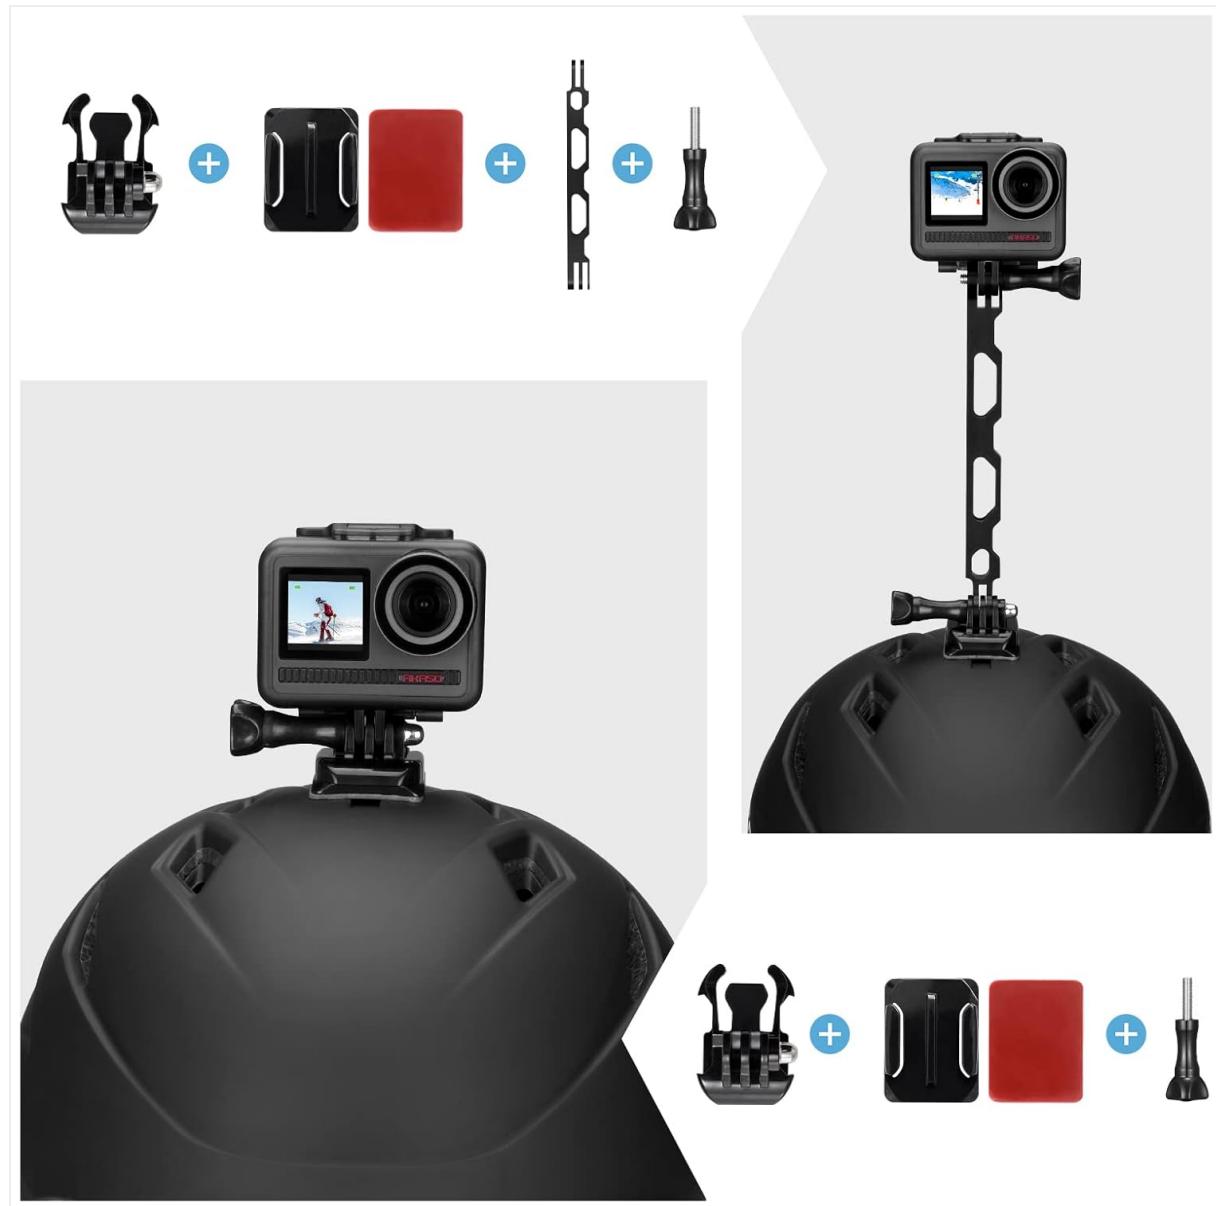

Components for helmet mounting, including flat mounts, adhesive tape, and the extension stick.



An action camera securely mounted on a helmet, ready for use.



A user wearing a helmet with an action camera attached, demonstrating the helmet mount in action.

2. Chest Strap Mounting

The Chest Strap allows for immersive video and photo footage from a chest-level perspective. It is adjustable to fit various body sizes.

- Chest circumference: 25-67 inches
- Shoulder strap length: 18-54 inches

1. Adjust the Chest Strap to comfortably fit your chest and shoulders.
2. Attach your action camera to the Chest Strap's mounting plate using a Buckle Mount and a Long Thumb Screw.
3. Ensure the camera is securely fastened and positioned to capture the desired angle.



A person skiing while wearing an action camera on a chest strap, capturing dynamic footage.

3. Ski Pole Mounting

Utilize the Handlebar Clip Mount to attach your action camera to a ski pole for unique perspectives.

1. Open the Handlebar Clip Mount and position it around your ski pole.
2. Securely tighten the mount onto the ski pole.
3. Attach your action camera to the Handlebar Clip Mount using a Long Thumb Screw.



An action camera mounted on a ski pole, demonstrating an alternative mounting option.

Operating Instructions

Once your action camera is securely mounted using the appropriate accessories from this kit, refer to your camera's specific user manual for detailed operating instructions, including power on/off, recording modes, and settings adjustments. Ensure all connections are tight before engaging in any activity to prevent loss or damage to your camera.

Maintenance

Proper maintenance ensures the longevity and performance of your AKASO Ski Kit Bundle accessories:

- **Cleaning:** After each use, especially in snowy or wet conditions, wipe down all components with a clean, damp cloth. Ensure no residue remains on adhesive surfaces.
- **Drying:** Allow all components to air dry completely before storing to prevent corrosion or mold.
- **Storage:** Store the kit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect mounts and straps for any signs of wear, cracks, or damage. Replace any compromised parts immediately to ensure secure camera attachment.

Troubleshooting

If you encounter issues with your AKASO Ski Kit Bundle, consider the following:

- **Mount Instability:** Ensure all screws are tightened and adhesive mounts are applied to clean, dry surfaces. Re-apply adhesive tape if necessary.
- **Compatibility:** Verify that your action camera is compatible with standard action camera mounts. The kit is designed for broad compatibility.
- **Missing Parts:** Refer to the 'Package Contents' section. If any parts are missing upon arrival, contact AKASO customer support.

Specifications

Package Dimensions	7.76 x 5.2 x 3.11 inches
Item Weight	15.2 ounces
Brand	AKASO
Color	Black
Compatible Devices	Cameras
Mounting Type	Helmet Mount, Chest Mount, Handlebar Mount

Warranty and Support

For warranty information, product support, or to inquire about replacement parts, please refer to the official AKASO website or contact AKASO customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.