

BOBLOV W4 Model

BOBLOV W4 2K Mini Body Camera User Manual

Model: W4 Model

Brand: BOBLOV

INTRODUCTION

Thank you for choosing the BOBLOV W4 2K Mini Body Camera. This compact and versatile device is designed to capture your important moments with clarity and ease. Its lightweight and user-friendly design make it perfect for a variety of activities, from personal security to documenting your adventures. Please read this manual carefully to ensure proper operation and maintenance of your camera.

WHAT'S IN THE Box

Your BOBLOV W4 package includes the following items:

- 1x W4 body camera
- 1x back clip
- 1x magnetic neck strap
- 1x user manual
- 1x USB cable
- 1x adapter
- 1x card reader

Complete Package Contents



Image: All components included in the BOBLOV W4 package.

PRODUCT OVERVIEW AND KEY FEATURES

The BOBLOV W4 is engineered for performance and convenience. Below are its primary features:

- Stunning 2K Resolution:** Capture precious personal moments in 2K resolution.
- Lightweight Design:** Weighing only 50g, its ultra-portable design ensures effortless carrying.
- Extended Battery Life:** Equipped with an 800mAh battery, providing 90–120 minutes of continuous recording.
- One-Click Recording:** Designed for simplicity, offering user-friendly, one-click recording.
- Hands-Free Recording:** Capture experiences from a first-person perspective, ideal for various activities.

- **Versatile Wearing Options:** Includes a 360° rotatable back clip and an adjustable-length magnetic neck strap.



Image: The BOBLOV W4 camera, highlighting its lightweight design at only 50 grams.

800mAh

Battery Design

Enjoy 1.5-2 Hours of 2K Recording



Image: The camera's 800mAh battery provides 90-120 minutes of continuous recording.

User-Friendly Design

One-Click Recording for Instant Capture



Image: The camera features a user-friendly one-click recording function.

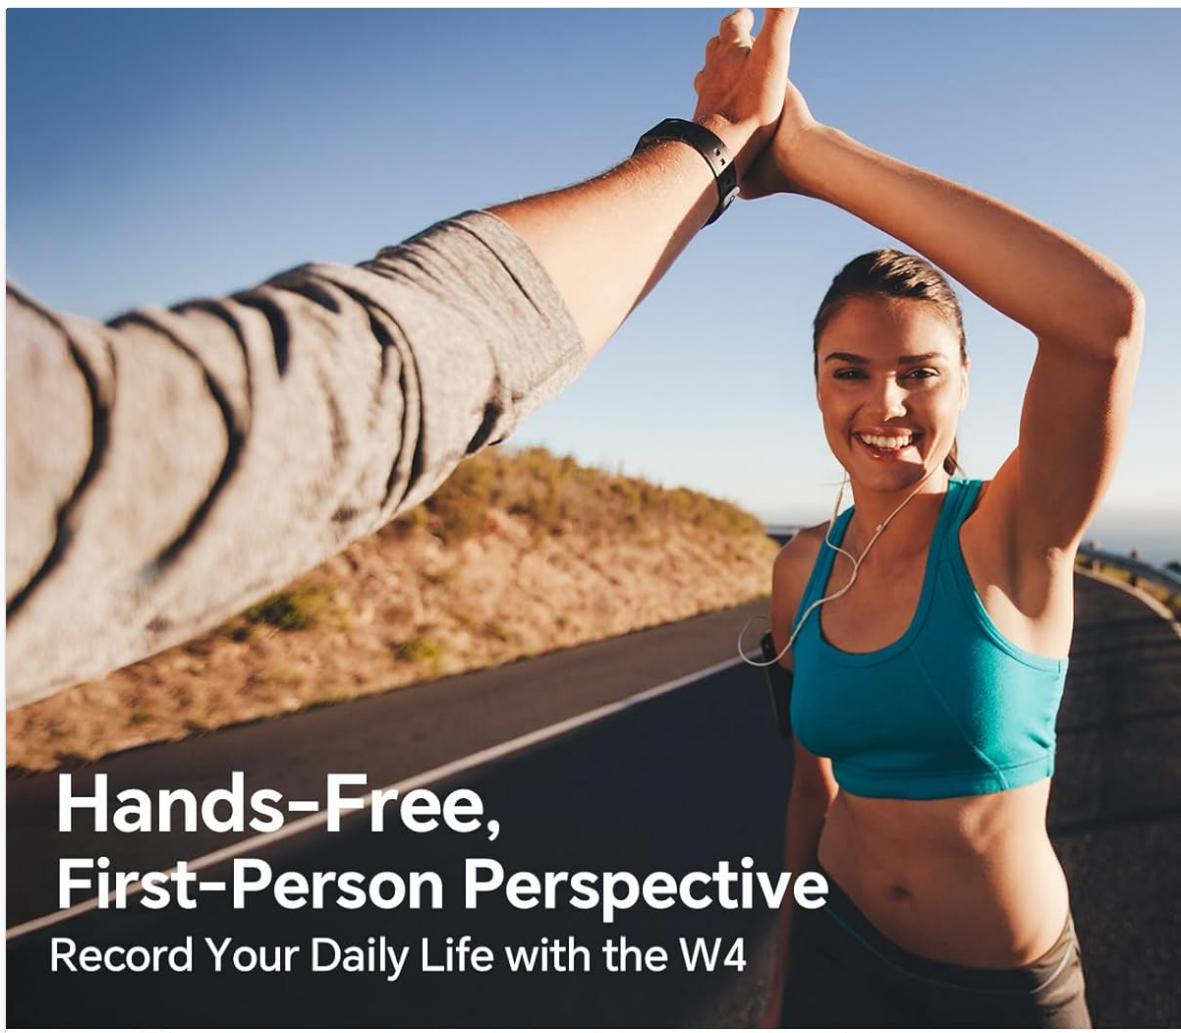


Image: Enjoy hands-free recording from a first-person perspective.

Versatile Wearing Options

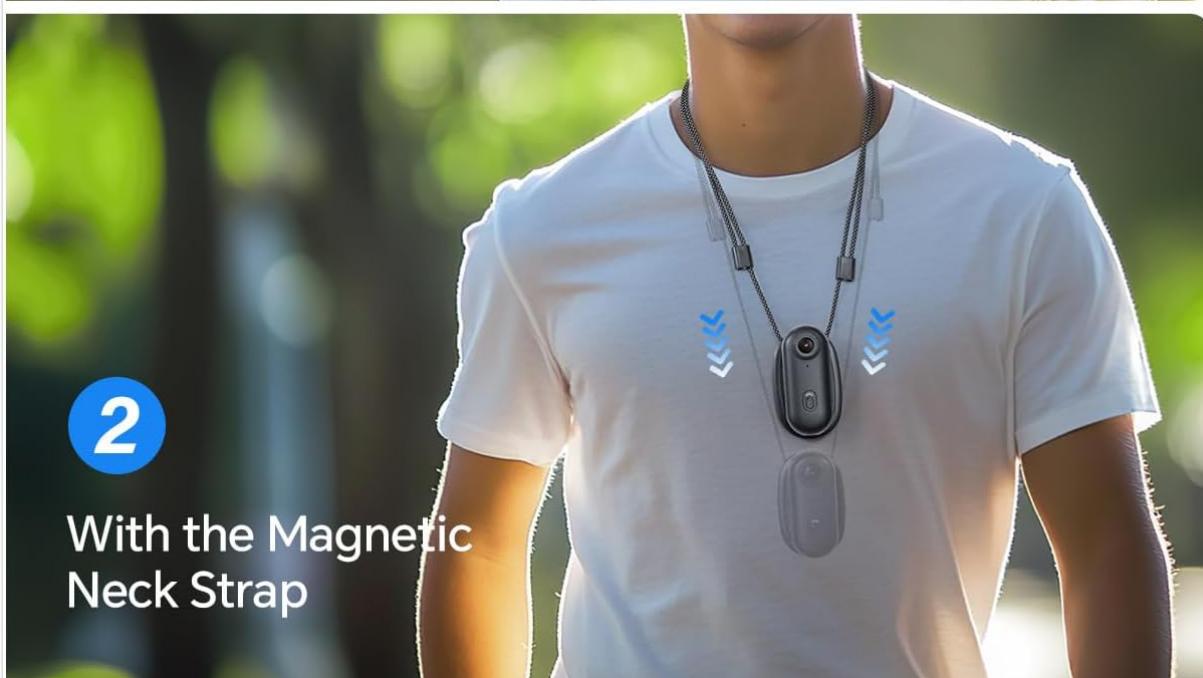


Image: The camera offers versatile wearing options, including a back clip and magnetic neck strap.

SETUP

1. Charging the Camera

Before first use, fully charge your BOBLOV W4 camera. Connect the camera to a USB power source (e.g., computer USB port or wall adapter) using the provided USB-C cable. The indicator light will show charging status and turn off when fully charged.

2. Inserting the Memory Card

The BOBLOV W4 comes with a 64GB Micro SD card installed. Ensure the card is properly seated in the Micro SD card slot. If replacing the card, use a high-speed Micro SD card (Class 10 or higher) up to 256GB for optimal performance.

3. Connecting to Computer

To access recorded files, connect the camera to your computer using the USB cable. The camera is compatible with both Windows and Mac operating systems. You can also use the included card reader for direct access to the Micro SD card.

What will you get?

- * W4 Body Camera
- * Back Clip
- * Magnetic Neck Strap
- * USB Cable
- * User Manual
- * Adapter



Image: The camera can be connected to both Windows and Mac computers for data transfer.

OPERATING INSTRUCTIONS

Power On/Off and Recording

The BOBLOV W4 features a simple one-button operation for ease of use.

- **Power On:** Press and hold the main button until the indicator light turns on.
- **Start Recording:** From standby mode, a short press of the main button will start recording. The button will vibrate and blink blue.
- **Stop Recording:** While recording, a short press of the main button will stop recording.
- **Power Off:** Press and hold the main button until the indicator light turns off.

Low Battery Warning

When the battery life is less than 15 minutes, the low battery warning status will be activated. The red flashing indicator will flash 5 times every 5 minutes, prompting you to charge the device.

Loop Recording

The camera supports loop recording, meaning that when the memory card is full, it will automatically overwrite the oldest video files to continue recording. This ensures continuous capture without manual deletion of old files.



Image: Introduction to the camera's main button and low battery warning.

Official Product Video

Your browser does not support the video tag.

Video: Unboxing the BOBLOV W4 Mini Body Camera and an overview of its features. This video provides a comprehensive look at what to expect from your new device.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** For long-term storage, ensure the battery is charged to about 50%. Recharge every few months to prevent deep discharge.
- Water Resistance:** This camera is *Not Water Resistant*. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; device frozen.	Charge the camera fully. If unresponsive, try resetting the device (refer to the full user manual for reset instructions).
Camera not recording.	Memory card full or corrupted; incorrect operation.	Check memory card capacity and format if necessary. Ensure correct one-click recording procedure is followed.
Shaky video footage.	Lack of image stabilization; excessive movement during recording.	The W4 does not have optical image stabilization. Minimize movement during recording or use in stable environments. Consider mounting options that reduce vibration.
Cannot connect to computer.	Faulty USB cable; driver issue; camera not in data transfer mode.	Try a different USB cable or port. Ensure the camera is powered on and recognized by the computer. Use the included card reader as an alternative.

For more detailed troubleshooting steps, please refer to the complete user manual included in your package or visit the official BOBLOV support website.

SPECIFICATIONS

Feature	Detail
Model Name	W4 Model
Video Capture Resolution	2K
Effective Still Resolution	3.68 MP
Flash Memory Installed Size	64 GB

Feature	Detail
Flash Memory Type	Micro SD
Battery Capacity	800mAh
Continuous Recording Time	90-120 minutes
Item Weight	6.4 ounces (approx. 50g for camera only)
Connectivity Technology	USB
Water Resistance Level	Not Water Resistant
Included Components	W4 body camera, user manual, magnetic neck strap, back clip, USB cable

WARRANTY AND SUPPORT

BOBLOV provides a **24-month product warranty** for BOBLOV supporters. We are committed to ensuring your satisfaction with our products.

For any technical assistance, questions, or concerns, please contact BOBLOV customer support. We offer a quick response within 24 hours and lifetime technical support.

You can find more information and support resources by visiting the official BOBLOV Store:

[Visit the BOBLOV Store on Amazon](#)

© 2024 BOBLOV. All rights reserved.