



Manuals.plus /

› Mcbazel /

› Mcbazel Megacom DuoMon3 Pro Auto Catcher Instruction Manual

Mcbazel MM-010478

Mcbazel Megacom DuoMon3 Pro Auto Catcher Instruction Manual


Model: MM-010478

INTRODUCTION

The Megacom DuoMon3 Pro is a wireless, rechargeable auto catcher designed to enhance your gaming experience by automatically catching creatures and spinning stops. It supports connecting up to two accounts simultaneously and offers customizable notifications via a dedicated application.

PRODUCT OVERVIEW

The DuoMon3 Pro features a compact and lightweight design, making it easy to carry. It includes a power switch, 1P/2P buttons for player selection, a charging port, and speaker holes. Magnets are integrated for secure placement on the wireless charging pad.

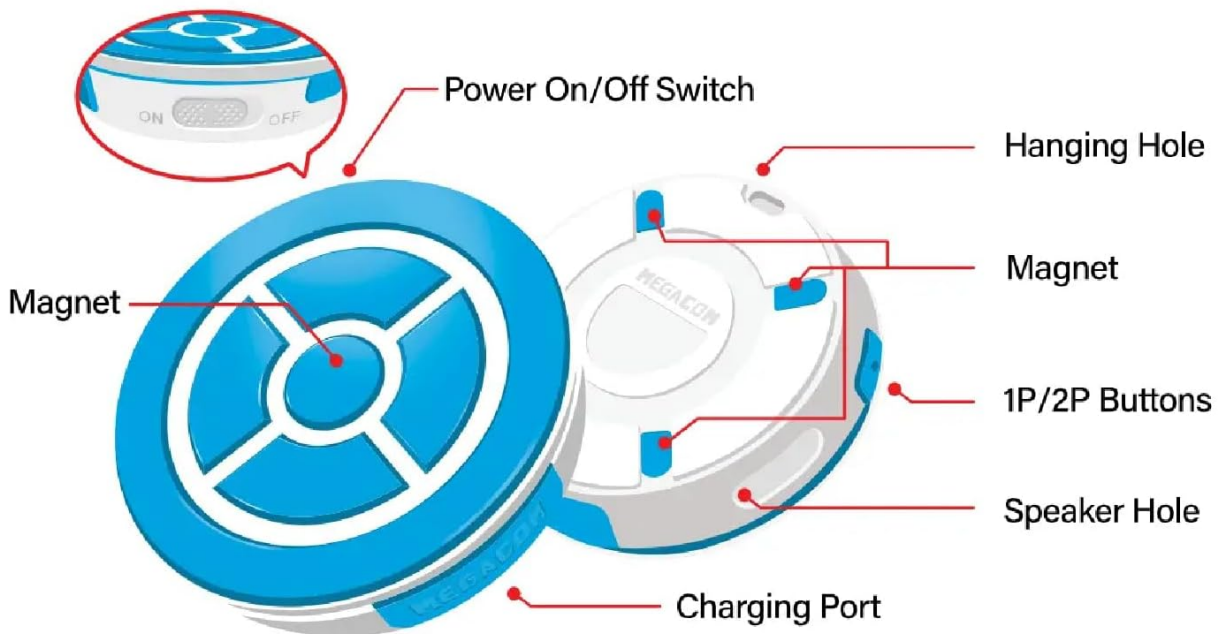

DUOMON 3 PRO

Figure 1: Megacom DuoMon3 Pro device diagram with labeled components.

Figure 2: Package contents of the DuoMon3 Pro, including the device, wireless charging pad, USB-C cable, keychain strap, storage case, and card removal pin.

SETUP


To set up your DuoMon3 Pro, follow these steps:

1. **Charge the Device:** Ensure the DuoMon3 Pro is fully charged before first use. Refer to the 'Charging' section for details.
2. **Power On:** Switch the DuoMon3 Pro to the 'ON' position. The 1P and 2P status lights will flash green, indicating standby mode.
3. **Enable Bluetooth:** On your smartphone, ensure Bluetooth is enabled.
4. **Open Game Application:** Launch the game application (e.g., Pokémon GO) on your smartphone.
5. **Initiate Pairing:** Within the game, navigate to the 'Main Menu' > 'Settings' > 'Connected Devices and Services' > 'Accessory Devices'.

6. **Select Device:** You will see "Pokémon GO Plus" listed. If neither is paired, both status lights will flash green. Select one to connect. After successful connection, the corresponding LED indicator on DuoMon3 Pro will flash purple.
7. **Connect Second Account (Optional):** To connect a second account, repeat step 5 and select the other available device. This supports dual accounts on different devices only.

NOTE: For initial pairing, please DO NOT pair from the Bluetooth list in your phone settings. Always initiate the pairing process from within the game application.

Video 1: Demonstrates the connection process for the DuoMon3 Pro with a smartphone and game application.

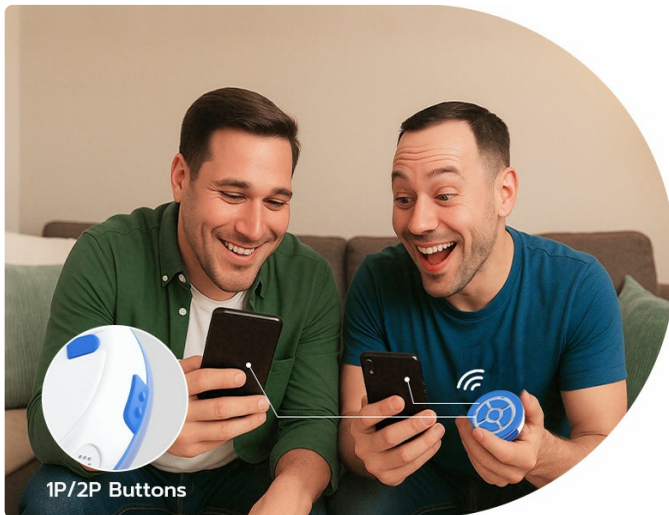

Support 1 to 2 Players

DuoMon3 allows 2 accounts to catch Monster and spin Pokestop automatically, making your Pokedex fuller!



Figure 3: The DuoMon3 Pro supports connecting to two accounts simultaneously for auto catch and auto spin functions.

CHARGING

The DuoMon3 Pro offers dual charging modes: Type-C wired charging and wireless charging.

Wired Charging

Connect the provided USB-C charging cable to the device's charging port and a USB power source (not included). The device's indicator light will show red during charging.

Wireless Charging

Place the DuoMon3 Pro onto the included wireless charging pad. The device's indicator light will turn red to confirm charging. The wireless charging pad itself will light up with RGB lighting and then stay green when ready to use.

Video 2: Demonstrates the wireless charging process for the DuoMon3 Pro.

Video 3: Shows the DuoMon3 Pro being charged wirelessly.



Figure 4: Illustration of the DuoMon3 Pro's Type-C and wireless charging capabilities.

OPERATING INSTRUCTIONS

Once connected, the DuoMon3 Pro will automatically perform the following actions:

- **Auto Catch:** Automatically attempts to catch nearby creatures.
- **Auto Spin:** Automatically spins nearby stops to collect items.
- **Background Operation:** The device supports operation even when your phone is in standby mode or you are using other applications.
- **One-Touch Reconnect:** If disconnected, simply touch the screen within the game application to reconnect.



Figure 5: The DuoMon3 Pro features one-touch reconnection and supports background operation.

APP CONTROL

The DuoMon3 Pro can be customized using the dedicated "MEGACOM Center" application, available for download from the App Store or Google Play Store. This app allows you to personalize notification methods and device settings:

- **Light Settings:** Adjust brightness (0-100%) and choose between Standard or Simple mode.
- **Sound Settings:** Turn sound ON/OFF, adjust volume, and select voice or beep sounds.
- **Vibration Settings:** Turn vibration ON/OFF.

- **Language Settings:** Select English, Chinese, or Japanese.

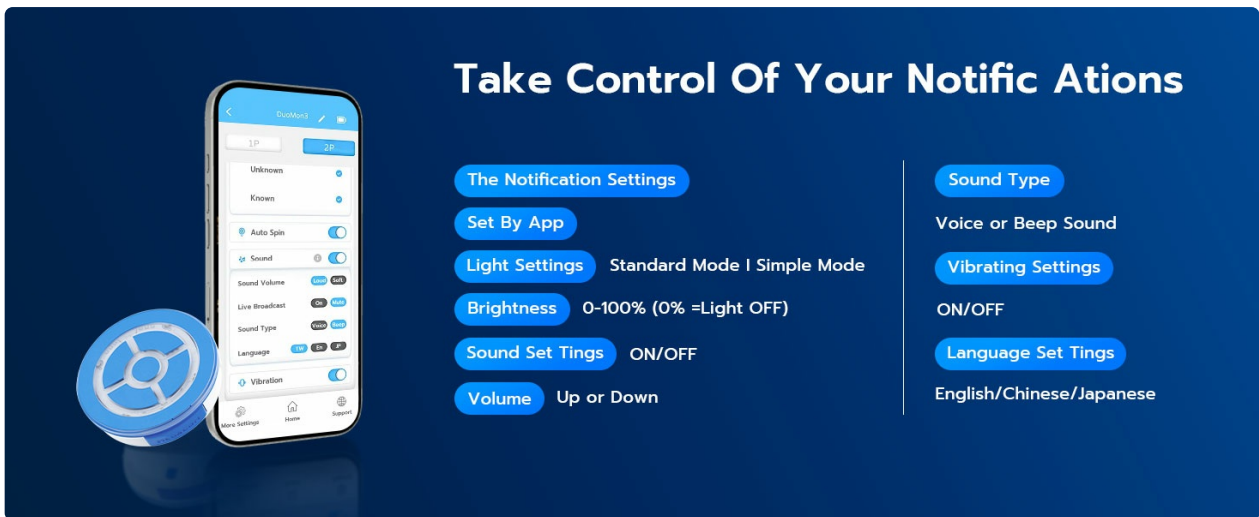 


Figure 6: The MEGACOM Center app provides comprehensive control over DuoMon3 Pro settings.

SPECIFICATIONS

Feature	Detail
Product Dimensions	2.2 x 2.2 x 0.6 inches (5.5 x 5.5 x 1.4 cm)
Item Weight	7 ounces (29g)
Model Number	MM-010478
Batteries	1 Lithium Ion battery (included)
Connectivity	Bluetooth, USB Type C
Special Features	Wireless Charging, App Control, Auto Catch, Auto Spin, One-Touch Reconnect
Wireless Range	Up to 20m / 65ft
Manufacturer	Megacom

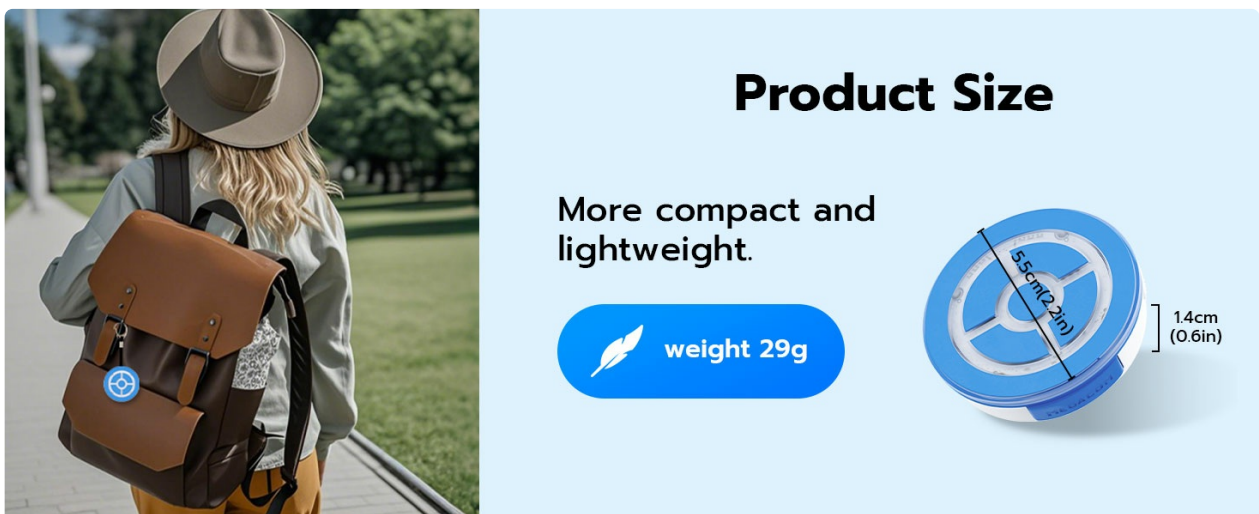


Figure 7: The DuoMon3 Pro is designed to be light and portable, weighing only 29g.

TROUBLESHOOTING

- **Pairing Issues:** If the device fails to pair, ensure you are initiating the pairing process from within the game application's settings, not your phone's Bluetooth settings.
- **No Auto Catch/Spin:** Check the number of red balls in your in-game item bag. The device requires red balls to auto-catch.
- **Disconnection:** The DuoMon3 Pro will automatically disconnect from the game every hour or if the mobile device is idle for 10 minutes or more. If reconnection is not initiated within 3 minutes after disconnection, the device will enter power-saving mode, and the LED will stop flashing. Simply press the ball icon in the top right corner of the map in the game to reconnect.
- **App/OS Compatibility:** Failure to pair or function may occur due to updates in the game application or upgrades to Android and iOS operating systems. This is typically not a product quality problem.



NOTE:

- For initial pairing, please DO NOT pair from the Bluetooth list in the phone settings. Please initiate the [pairing process](#) within the game.
- If the device does not auto catch, please check the no. of [red ball](#) in your item bag.
- The DuoMon3 has fewer menus than the DuoMon to simplify operation. Other settings can be adjusted in the [MEGACOM Center APP](#).
- The APP "MEGACOM Center" can be downloaded from [APP Store](#) or [Google Play Store](#).
- Wireless charging requires a DM3 edition Magnetic Charging Pad ([included](#)).
- According to the game rules, the P APP will automatically disconnect from DuoMon 3 Pro every hour or the mobile is idle for [10 min.](#) or more. If reconnection is not initiated within [3 min.](#) after disconnection, DuoMon 3 Pro will enter power-saving mode, and the LED will stop flashing. Simply press the ball icon in the top right corner of the map to reconnect.
- DuoMon 3 Pro may fail to pair because of the update of APP, or the upgrade of Android and iOS, which is not product quality problem.

Figure 8: Important notes and troubleshooting tips for the DuoMon3 Pro.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Mcbazel website or contact their customer service directly. Keep your purchase receipt for warranty claims.