



Manuals.plus /

› BEST DIRECT /

› MAXILISSE HEAD SHAVER User Manual

BEST DIRECT 644812064128

MAXILISSE HEAD SHAVER User Manual

Model: 644812064128

Brand: BEST DIRECT

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the MAXILISSE HEAD SHAVER. This innovative electric shaver is designed to provide a fast, close, and comfortable shave for your head and face. Featuring advanced floating head technology and a powerful motor, it adapts to the contours of your skin for an efficient grooming experience.

Key features include:

- **Perfect and Fast Shaving:** Offers 5 times the coverage area of a traditional razor for quick, close results.
- **Ergonomic Design:** Ensures optimal control and comfortable grip, minimizing nicks and cuts.
- **Floating Head Technology:** Five independent heads adapt to the curves of your head and face for a smooth shave.
- **Portable and Cordless:** Equipped with a 1200 mAh lithium battery for wireless use and easy portability.
- **Effortless Use:** Designed for maximum comfort and efficiency without the need for creams or lotions.



Figure 1.1: The MAXILISSE HEAD SHAVER, showcasing its five rotary blades and accompanying USB charging cable.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the MAXILISSE HEAD SHAVER. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Keep the appliance dry. Do not immerse the shaver in water or use it in the shower if not explicitly stated as fully waterproof. While the shaver is water-resistant for cleaning, avoid prolonged submersion.
- Do not use the shaver if it is damaged or if the charging cable is frayed.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Only use the provided charging cable. Do not use third-party chargers that do not meet the product's specifications.
- Do not disassemble or attempt to repair the shaver yourself. Contact qualified service personnel for repairs.
- Avoid extreme temperatures. Do not expose the shaver to direct sunlight or store it in very hot or cold environments.
- Ensure your hands are dry when plugging or unplugging the charging cable.

3. PRODUCT COMPONENTS

The MAXILISSE HEAD SHAVER comes with the following main components:

- Shaver Body with integrated battery and motor.
- Detachable Rotary Blade Head (5 independent floating heads).
- Protective Cap for the blade head.
- USB Charging Cable.
- Cleaning Brush.

Maxilisse®

HEAD SHAVER



Figure 3.1: The shaver with its head detached, highlighting its cordless, lightweight, ergonomic design, and ultra-comfort features.



Figure 3.2: Detailed view of the shaver's components, including the detachable head, cleaning brush, and digital display, along with approximate dimensions.

4. SETUP AND INITIAL CHARGE

Before first use, it is recommended to fully charge your MAXILISSE HEAD SHAVERS.

1. Unpack all components from the box.
2. Connect the small end of the USB charging cable to the charging port on the shaver.
3. Connect the large end of the USB cable to a compatible USB power adapter (not included) or a computer USB port.
4. The digital display on the shaver will show the charging progress. A full charge takes approximately 2 hours.
5. Once fully charged, the display will indicate 100%. Disconnect the shaver from the charging cable.

Maxilisse[®]

HEAD SHAVER



Figure 4.1: The MAXILISSE HEAD SHAVER with its protective cap removed, next to the USB charging cable, ready for initial setup.

5. OPERATING INSTRUCTIONS

The MAXILISSE HEAD SHAVER is designed for both dry and wet shaving. For best results, ensure your skin is clean.

5.1 Powering On/Off

- To turn on the shaver, press the power button located on the side or front of the device. The digital display will illuminate.
- To turn off the shaver, press the power button again.

5.2 Shaving Technique

For optimal results, use the following technique:

1. Hold the shaver firmly in your hand, ensuring a comfortable grip.
2. Gently press the shaver head against your skin. Do not apply excessive pressure.
3. Move the shaver in small, circular motions over the area you wish to shave. The floating heads will adapt to your contours.
4. For a closer shave, you may stretch the skin slightly with your free hand.
5. Rinse the shaver head under running water during shaving if using wet, or tap out hair clippings frequently if dry shaving.



Figure 5.1: Demonstrating the ergonomic use of the MAXILISSE HEAD SHAVER for both head and facial shaving.



Figure 5.2: Illustrates how the shaver's flexible heads perfectly adapt to the contours of the head and face for an effective shave.

5.3 Dual Mode Operation

The shaver may feature a dual mode for different shaving intensities (e.g., soft or hard). Refer to the digital display or specific controls on your device to switch between modes if available. This allows for customization based on hair density and skin sensitivity.



Figure 5.3: Shows the potential for a dual shaving mode and reiterates charging time and battery life (150 minutes at low speed, 120 minutes at high speed).

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your shaver.

6.1 Daily Cleaning

1. After each use, turn off the shaver.
2. Gently detach the rotary blade head from the shaver body. The head is magnetically attached for easy removal.
3. Tap out any loose hair clippings from the blade head and the shaver body.
4. Rinse the blade head thoroughly under running water. You can also rinse the shaver body if it is water-resistant, ensuring no water enters the charging port.
5. Use the provided cleaning brush to remove stubborn hair particles from the blades and internal components.
6. Allow all parts to air dry completely before reattaching the blade head and storing the shaver.



Figure 6.1: Illustrates the cleaning process using the provided brush and shows the shaver's digital display.



Figure 6.2: Highlights the magnetic attachment of the shaver head for easy removal and cleaning, and its water-resistant design.

6.2 Blade Replacement

The blades are designed for long-lasting performance. However, if you notice a decrease in shaving efficiency or comfort, it may be time to replace the blade head. Replacement heads can be purchased from authorized retailers or the manufacturer's website. Follow the instructions provided with the replacement head for proper installation.

7. TROUBLESHOOTING

If you encounter any issues with your MAXILISSE HEAD SHAVERS, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully (approx. 2 hours).
Shaver does not provide a close shave.	Blades are dull or clogged with hair.	Clean the blade head thoroughly. Consider replacing the blade head if cleaning does not improve performance.
Shaver pulls hair or causes irritation.	Blades are dull, or technique needs adjustment.	Ensure the shaver is fully charged. Clean the blades. Try shaving against the grain gently. If irritation persists, ensure skin is clean and dry or use a pre-shave lotion. Consider blade replacement.
Charging indicator not working.	Faulty cable or power source.	Try a different USB port or power adapter. Ensure the charging cable is securely connected.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	BEST DIRECT
Model Number	644812064128
Power Source	Battery Powered
Battery Type	1200 mAh Rechargeable Lithium Battery
Charging Time	Approximately 2 hours
Operating Time	Approx. 150 minutes (low speed), 120 minutes (high speed) per charge
Number of Blades	5 (Rotary Heads)
Special Features	Rechargeable, Cordless, Floating Heads, Water-resistant for cleaning
Recommended Use	Scalp, Face
Color	Black
UPC	644812064128

9. WARRANTY AND SUPPORT

The MAXILISSE HEAD SHAVER is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period.

This warranty does not cover damage caused by misuse, neglect, unauthorized modification, or normal wear and tear.

Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact BEST DIRECT customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.

Please have your model number (644812064128) and proof of purchase ready when contacting support.