

- Manuals.plus /
- › ELEMARA /
 - › ELEMARA 24V 9AH Ride-On Tractor with Detachable Trailer Instruction Manual (Model BDM-0925)

ELEMARA BDM-0925

ELEMARA 24V 9AH Ride-On Tractor with Detachable Trailer
Instruction Manual

Brand: ELEMARA | Model: BDM-0925

IMPORTANT SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not suitable for children under 37 months. The product contains small parts. Keep children away when assembling.

Always ensure the 3-point seat belt is securely fastened before operation. Adult supervision is required at all times.

PRODUCT OVERVIEW

The ELEMARA 24V 9AH Ride-On Tractor is designed for children aged 3-8 years, supporting a maximum weight of 88 lbs. It features powerful 400W motors, all-terrain capability, and a detachable trailer for versatile play.



Image: The ELEMARA 24V 9AH Ride-On Tractor in pink, featuring large wheels and a detachable trailer.

Key Features:

- **Powerful Performance:** 24V 9AH battery and 400W motors for speeds between 2.5 and 4.5 mph. Up to 180 minutes of playtime at 2.5 mph.
- **Multi-purpose Detachable Trailer:** Easily attach and detach the trailer for transporting toys, leaves, or other items.
- **Enhanced Safety:** Equipped with a soft start function and a 3-point seat belt for a secure riding experience on various terrains.
- **Entertainment Features:** Integrated Bluetooth and music functions for an enjoyable ride.



Image: Detailed view of the tractor's features, including the 3-point seat belt, a functional shovel, a trinket holder, the gas pedal, and the steering wheel.



Image: Illustration of the 2-in-1 detachable trailer, highlighting its one-click installation and removal mechanism.



Image: Examples demonstrating the versatility of the trailer, showing it used to haul toys, sand or leaves, a small pet, and vegetables.

SETUP AND ASSEMBLY

Follow these steps to assemble your ELEMARA Ride-On Tractor. Refer to the videos for visual guidance.

Assembly Steps:

1. **Unboxing:** Carefully remove all components from the packaging. Verify all parts are present against the packing list.
2. **Motor and Axle Installation:**
 - Connect the motor wires.
 - Insert the rear axle through the motor housing.
 - Attach the rear wheels, securing them with washers and nuts. Cover with hubcaps.
3. **Front Wheel Installation:**
 - Insert the front axle.
 - Attach the front wheels, securing them with washers and nuts. Cover with hubcaps.
4. **Trailer Assembly:**
 - Assemble the trailer base and attach the wheels.
 - Secure the side panels to the trailer base.
5. **Battery Connection:** Connect the battery terminals as shown in the video.
6. **Seat and Steering Wheel:**
 - Install the seat, ensuring the seat belt is accessible.
 - Attach the steering wheel to the steering column.
7. **Decorative Elements:** Attach the exhaust pipe and any other decorative parts.
8. **Trailer Attachment:** Connect the assembled trailer to the tractor's hitch.

Your browser does not support the video tag.

Video: Installation Guide for ELEMARA Ride-On Tractor. This video demonstrates the step-by-step assembly process for the tractor and its trailer, including wheel attachment, wiring connections, and securing the seat and steering wheel.

Your browser does not support the video tag.

Video: 24V Tractor Installation Video - BBH030. This video provides a detailed installation guide for the 24V ride-on tractor, covering all major assembly points and electrical connections.



Image: An overview of replaceable parts for the tractor, such as switches, charger, motors, and the battery, indicating components that might need attention during assembly or maintenance.

OPERATING INSTRUCTIONS

Starting the Tractor:

- Press the red power button to turn on the tractor. The tractor will make a realistic starting sound.
- Select desired speed (High/Low) using the gear shifter.
- Press the foot pedal to move forward.
- The steering wheel includes a horn function (requires batteries).

Remote Control Operation:

The tractor can be operated via the included remote control for parental supervision. Ensure the remote is paired with the tractor according to the remote's instructions.

- Use the directional buttons on the remote to control forward, backward, left, and right movements.
- The remote typically offers multiple speed settings for added safety.

Music and Entertainment:

- Use the built-in music player or connect via Bluetooth to play audio.
- Adjust volume using the dedicated controls on the dashboard.



Image: A child happily driving the ELEMARA Ride-On Tractor with its detachable trailer across a grassy field, demonstrating typical use.

MAINTENANCE

Charging the Battery:

- Locate the charging port, typically under the hood or seat.
- Connect the charger to the port and then to a power outlet.
- A full charge can take several hours. Avoid overcharging.
- *Note: Some models may require removing the hood to access the charging port.*

General Care:

- Wipe down the tractor with a damp cloth to clean. Avoid using harsh chemicals.
- Store the tractor in a dry, covered area when not in use to protect it from weather elements.

TROUBLESHOOTING

If the tractor is not operating correctly, check the following:

- **No Power:** Ensure the battery is fully charged and all electrical connections are secure. Check the power cable connection.
- **Tractor Not Moving:** Verify the gear shifter is in the correct position (forward/reverse) and the foot pedal is fully pressed.
- **Remote Control Issues:** Check the batteries in the remote control and ensure it is properly paired with the tractor.
- **Unusual Noises:** Inspect wheels and axles for any obstructions or loose parts.

For persistent issues, please contact ELEMARA customer support.

SPECIFICATIONS

Brand	ELEMARA
Model Number	BDM-0925
Product Dimensions	61 x 26.2 x 24.4 inches
Item Weight	38 pounds
Battery	24V 9AH
Motor Power	400W
Speed	Max 4.5 mph (2.5 mph low speed)
Recommended Age	3 - 8 years
Maximum Weight Capacity	88 lbs
Features	Detachable Trailer, 3-Point Seat Belt, Soft Start, Bluetooth, Music

WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical support, please contact ELEMARA customer service directly. Refer to your purchase documentation for specific warranty terms and contact details.
You can also visit the official ELEMARA store for more information: [ELEMARA Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

The ELEMARA 24V 9AH Ride on Tractor Toy will go backward but will not go forward. How do I resolve this problem?

If your ELEMARA 24V 9AH Ride-On Tractor (Model BDM-0925) moves in reverse but not forward, the issue is likely related to the gear shifter, the foot pedal, or the wiring connections. Please follow these...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0DBVQQ9QS>

More documents and user manuals: <https://manuals.plus/>