

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Simplicity Vacuums](#) /

› Simplicity Freedom Cordless Bag Vacuum Cleaner S10CV.10 User Manual

Simplicity Vacuums S10CV.10

Simplicity Freedom Cordless Bag Vacuum Cleaner S10CV.10 User Manual

Model: S10CV.10

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Simplicity Freedom Cordless Bag Vacuum Cleaner, model S10CV.10. Please read this manual thoroughly before first use and retain it for future reference.

WHAT'S INCLUDED

Verify that all components are present in the packaging:

- Simplicity Freedom Cordless Upright Vacuum Cleaner
- One SLHC-6 Replacement Bag
- 44-Volt Lithium-Ion Battery
- Charging Cord

What's Included?



Figure 1: Included Components. This image displays the main vacuum unit, the charging cord, a single SLHC-6 replacement HEPA bag, and the removable 44-volt lithium-ion battery.

SETUP

1. Battery Charging

Before initial use, fully charge the 44-volt lithium-ion battery. The charging time is approximately 2.5 hours. A full charge provides up to 50 minutes of runtime.

1. Locate the charge point on the vacuum cleaner.

2. Connect the charging cord to the charge point and plug it into a standard electrical outlet.
3. The charging indicator lights will illuminate to show charging progress.



Figure 2: Battery Charging Indicator. This image shows the battery charging port and indicator lights, which display the current charge level and charging status.

2. Bag Installation

The vacuum uses a certified HEPA filter bag with charcoal for filtration. Ensure a bag is correctly installed before operation.

1. Open the bag compartment.
2. Insert the SLHC-6 replacement bag, ensuring it is securely seated.
3. Close the bag compartment.

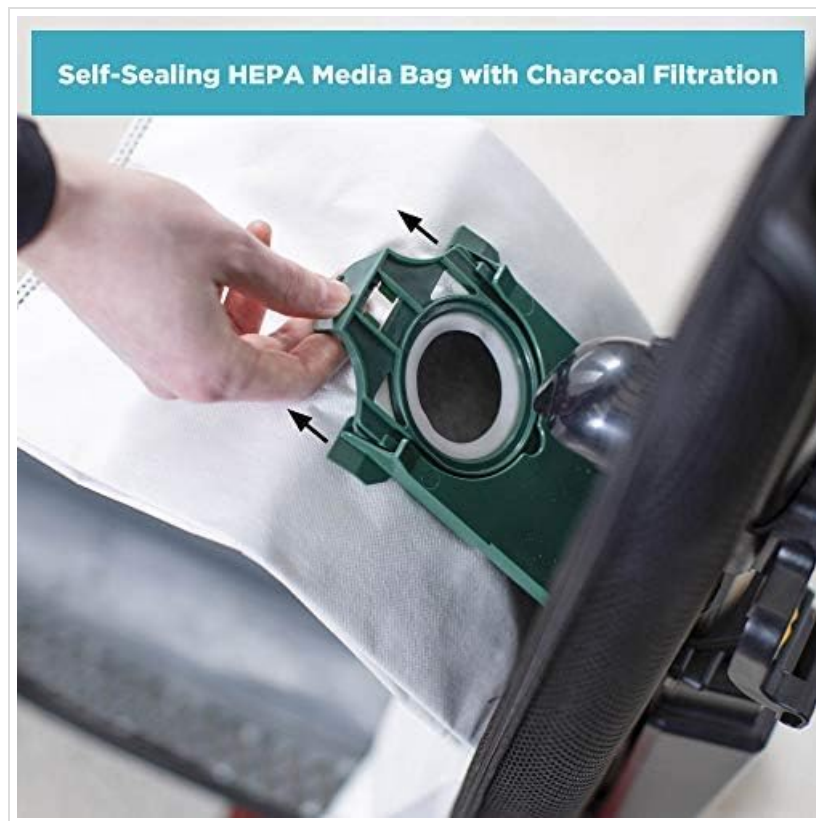


Figure 3: HEPA Bag Installation. This image illustrates the process of inserting the self-sealing HEPA media bag into the vacuum cleaner, highlighting the secure fitment.

OPERATING INSTRUCTIONS

1. Power On/Off

To power on the vacuum, press the power button located on the handle. Press it again to turn off the unit.

2. Floor Type Adjustment

The Simplicity Freedom vacuum features an automatic brushroll height adjustment system. It transitions seamlessly between various floor types, including:

- Hardwood Floors
- Tile
- Laminate
- Rugs
- Carpet



Figure 4: Multi-Surface Auto Adjustment. This image shows the vacuum's base on a hard floor, illustrating its capability to automatically adjust for different floor types like rugs, hardwood, tile, and carpet.

3. Maneuverability

The lightweight design and cordless operation allow for easy navigation around furniture and obstacles. The low-profile head can reach under most furniture.



Figure 5: Cleaning Under Furniture. This image demonstrates the vacuum's ability to easily clean under low-clearance furniture due to its design.

4. Video Demonstration

Watch this video for a visual guide on the Simplicity Freedom Cordless Upright Vacuum's features and operation.

Your browser does not support the video tag.

Video 1: Simplicity Freedom Vacuum Overview. This video provides a comprehensive look at the Simplicity Freedom Cordless Upright Vacuum, showcasing its key features such as cordless operation, HEPA filtration, and automatic floor adjustment.

MAINTENANCE

1. Replacing the HEPA Bag

The vacuum uses a self-sealing HEPA media bag with charcoal filtration. Replace the bag when it is full or when suction performance decreases.

1. Ensure the vacuum is powered off and the battery is removed.
2. Open the bag compartment.
3. Carefully remove the full bag, utilizing its self-sealing feature to contain dust.
4. Insert a new SLHC-6 replacement bag, ensuring it clicks into place.
5. Close the bag compartment securely.

2. Brushroll Cleaning

Periodically inspect the brushroll for tangled hair or debris. Remove any obstructions to maintain optimal cleaning performance.

1. Ensure the vacuum is powered off and the battery is removed.
2. Turn the vacuum over to access the brushroll.
3. Use scissors or a brush to carefully cut and remove any tangled hair or fibers from the brushroll.
4. Ensure the brushroll spins freely after cleaning.



Figure 6: Brushroll and Underside Components. This image provides a view of the vacuum's underside, highlighting the brushroll and other components that may require periodic inspection and cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery not charged or not properly inserted.	Ensure battery is fully charged and correctly seated in the compartment.
Loss of suction.	Full dust bag; clogged brushroll or hose.	Replace the dust bag. Check and clear any obstructions from the brushroll or hose.
Brushroll not spinning.	Tangled debris in brushroll; brushroll jammed.	Turn off vacuum, remove battery, and clear any debris from the brushroll.
Short runtime.	Battery not fully charged; aging battery.	Ensure battery is fully charged. If battery life significantly degrades, consider replacing the battery.

SPECIFICATIONS

Feature	Detail
Model Number	S10CV.10
Brand	Simplicity Vacuums
Power Source	Battery Powered (Cordless)
Battery Type	44-Volt Lithium-Ion
Max Runtime	Up to 50 minutes
Charging Time	Approximately 2.5 hours
Filter Type	Certified HEPA Filter Bag with Charcoal
Weight	11 pounds
Product Dimensions (L x W x H)	13.5" x 10.5" x 44.5"
Surface Recommendation	Hard Floors, Rugs, Carpet
Special Features	Auto-adjusts height between carpet and hard floors, Portable, Bagged

WARRANTY INFORMATION

The Simplicity Freedom Cordless Bag Vacuum Cleaner, model S10CV.10, is covered by a **one-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal household use. For full warranty terms and conditions, please refer to the warranty card included with your product or visit the official Simplicity Vacuums website.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or warranty claims, please contact Simplicity Vacuums customer support. You can find contact information on the official Simplicity Vacuums website or through your retailer.

Online Resources:

- Visit the [Simplicity Vacuums Store on Amazon](#) for product information and accessories.
- Refer to the official Simplicity Vacuums website for detailed support and FAQs.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DBVYNN9S>

More documents and user manuals: <https://manuals.plus/>