

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [YIGLLO](#) /

> [YIGLLO DC101 4K Digital Camera User Manual](#)

YIGLLO DC101

YIGLLO DC101 4K Digital Camera User Manual

Model: DC101 | Brand: YIGLLO

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your YIGLLO DC101 4K Digital Camera. Please read this manual thoroughly before operating the camera to ensure optimal performance and longevity. Keep this manual for future reference.

2. WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- 1 x YIGLLO DC101 4K Digital Camera
- 1 x UV Lens Film
- 1 x 32GB SD Card
- 2 x Rechargeable Batteries
- 1 x Battery Charging Stand
- 1 x Lens Cap
- 1 x Lens/LCD Screen Cleaning Cloth
- 1 x USB Cable
- 1 x Power Adapter
- 1 x Camera Wrist Strap
- 1 x Camera Pouch
- 1 x User Manual (this document)



Image: All components included with the YIGLLO DC101 4K Digital Camera.

3. CAMERA OVERVIEW

The YIGLLO DC101 features a compact design with essential controls for photography and video recording. Key components include the lens, built-in flash, 3-inch 180° flip LCD screen, power button, shutter button, mode button, and menu button.

4K UHD Video Camera

Higher images quality and clearer videos



Image: The YIGLLO DC101 camera with its versatile flip screen.

4. SETUP

4.1. Battery Installation and Charging

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the rechargeable battery, ensuring the correct orientation as indicated inside the compartment.
3. Close the battery compartment cover securely.
4. To charge, connect the camera directly via the USB cable to a power adapter, or use the included battery charging stand to charge a spare battery. The charging indicator will show the charging status.



Image: Battery charging methods for the YIGLLO DC101 camera.

4.2. SD Card Installation

1. Locate the SD card slot on the side of the camera.
2. Insert the included 32GB SD card with the metal contacts facing the front of the camera until it clicks into place.
3. To remove, gently press the SD card until it pops out.

4.3. Powering On/Off

Press and hold the power button (usually located on the top of the camera) for approximately 2 seconds to turn the camera on or off.

5. OPERATING THE CAMERA

5.1. Basic Photography

1. Ensure the camera is in photo mode (use the 'Mode' button to cycle through options).
2. Point the camera at your subject.
3. Press the shutter button halfway down to activate auto-focus. A green box will appear on the screen indicating focus.
4. Press the shutter button fully down to capture the image. The camera supports up to 48MP resolution.

2024 Newest 4K AF Camera & 48MP

Press the shutter button halfway to focus on subjects before pressing it all the way down to shoot



Image: Auto-focus and resolution settings for photography.

5.2. Video Recording

1. Press the 'Mode' button until 'Video' mode is selected.
2. Press the shutter button to start recording. Press it again to stop.
3. The camera records in 4K Ultra HD quality.



Image: 4K UHD video quality demonstration.

5.3. Using the 180° Flip Screen

The 3-inch LCD screen can be flipped 180 degrees, allowing you to view yourself while recording or taking photos. This is particularly useful for self-portraits and vlogging.

5.4. Digital Zoom

The camera supports 16x digital zoom. While in photo or video mode, use the W/T buttons (Wide/Telephoto) to zoom in or out on your subject. Note that digital zoom crops and enlarges the image, which may reduce image quality at higher zoom levels.

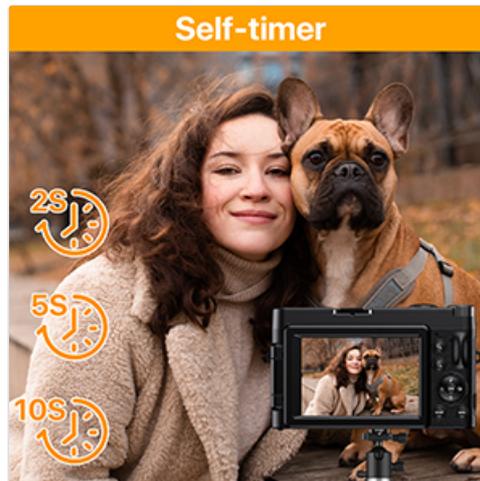


Image: Digital zoom and filter options.

5.5. Flash Usage

The built-in flash can be activated for low-light conditions. Access flash settings through the menu to select modes such as Auto, On/Fill, Off, or Slow Sync.

5.6. Special Features

The YIGLLO DC101 includes several features to enhance your photography and videography:

- **Anti-Shake:** Digital image stabilization helps reduce blur from camera movement.
- **Continuous Shooting:** Capture a rapid sequence of images.
- **Time-Lapse Recording:** Record events over a period of time and play them back quickly.
- **Slow Motion:** Capture video at a higher frame rate for slow-motion playback.
- **Self-Timer:** Set a delay (e.g., 2s, 5s, 10s) before taking a photo.
- **Face Detect & Smile Capture:** Automatically detects faces and can trigger the shutter when a smile is detected.
- **Webcam Function:** Connect the camera to a computer via USB and select 'Webcam' mode for use in video calls or live streaming.
- **Pause Function:** Pause and resume video recording within a single file.

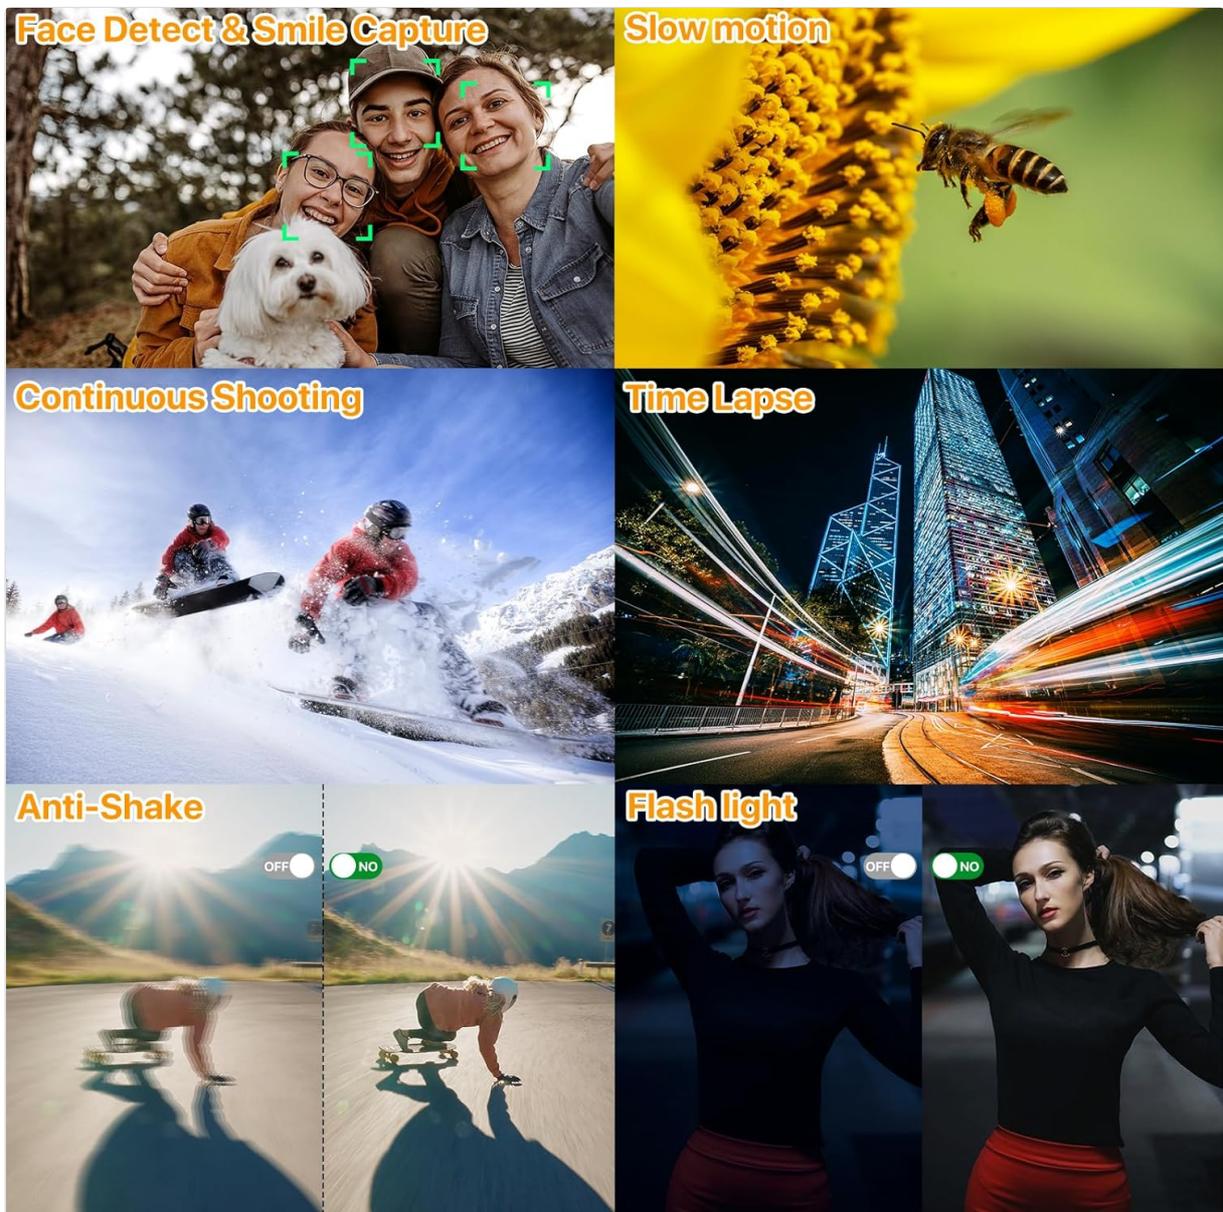


Image: Examples of special features like slow motion, time-lapse, and anti-shake.

5.7. Connecting to a Computer

To transfer photos and videos, connect the camera to your computer using the provided USB cable. The camera will appear as a removable drive, allowing you to copy files. Alternatively, you can use the SD card directly with a card reader.

6. MAINTENANCE

6.1. Cleaning

- Use the included cleaning cloth to gently wipe the lens and LCD screen.
- For stubborn smudges, use a specialized lens cleaning solution applied to the cloth, not directly to the lens.
- Do not use abrasive cleaners or solvents on any part of the camera.

6.2. Storage

- When not in use, store the camera in the provided pouch to protect it from dust and scratches.
- Remove batteries if the camera will not be used for an extended period.

- Store in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

- **Camera does not power on:** Ensure batteries are correctly inserted and fully charged. Try using a freshly charged spare battery.
- **Images are blurry:** Ensure auto-focus is engaged by pressing the shutter button halfway. Check for smudges on the lens and clean if necessary. Ensure sufficient lighting.
- **Video sound is over modulated:** Access the camera's settings menu to adjust audio input levels. If the issue persists, contact customer support.
- **SD card error:** Ensure the SD card is inserted correctly. Try reformatting the SD card (this will erase all data, so back up first). If the issue persists, try a different compatible SD card.
- **Camera freezes:** Remove and reinsert the battery to reset the camera.

For further assistance, please contact YIGLLO customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	DC101
Effective Still Resolution	48 MP
Video Resolution	2160p (4K UHD)
Digital Zoom	16x
Screen Size	3 Inches (180° Flip LCD)
Auto Focus Technology	Contrast Detection Autofocus (CDAF)
Image Stabilization	Digital
Photo Sensor Technology	CMOS
Supported File Format	JPG (images), AVI (videos)
Memory Storage	Micro SD (up to 32GB included)
Connectivity	USB, Webcam Function
Battery Type	Rechargeable Lithium-ion

Feature	Specification
Compatible Mountings	Standard 1/4 Inch Tripod
Special Features	Anti-shake, Pause Function, Continuous Shooting, Time-lapse, Slow Motion, Motion Detection, Self-timer, Webcam Function, Built-in Flash

9. WARRANTY AND SUPPORT

The YIGLLO DC101 Digital Camera comes with a 1-year manufacturer's warranty. For any questions, technical assistance, or troubleshooting not covered in this manual, please contact our dedicated 24/7 customer support team. Refer to the product packaging or the official YIGLLO website for contact information.