

XTREME Xtreme Pro

XTREME Pro Cordless Hair Clipper

INSTRUCTION MANUAL

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Safety Information](#)

1. Setup

1.1 Package Contents

Verify that all items are present in the package:

- XTREME Pro Cordless Hair Clipper
- 6 Guide Combs (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm)
- Charging Cable
- Cleaning Brush
- Blade Oil
- Metal Travel Case

1.2 Initial Charging

Before first use, fully charge the clipper. Connect the charging cable to the clipper and a suitable power source. The LCD display will indicate charging status.



The clipper requires approximately 3 hours for a full charge, providing up to 120 minutes of cordless operation.

1.3 Attaching Guide Combs

Select the desired guide comb for your preferred hair length. Align the comb with the clipper blade and push it firmly until it snaps securely into place. To remove, gently pull the comb away from the blade.

6 GUIDE COMBS



The kit includes six guide combs for various cutting lengths: 1.5mm, 3mm, 4.5mm, 6mm, 9mm, and 12mm.

2. Operation

2.1 Powering On/Off

Locate the On/Off switch on the side of the clipper. Slide the switch upwards to turn the clipper on and downwards to turn it off. The LCD display will illuminate when the clipper is active, showing the remaining battery life.



The LCD display provides real-time battery life and maintenance reminders.

2.2 Adjusting Taper Lever

The adjustable taper lever is located on the side of the clipper. Move the lever up or down to adjust the cutting length without changing guide combs. The taper offers four positions, ranging from 0.5mm to 3mm, allowing for precise blending and fading.

2.3 Hair Cutting Techniques

For best results, ensure hair is clean and dry. Start with a longer guide comb and gradually switch to shorter ones if desired. Hold the clipper against the hair, moving it against the direction of hair growth. Use smooth, overlapping strokes for an even cut.



Always ensure the clipper blades are clean and oiled for optimal performance during use.

3. Maintenance

3.1 Cleaning the Blades

After each use, turn off and unplug the clipper. Use the provided cleaning brush to remove loose hairs from the ceramic and stainless-steel blades. For a more thorough cleaning, detach the blade assembly (refer to specific instructions if provided in a separate guide) and rinse under running water, ensuring the clipper body remains dry. Allow blades to air dry completely before reattaching.



SHARP & PRECISE CERAMIC STAINLESS STEEL BLADES

The ceramic and stainless-steel blades are designed for precision and durability, requiring regular cleaning for optimal performance.

3.2 Lubrication

After cleaning and drying, apply 1-2 drops of the included blade oil across the top of the blades. Turn the clipper on for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and reduces friction.

3.3 Storage

Store the clipper in its metal travel case in a cool, dry place, away from direct sunlight and moisture. Ensure the clipper is turned off before storing.

4. Troubleshooting

Problem	Possible Cause	Solution
Clipper does not turn on	Low battery; Power switch off	Charge the clipper fully; Ensure switch is in the 'On' position

Problem	Possible Cause	Solution
Poor cutting performance	Blades are dull or dirty; Insufficient lubrication; Hair is wet or tangled	Clean and oil blades; Ensure hair is dry and detangled. Consider blade replacement if dullness persists.
Clipper pulls hair	Blades are dirty or misaligned; Low battery	Clean and oil blades; Check blade alignment; Charge the clipper.
Excessive noise or vibration	Blades require lubrication; Debris in motor area	Apply blade oil; Clean clipper thoroughly. If issue persists, contact customer support.

5. Specifications

Model Name: Xtreme Pro

Blades: Ceramic and Stainless-Steel

Adjustable Taper: 0.5mm - 3mm (4 positions)

Guide Combs: 6 (1.5mm, 3mm, 4.5mm, 6mm, 9mm, 12mm)

Battery Type: Lithium Ion

Run Time: Up to 120 minutes

Charging Time: Approximately 120 minutes (2 hours)

Display: LCD (Battery life, Maintenance reminders)

Power Source: Cordless, Rechargeable

Package Dimensions: 10.5 x 6 x 3.25 inches

Weight: 2.8 Pounds

6. Safety Information

- Always unplug the clipper before cleaning or changing blades.
- Do not use near water or immerse the clipper in water.
- Avoid contact with eyes.
- Keep out of reach of children.
- Dispose of used blades responsibly according to local regulations.
- Do not operate the clipper if it has a damaged cord or plug, or if it is not working properly.
- Use only the charging cable provided by the manufacturer.

7. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official XTREME website. Keep your proof of purchase for warranty claims.