



[Manuals.plus](#) /

> [Bluey](#) /

> Bluey Hide and Seek Figure Instruction Manual - Model 18983

## Bluey 18983

# Bluey Hide and Seek Figure Instruction Manual - Model 18983

Official User Guide for the Bluey Interactive Musical Figure

## INTRODUCTION

---

Welcome to the world of interactive play with your new Bluey Hide and Seek Figure! This electronic toy is designed to bring the fun of hide and seek to life, encouraging active movement, listening skills, and imaginative play for children aged 3 and above. Your Bluey figure is fully articulated, standing 6 inches tall, with movable arms and legs, making it perfect for small hands and dynamic play.



Image: The Bluey Hide and Seek Figure, a blue dog character with black and yellow markings, standing upright.

## SETUP

### Battery Installation

Your Bluey Hide and Seek Figure requires 2 AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment on the back of the figure.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 2 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.

### Power On/Off

To turn the figure ON, slide the switch on the back of Bluey to the "ON" position. To turn it OFF, slide the switch to the "OFF" position.

# Bluey



**ENJOY A REAL-LIFE GAME OF  
HIDE AND SEEK WITH BLUEY**

Image: The back of the Bluey figure, highlighting the battery compartment and the ON/OFF switch.

## OPERATING INSTRUCTIONS

### Playing Hide and Seek

1. Ensure Bluey is powered ON.
2. One player (the "hider") takes Bluey and presses her nose. Bluey will say, "Let's play Hide & Seek!"
3. The hider then finds a suitable hiding spot for Bluey.
4. After a short pause, Bluey will announce, "Okay, let's go!" This signals the other player(s) (the "seekers") to begin searching.
5. While hidden, Bluey will periodically make sounds and give verbal clues (e.g., giggles, phrases) to help the seekers locate her.
6. The seekers must listen carefully to Bluey's sounds to determine her location.
7. If a seeker finds Bluey before the timer runs out, they win the round!



Image: A child peeking around a corner, playing hide and seek with the Bluey figure.

## Dance Mode

Once Bluey is found, press her nose again to activate Dance Mode. Bluey will play her catchy theme song, inviting everyone to dance and celebrate the successful find!



Image: Three children happily dancing, one holding the Bluey figure above their head.

## MAINTENANCE

### Cleaning

To clean your Bluey figure, gently wipe it with a damp cloth. Do not immerse the toy in water or use harsh cleaning agents, as this may damage the electronic components.

## Storage

Store the figure in a cool, dry place away from direct sunlight when not in use. If storing for an extended period, it is recommended to remove the batteries to prevent leakage.

## TROUBLESHOOTING

- **No Sound/Intermittent Sound:** Check if the batteries are correctly installed and not depleted. Replace with fresh AAA batteries if necessary. Ensure the ON/OFF switch is in the "ON" position.
- **Figure Not Responding:** Make sure the ON/OFF switch is in the "ON" position. If the issue persists, try removing and reinserting the batteries to reset the device.
- **Difficulty Finding Bluey:** Bluey provides verbal clues and giggles. Encourage seekers to listen carefully and move towards the sounds.

## SPECIFICATIONS

<b>Brand:</b>	Bluey
<b>Model Number:</b>	18983
<b>UPC:</b>	630996189832
<b>Age Range:</b>	3+ Years
<b>Dimensions:</b>	2.75 x 3.53 x 6 inches (15 cm tall)
<b>Item Weight:</b>	110 Grams
<b>Power Source:</b>	2 AAA Batteries (included)
<b>Material Type:</b>	Acrylonitrile-Butadiene-Styrene Copolymer, Batteries, Electronics, Metal, Paper, TPR
<b>Included Components:</b>	1 Electronic Bluey Figure, 1 Instruction Manual, 2 AAA Batteries

## SAFETY INFORMATION

**WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.**

Always supervise young children during play. Ensure all battery compartment screws are securely fastened to prevent access to small parts.

## WARRANTY AND SUPPORT

For product support, warranty information, or any inquiries, please contact Moose Toys customer service. Refer to the packaging for specific contact details or visit the official Bluey website for more information. You can also visit the [Bluey Store on Amazon](#) for additional products and information.

